C329 (GY)

14A699

Heated seat module, passenger side front

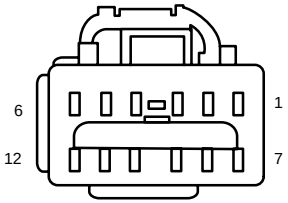

F12205

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	1061 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
4	1060 (BK/LB)	Seat cushion heater, passenger side, Sensor, feed
5	1003 (GY/YE)	Voltage in Run (overload protected)
6	1064 (YE/LB)	Seat cushion heater, passenger side, heater, feed
7	1067 (VT/LB)	Seat back heater, passenger side, heater, return
8	1020 (DG/VT)	Seat heater switch, driver side, to, Heated seat module, driver side front, Enable
9	–	not used
10	1256 (WH/YE)	Heated seat switch, passenger side, Heated seat module, passenger side front, to, Enable
11	–	not used
12	1048 (LB/WH)	Voltage supplied at all times (overload protected)

C330 (BK)

14A699

Seat adjust switch, passenger side front

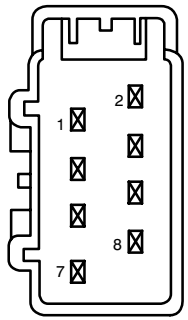

F08283

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	986 (YE/WH)	Fwd/Rwd motor, Rearward
3	985 (RD/LB)	Front height motor, Down
4	988 (YE/LG)	Rear height motor, Down
5	984 (YE/LB)	Front height motor, Up
6	989 (RD/LG)	Rear height motor, Up
7	566 (DG)	Voltage supplied at all times (overload protected)
8	987 (RD/WH)	Fwd/Rwd motor, Forward

C331 (GY)

14A699

Lumbar adjust switch, right front



F02073

Pin	Circuit	Circuit function
1	490 (RD)	Front seat lumbar compressor motor, feed
2	566 (DG)	Voltage supplied at all times (overload protected)