C220a (WH/OG)

14401

Instrument cluster

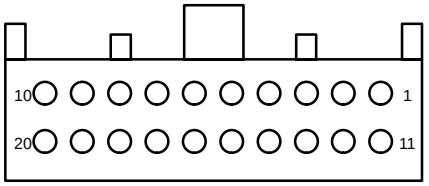

F20037

Pin	Circuit	Circuit function
1	–	not used
2	158 (BK/PK)	Key warning switch (11A127), input
3	–	not used
4	–	not used
5	1011 (TN/OG)	Instrument illumination
6	29 (YE/WH)	Fuel pump/fuel gauge sender
7	1169 (WH/LB)	Transmission range sensor, signal – EE Low sense
8	1168 (YE/BK)	Transmission range sensor, signal – DD Second sense
9	1167 (WH/BK)	Transmission range sensor, signal – CC Drive sense
10	930 (VT/LG)	Door ajar indicator, control
11	1166 (YE/RD)	Transmission range sensor, signal – BB Neutral sense
12	–	not used
13	–	not used
14	12 (LG/BK)	Low beam, output
15	1312 (LG/BK)	Door ajar switch, driver side front (14018)
16	1083 (LB/BK)	Air bag, tone driver
17	–	not used
18	–	not used
19	–	not used
20	1399 (DB/WH)	autolamps, On

C220b (WH/OG)

14401

Instrument cluster

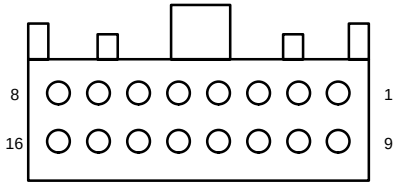

F16085

Pin	Circuit	Circuit function
1	140 (BK/PK)	Reverse signal
2	1165 (WH/RD)	Brake shift interlock relay, control
3	469 (LG)	Instrument cluster, feed, to, Safety belt buckle switch (10B924)
4	–	not used
5	1415 (LB/YE)	switch sense, Park position switch
6	603 (DG)	Anti–lock brake indicator, control
7	398 (BK/YE)	Anti–lock brake indicator, control
8	784 (LB/BK)	Four–wheel drive, indicator
9	–	not used
10	704 (DG/LG)	Voltage supplied in Start and Run (overload protected)
11	608 (BK/YE)	Air bag indicator, control
12	794 (LB)	Low coolant level switch, signal
13	3 (LG/WH)	Turn lamps, feed, left front
14	–	not used
15	203 (OG/LB)	Cruise set, indicator, control
16	162 (LG/RD)	Brake indicator, control