C331

14A699

N446
Lumbar adjust switch, right front

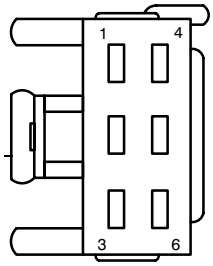

F06109

Pin	Circuit	Circuit Function
1	32-AH45 (WH/BU)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	31-AH46 (BK)	Ground
4	33-AH45 (YE/BU)	Switched between: Battery voltage, Ground or Open
5	30-AH46 (RD)	Voltage supplied at all times (not overload protected)
6	–	not used

C334

14A669

N30
Seat cushion heater, right front

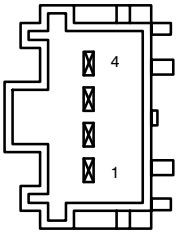

F04139

Pin	Circuit	Circuit Function
1	20S-HC20 (PK/WH)	Voltage, hot in run only, Switched
2	8-HC24 (WH/RD)	Sensor signal
3	9-HC24 (BN/RD)	Sensor signal return (reference/ ground)
4	20S-HC19 (PK/OG)	Voltage, hot in run only, Switched

C332

14A699

M232
Passenger seat horizontal motor



F02071

Pin	Circuit	Circuit Function
1	32-AH44 (WH/GN)	Switched between: Battery voltage, Ground or Open
2	33-AH44 (YE/GN)	Switched between: Battery voltage, Ground or Open

C335

14C691

N32
Seat back heater, right front

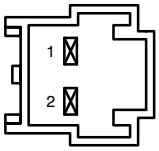

F02077

Pin	Circuit	Circuit Function
1	20S-HC19 (PK/OG)	Voltage, hot in run only, Switched
2	31S-HC19 (BK/RD)	Ground, Switched

C333

14A699

M233
Passenger seat vertical motor



F02071

Pin	Circuit	Circuit Function
1	32-AH34 (WH/BK)	Switched between: Battery voltage, Ground or Open
2	33-AH34 (YE/BK)	Switched between: Battery voltage, Ground or Open

C336

14C691

M235
Passenger seat lumbar compressor motor

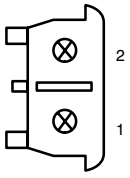

F02073

Pin	Circuit	Circuit Function
1	33-AH45 (YE/BU)	Switched between: Battery voltage, Ground or Open
2	32-AH45 (WH/BU)	Switched between: Battery voltage, Ground or Open