LONG WHEEL BASE

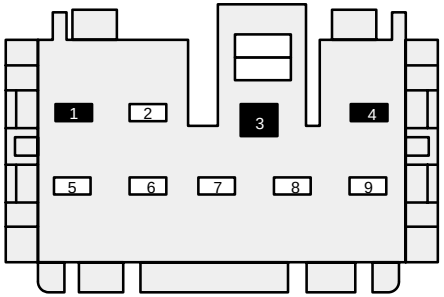

C526

LR SEAT HEATER SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	1040 (RD/BK)	Power (Hot in Run)
3	–	NOT USED
4	–	NOT USED
5	57 (BK)	Ground
6	1020 (DG/VT)	Switch to Module - Cushion Enable
7	461 (OG)	Module to Switch
8	1018 (LG/OG)	Temperature Adjust (+)
9	1019 (TN/LB)	Temperature Adjust (–)

LONG WHEEL BASE

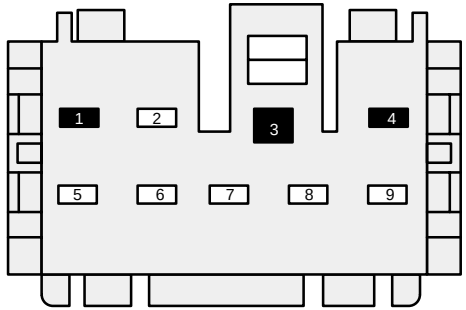

C626

RR SEAT HEATER SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	1040 (RD/BK)	Power (Hot in Run)
3	–	NOT USED
4	–	NOT USED
5	57 (BK)	Ground
6	581 (RD)	Switch to Module - Cushion Enable
7	461 (OG)	Module to Switch
8	579 (BK/OG)	Temperature Adjust (+)
9	580 (BN)	Temperature Adjust (–)