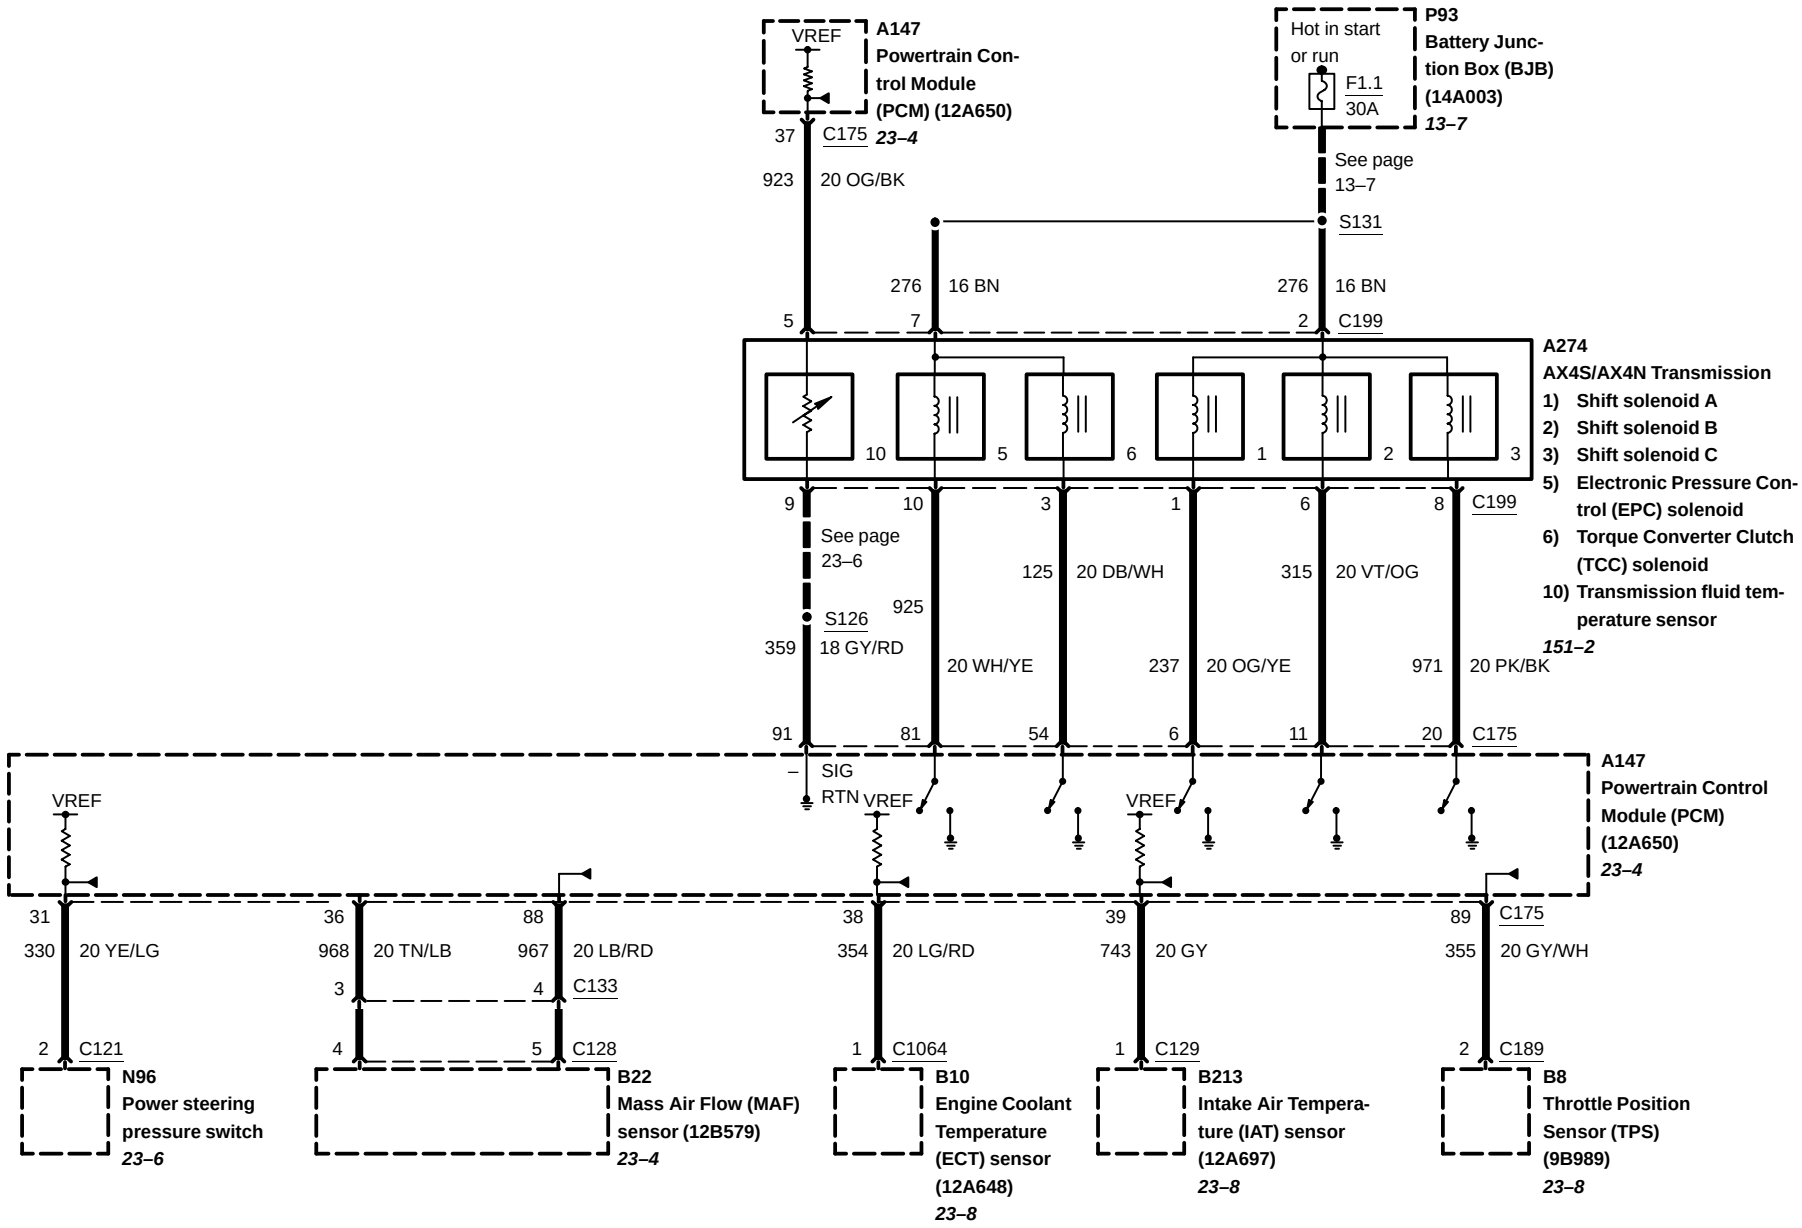
VREF
A147
Powertrain Control Module (PCM) (12A650)
23–4
37
C175
923
20 OG/BK
Hot in start or run
F1.1
30A
P93
Battery Junction Box (BJB) (14A003)
13–7
See page 13–7
S131
276
16 BN
5
7
276
16 BN
2
C199
A274
AX4S/AX4N Transmission
1) Shift solenoid A
2) Shift solenoid B
3) Shift solenoid C
5) Electronic Pressure Control (EPC) solenoid
6) Torque Converter Clutch (TCC) solenoid
10) Transmission fluid temperature sensor
151–2
10
5
6
1
2
3
9
10
3
1
6
8
C199
See page 23–6
125
20 DB/WH
315
20 VT/OG
925
S126
359
18 GY/RD
20 WH/YE
237
20 OG/YE
971
20 PK/BK
91
81
54
6
11
20
C175
–
SIG RTN
A147
Powertrain Control Module (PCM) (12A650)
23–4
VREF
VREF
VREF
31
330
20 YE/LG
2
C121
N96
Power steering pressure switch
23–6
36
968
20 TN/LB
3
88
967
20 LB/RD
4
C133
4
5
C128
B22
Mass Air Flow (MAF) sensor (12B579)
23–4
38
354
20 LG/RD
1
C1064
B10
Engine Coolant Temperature (ECT) sensor (12A648)
23–8
39
743
20 GY
1
C129
B213
Intake Air Temperature (IAT) sensor (12A697)
23–8
89
C175
355
20 GY/WH
2
C189
B8
Throttle Position Sensor (TPS) (9B989)
23–8