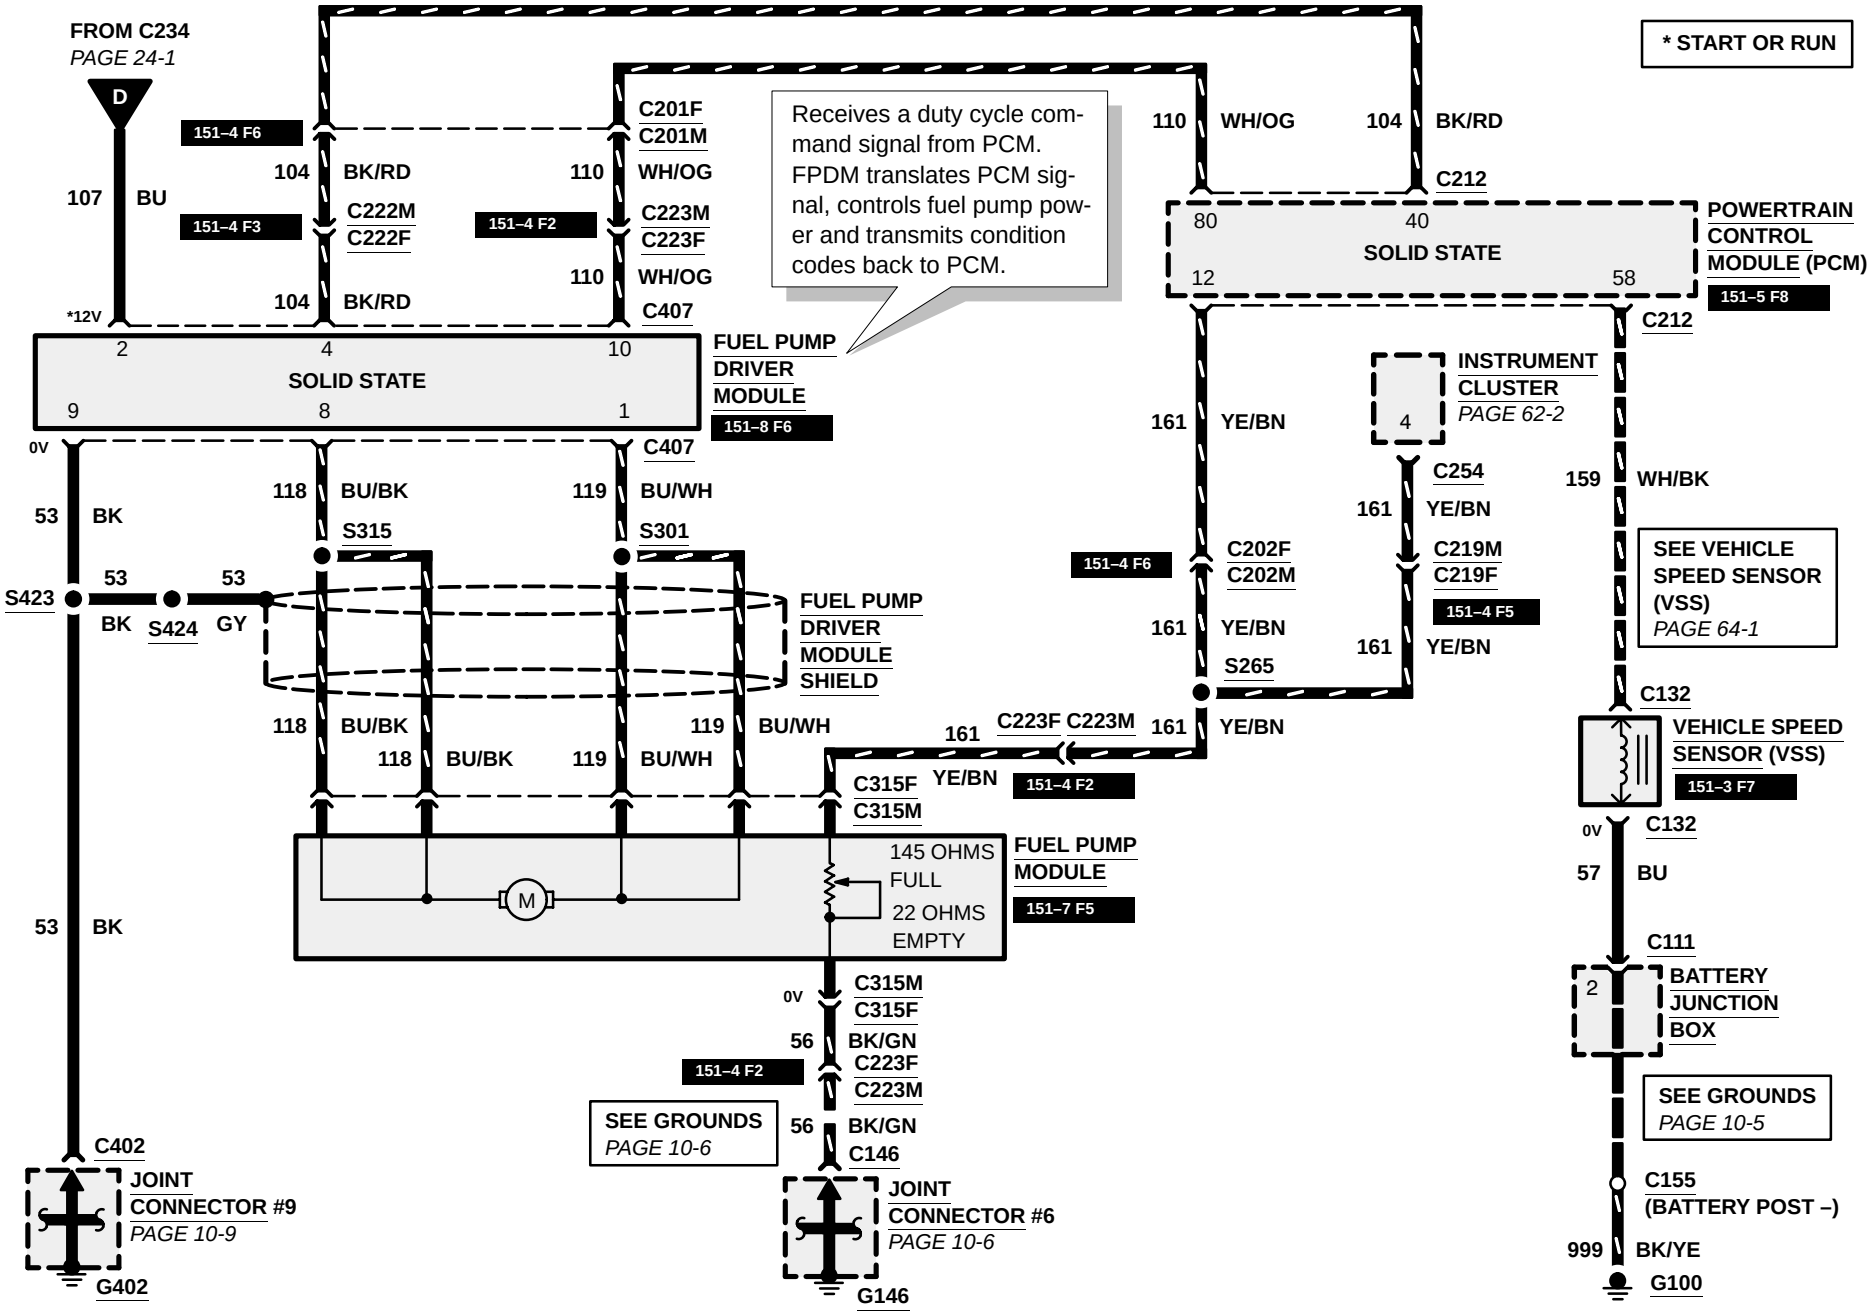
FROM C234
PAGE 24-1
D
151–4 F6
104 BK/RD
107 BU
151–4 F3
C222M
C222F
104 BK/RD
*12V
C201F
C201M
110 WH/OG
151–4 F2
C223M
C223F
110 WH/OG
C407
Receives a duty cycle command signal from PCM. FPDM translates PCM signal, controls fuel pump power and transmits condition codes back to PCM.
110 WH/OG
104 BK/RD
C212
80
40
SOLID STATE
12
58
POWERTRAIN CONTROL MODULE (PCM)
151–5 F8
C212
* START OR RUN
2
4
10
SOLID STATE
9
8
1
FUEL PUMP DRIVER MODULE
151–8 F6
INSTRUMENT CLUSTER
PAGE 62-2
4
161 YE/BN
C254
161 YE/BN
159 WH/BK
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
0V
C407
118 BU/BK
119 BU/WH
53 BK
S315
S301
151–4 F6
C202F
C202M
C219M
C219F
151–4 F5
S423
53 BK
53
S424
53 GY
FUEL PUMP DRIVER MODULE SHIELD
161 YE/BN
161 YE/BN
S265
C132
118 BU/BK
119 BU/WH
161 YE/BN
C223F C223M
161 YE/BN
VEHICLE SPEED SENSOR (VSS)
151–3 F7
118 BU/BK
119 BU/WH
C315F
C315M
151–4 F2
0V
C132
57 BU
145 OHMS FULL
22 OHMS EMPTY
FUEL PUMP MODULE
151–7 F5
M
53 BK
C111
2
BATTERY JUNCTION BOX
0V
C315M
C315F
56 BK/GN
C223F
C223M
151–4 F2
SEE GROUNDS
PAGE 10-5
SEE GROUNDS
PAGE 10-6
56 BK/GN
C146
C155
(BATTERY POST –)
999 BK/YE
G100
C402
JOINT CONNECTOR #9
PAGE 10-9
G402
JOINT CONNECTOR #6
PAGE 10-6
G146