C370 (BU)

14N104

K300
Rear blower motor relay

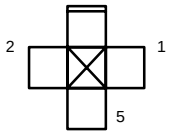

F04129

Pin	Circuit	Circuit Function
1	HB22 (BU/YE)	Rear blower motor relay, control
2	HB55 (BU)	Voltage supplied in Start and Run (overload protected)
3	HB20 (RD)	Voltage supplied at all times (overload protected)
4	–	not used
5	HB60 (RD/BK)	Blower motor relay, switched output

C372 (BK)

14N104

N429
Sliding door ajar switch, left



F01035

Pin	Circuit	Circuit Function
1	LI95 (RD/GN)	Sliding door ajar switch, left

C374 (GN)

9F759

Y201
EVAP canister purge vacuum cut valve bypass solenoid

F02137

Pin	Circuit	Circuit Function
1	AW06 (BU/GN)	EVAP canister purge vacuum cut valve bypass solenoid, input
2	AW05 (BU/YE)	Voltage supplied in Start and Run (overload protected)

C375 (BK)

9F759

Y202
EVAP canister vent control solenoid



F02137

Pin	Circuit	Circuit Function
1	AW08 (LG/BK)	EVAP canister vent control solenoid, input
2	AW07 (BU/YE)	Voltage supplied in Start and Run (overload protected)

C376 (GY)

9F759

B207
EVAP pressure sensor



F03131

Pin	Circuit	Circuit Function
1	AW29 (GN)	signal, return
2	AW28 (RD)	EVAP pressure sensor, input
3	AW27 (BN)	Reference, voltage

C380

14A699

B211
Seat forward/rearward sensor



F03056

Pin	Circuit	Circuit Function
1	41B (OG/WH)	position sense
2	33 (LG/OG)	Seat forward/rearward sensor - position sense
3	44B (OG/RD)	position sense

C381

14A699

B209
Height up/down sensor, front



F03056

Pin	Circuit	Circuit Function
1	41C (OG/WH)	position sense
2	42 (LG/BK)	Height up/down sensor, front - position sense
3	44C (OG/RD)	position sense