C504b (GY)

14631

Master window adjust switch (14529)

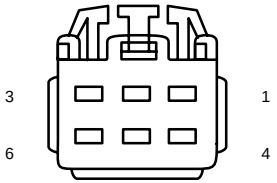

F06237

Pin	Circuit	Circuit function
1	170 (RD/LB)	Window lockout, switched power, output
2	57 (BK)	Ground
3	319 (YE/BK)	Window switch, feed, right rear, Up
4	400 (LB/BK)	Accessory relay, switched power, output
5	316 (YE/LB)	Window switch, feed, left rear, Up
6	317 (GY/OG)	Window switch, feed, left rear, Down

C505 (GN)

14631

Door lock switch, driver side (14028)

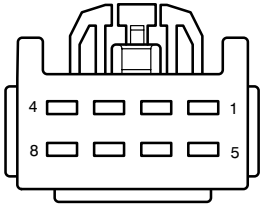

F08167

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock relay, control
4	57 (BK)	Ground
5	400 (LB/BK)	Accessory relay, switched power, output
6	–	not used
7	119 (PK/YE)	Door lock relay, control
8	–	not used