# VEHICLE REPAIR LOCATION CODES

TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR THE **VEHICLE REPAIR LOCATION CODE** IS REQUIRED.

FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.

LOCATION CODE, FOR THE EXAMPLE IS: **A5/FU** — (UNDER THE FLOOR OF DRIVER'S LEFT FOOT.)

FRONT/REAR DIRECTION

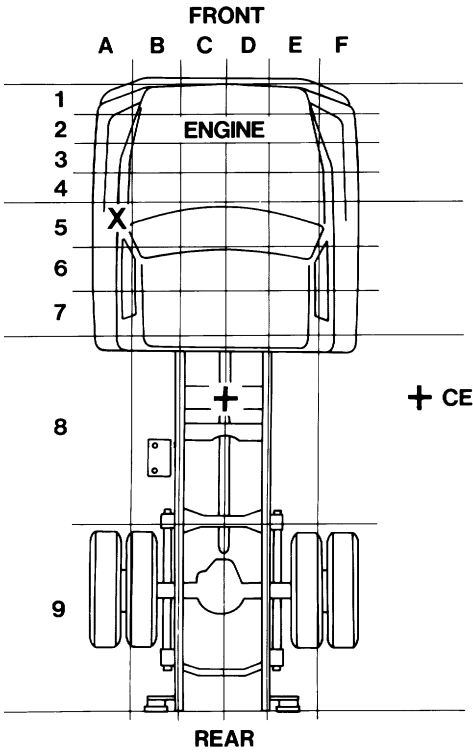


+ CENTER OF VEHICLE

OVER/UNDER DIRECTION

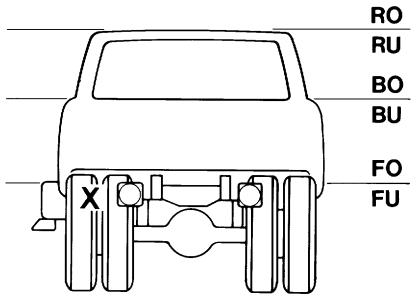


R = ROOF LINE
- RO = ROOF OVER
- RU = ROOF UNDER

B = BELT LINE
- BO = BELT OVER
- BU = BELT UNDER

F = FLOOR PAN
- FO = FLOOR OVER
- FU = FLOOR UNDER

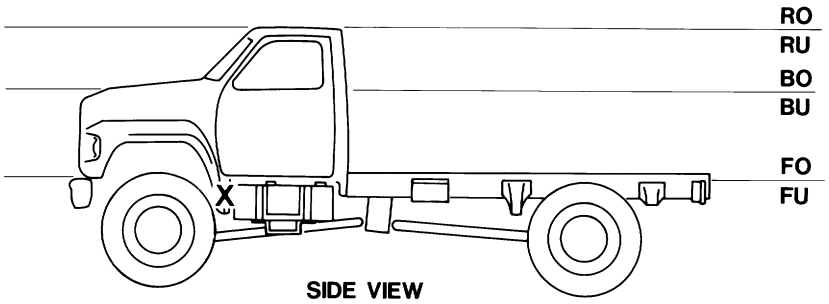


SIDE VIEW

**F-650/750**
FCS-12201–02