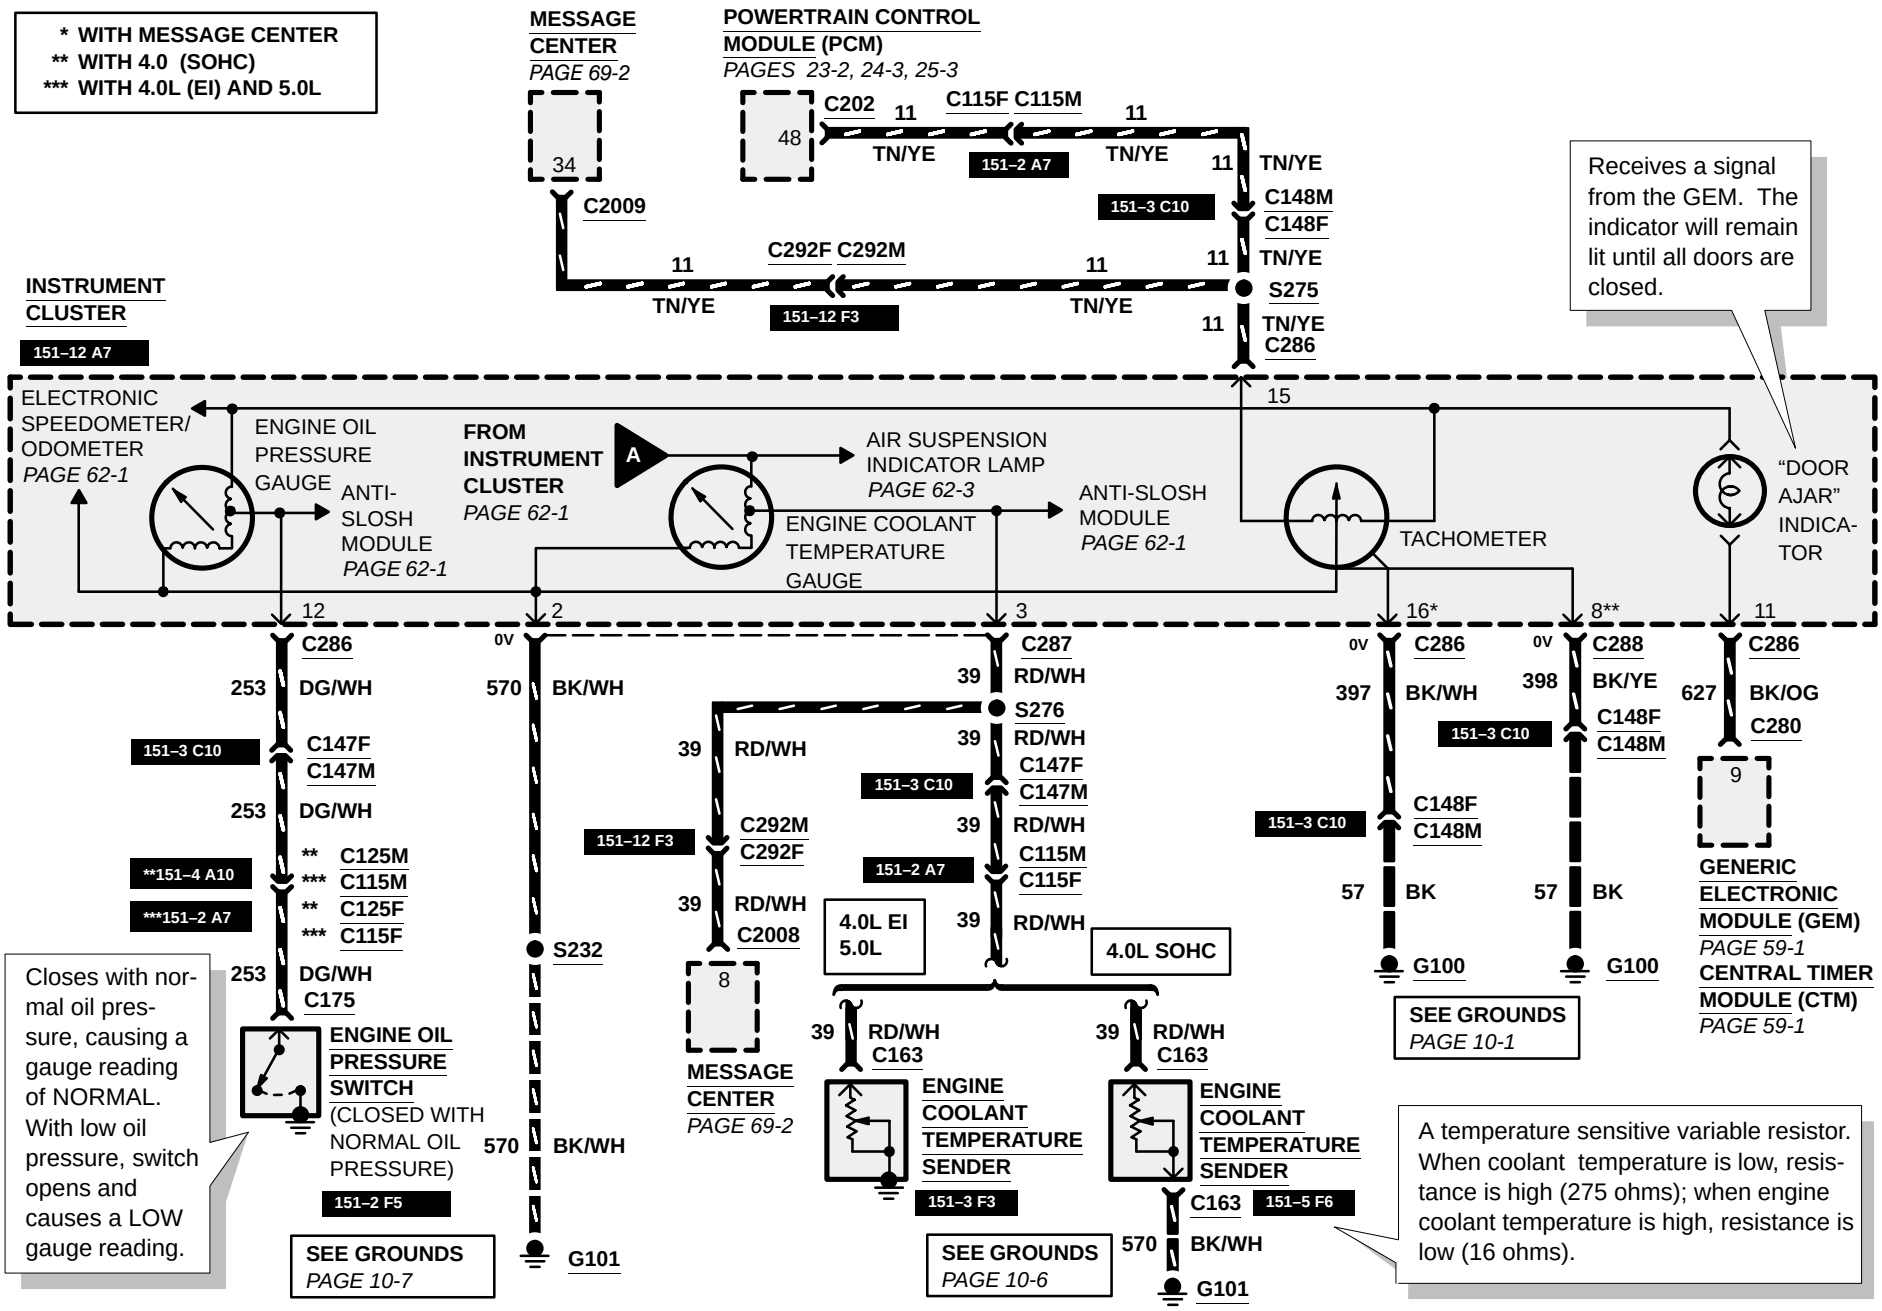
* WITH MESSAGE CENTER
** WITH 4.0 (SOHC)
*** WITH 4.0L (EI) AND 5.0L
MESSAGE CENTER
PAGE 69-2
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-2, 24-3, 25-3
C202
C115F C115M
C2009
C292F C292M
S275
C148M C148F
C286
INSTRUMENT CLUSTER
151–12 A7
Receives a signal from the GEM. The indicator will remain lit until all doors are closed.
ELECTRONIC SPEEDOMETER/ ODOMETER
PAGE 62-1
ENGINE OIL PRESSURE GAUGE
ANTI-SLOSH MODULE
PAGE 62-1
FROM INSTRUMENT CLUSTER
PAGE 62-1
AIR SUSPENSION INDICATOR LAMP
PAGE 62-3
ENGINE COOLANT TEMPERATURE GAUGE
ANTI-SLOSH MODULE
PAGE 62-1
TACHOMETER
"DOOR AJAR" INDICATOR
C286
C147F C147M
C125M C115M C125F C115F
C175
ENGINE OIL PRESSURE SWITCH
(CLOSED WITH NORMAL OIL PRESSURE)
Closes with normal oil pressure, causing a gauge reading of NORMAL. With low oil pressure, switch opens and causes a LOW gauge reading.
SEE GROUNDS
PAGE 10-7
G101
S232
C292M C292F
C2008
MESSAGE CENTER
PAGE 69-2
S276
C287
C147F C147M
C115M C115F
4.0L EI 5.0L
4.0L SOHC
ENGINE COOLANT TEMPERATURE SENDER
C163
SEE GROUNDS
PAGE 10-6
G101
A temperature sensitive variable resistor. When coolant temperature is low, resistance is high (275 ohms); when engine coolant temperature is high, resistance is low (16 ohms).
C286
C148F C148M
C288
C148F C148M
SEE GROUNDS
PAGE 10-1
G100
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-1
CENTRAL TIMER MODULE (CTM)
PAGE 59-1
C286
C280