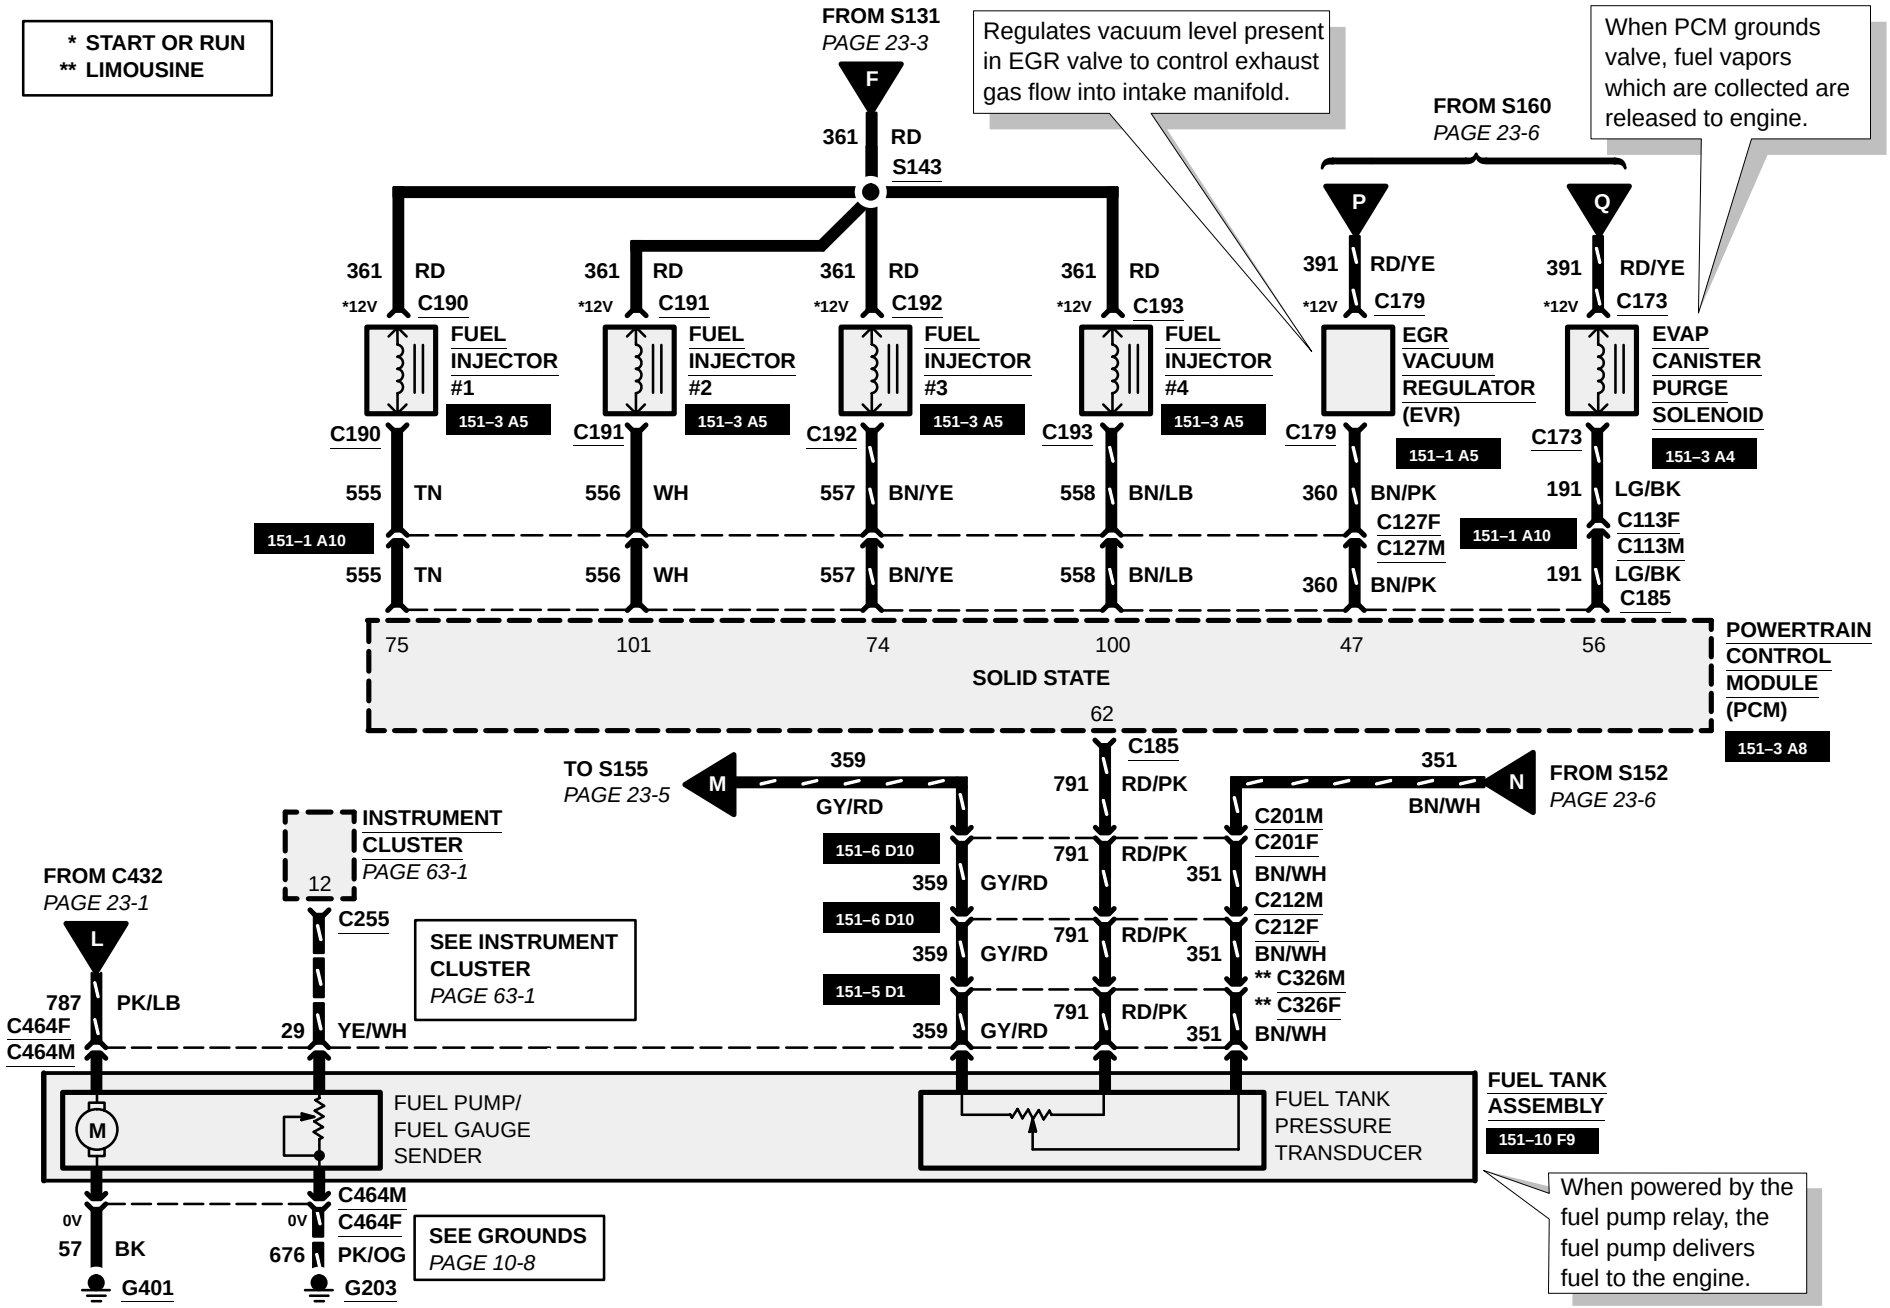
* START OR RUN
** LIMOUSINE
FROM S131
PAGE 23-3
F
361 RD
S143
Regulates vacuum level present in EGR valve to control exhaust gas flow into intake manifold.
When PCM grounds valve, fuel vapors which are collected are released to engine.
FROM S160
PAGE 23-6
P
Q
391 RD/YE
*12V
C179
C173
361 RD
*12V
C190
C191
C192
C193
FUEL INJECTOR #1
FUEL INJECTOR #2
FUEL INJECTOR #3
FUEL INJECTOR #4
151–3 A5
EGR VACUUM REGULATOR (EVR)
151–1 A5
EVAP CANISTER PURGE SOLENOID
151–3 A4
555 TN
556 WH
557 BN/YE
558 BN/LB
360 BN/PK
191 LG/BK
C127F
C127M
C113F
C113M
151–1 A10
C185
75
101
74
100
47
56
SOLID STATE
62
POWERTRAIN CONTROL MODULE (PCM)
151–3 A8
TO S155
PAGE 23-5
M
359 GY/RD
151–6 D10
151–5 D1
791 RD/PK
351 BN/WH
N
FROM S152
PAGE 23-6
C201M
C201F
C212M
C212F
** C326M
** C326F
INSTRUMENT CLUSTER
PAGE 63-1
12
C255
SEE INSTRUMENT CLUSTER
PAGE 63-1
FROM C432
PAGE 23-1
L
787 PK/LB
C464F
C464M
29 YE/WH
FUEL PUMP/ FUEL GAUGE SENDER
FUEL TANK PRESSURE TRANSDUCER
FUEL TANK ASSEMBLY
151–10 F9
0V
57 BK
G401
676 PK/OG
G203
SEE GROUNDS
PAGE 10-8
When powered by the fuel pump relay, the fuel pump delivers fuel to the engine.