C522 (WH)

F02144

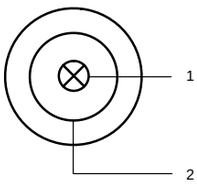

A11
Radio

Pin	Circuit	Circuit Function
1	1-MD1 (WH)	Audio signal positive
2	48-MD21 (RD)	Drain wire

C555 (GY)

14K733

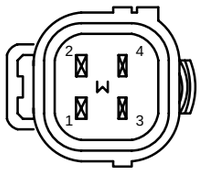

F04126

Pin	Circuit	Circuit Function
1	30-CF6 (RD)	Voltage supplied at all times (not overload protected)
2	15-CF6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
3	8-EE6 (WH)	Sensor signal
4	–	not used

C523 (RD)

F02144

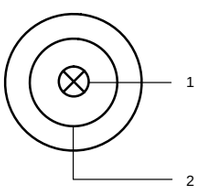

A11
Radio

Pin	Circuit	Circuit Function
1	30-MD22 (RD)	Voltage supplied at all times (not overload protected)
2	48-MD22 (BK/BU)	Drain wire

C556 (GY)

14K733

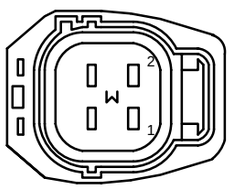

F04128

Pin	Circuit	Circuit Function
1	30-CF6A (RD)	Voltage supplied at all times (not overload protected)
2	15-CF6A (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
3	8-EE6A (WH)	Sensor signal
4	91-CF29 (BK/WH)	Ground