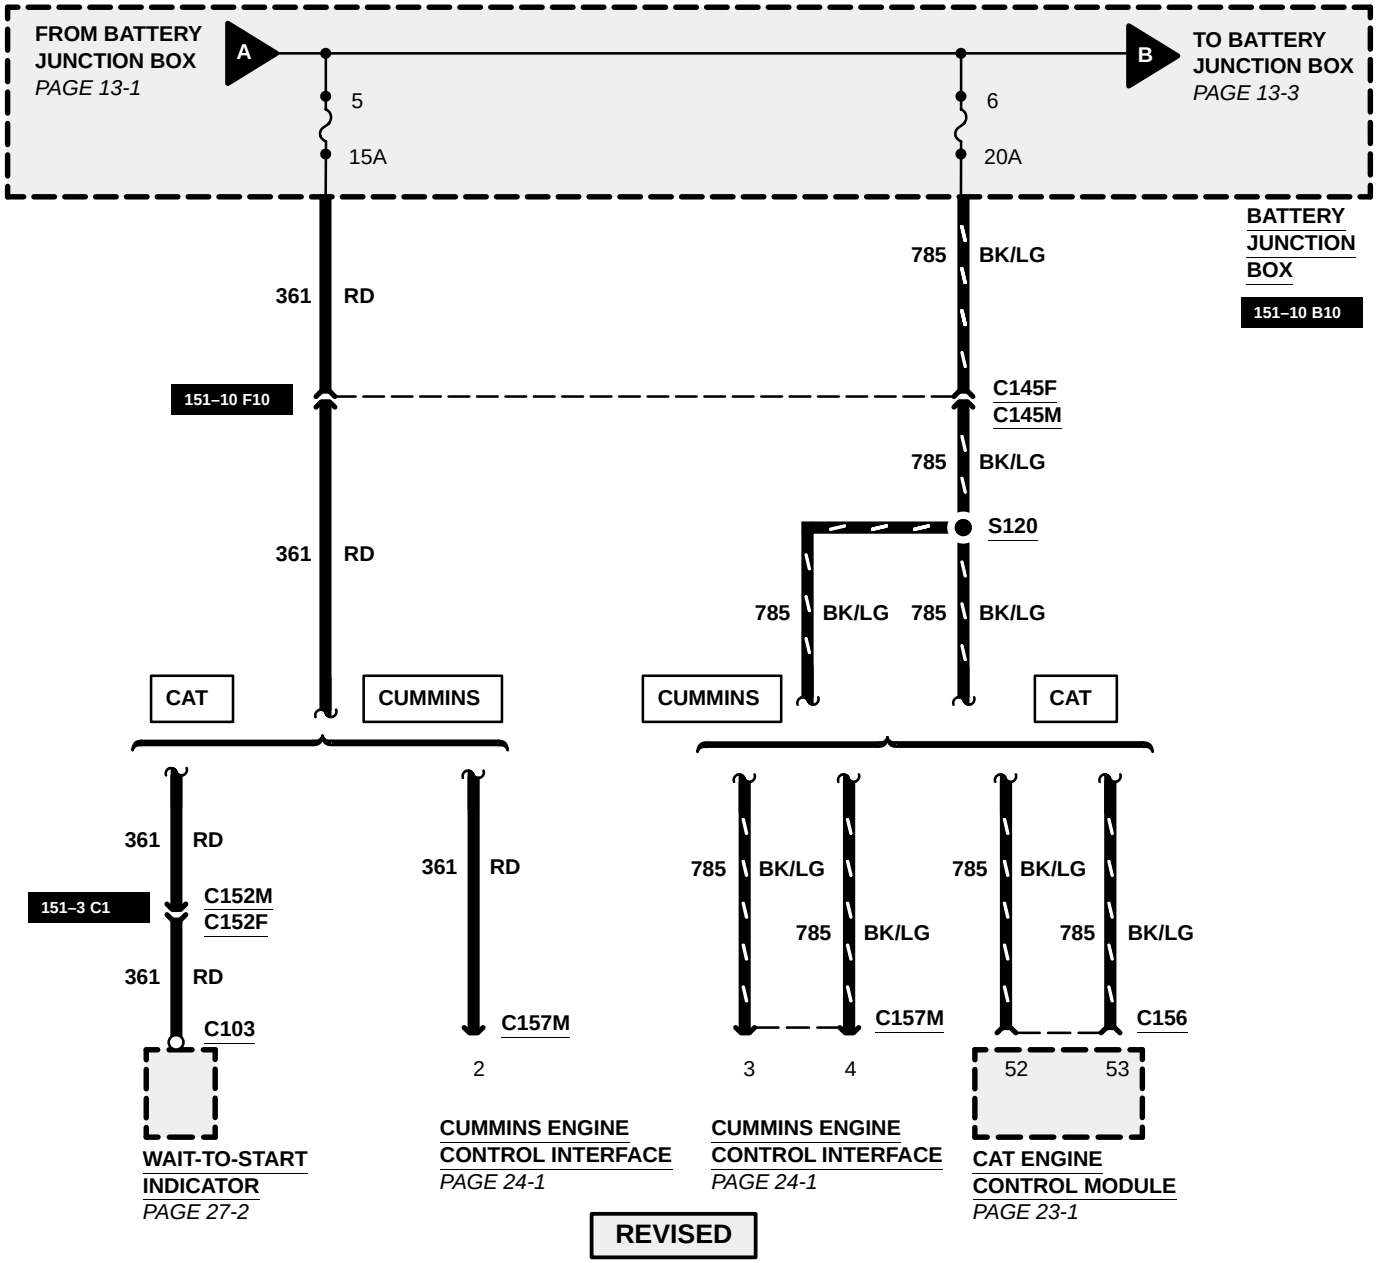
FROM BATTERY JUNCTION BOX
PAGE 13-1
A
B
TO BATTERY JUNCTION BOX
PAGE 13-3
5
15A
6
20A
BATTERY JUNCTION BOX
151–10 B10
361 RD
785 BK/LG
151–10 F10
C145F
C145M
785 BK/LG
S120
361 RD
785 BK/LG
785 BK/LG
CAT
CUMMINS
CUMMINS
CAT
361 RD
151–3 C1
C152M
C152F
361 RD
C103
361 RD
C157M
785 BK/LG
785 BK/LG
C157M
785 BK/LG
785 BK/LG
C156
2
3
4
52
53
WAIT-TO-START INDICATOR
PAGE 27-2
CUMMINS ENGINE CONTROL INTERFACE
PAGE 24-1
CUMMINS ENGINE CONTROL INTERFACE
PAGE 24-1
CAT ENGINE CONTROL MODULE
PAGE 23-1

REVISED