C203 (BK)

14N104

P53
Climate control panel, front

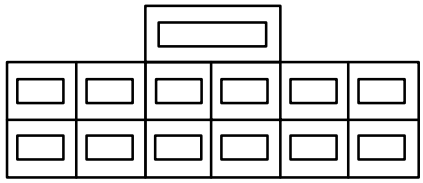

F12093

Pin	Circuit	Circuit Function
1	IH91 (PK/BK)	Illumination, Ground
2	–	not used
3	HA02 (BN/WH)	A/C demand signal
4	HA05 (YE/RD)	Front blower motor relay, control
5	HA09 (WH)	Fresh/recirculation door actuator
6	HAE2 (BK)	Ground
7	IH01 (PK)	Illumination, feed
8	–	not used
9	–	not used
10	HA01 (GY)	Voltage in Run (overload protected)
11	HA11 (LG)	Mode actuator
12	HA06 (YE/BK)	Fresh/recirculation door actuator

C204 (WH)

14A103

P91
Central Junction Box (CJB)

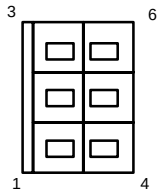

F06116

Pin	Circuit	Circuit Function
1	DA20 (WH/GN)	Voltage in Run or Accessory (overload protected)
2	–	not used
3	DAE2 (BK)	Ground
4	DA21 (BN)	Voltage supplied in Start and Run (overload protected)
5	DA23 (WH/BU)	Voltage supplied in Start (overload protected)
6	DA22 (RD/GN)	Voltage in Run (overload protected)

C205 (WH)

14N104

N410
Rear blower motor switch (front)

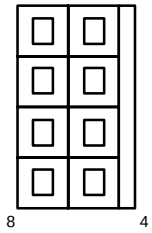

F08149

Pin	Circuit	Circuit Function
1	HB07 (BK/YE)	Blower motor, to switch
2	IH93 (PK/BK)	Illumination, Ground
3	IH03 (PK)	Illumination, feed
4	HB21 (BK/WH)	Switched, Ground
	HCE8 (BK)	Ground
5	HB08 (PK/BU)	Rear blower motor resistor assembly, to switch
6	HB09 (BN)	Rear blower motor resistor assembly, to switch
7	HB10 (GN)	Rear blower motor resistor assembly, to switch - Low
8	HB11 (LG/BK)	Rear blower motor switch (rear), to Rear blower motor switch (front)

C206 (BK)

14A103

P91
Central Junction Box (CJB)



F02171

Pin	Circuit	Circuit Function
1	DA05 (WH/BU)	Voltage supplied at all times (overload protected)
2	DA06 (WH/BU)	Voltage supplied at all times (overload protected)

C207 (WH)

14N104

N414
Front blower motor switch

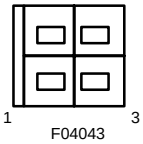

F04043

Pin	Circuit	Circuit Function
1	HH03 (GN)	Blower motor, to switch - High
2	HHE1 (BK)	Ground
3	HH06 (YE/BK)	Blower switch speed control, to resistor
4	HH05 (LG/RD)	Blower switch speed control, to resistor