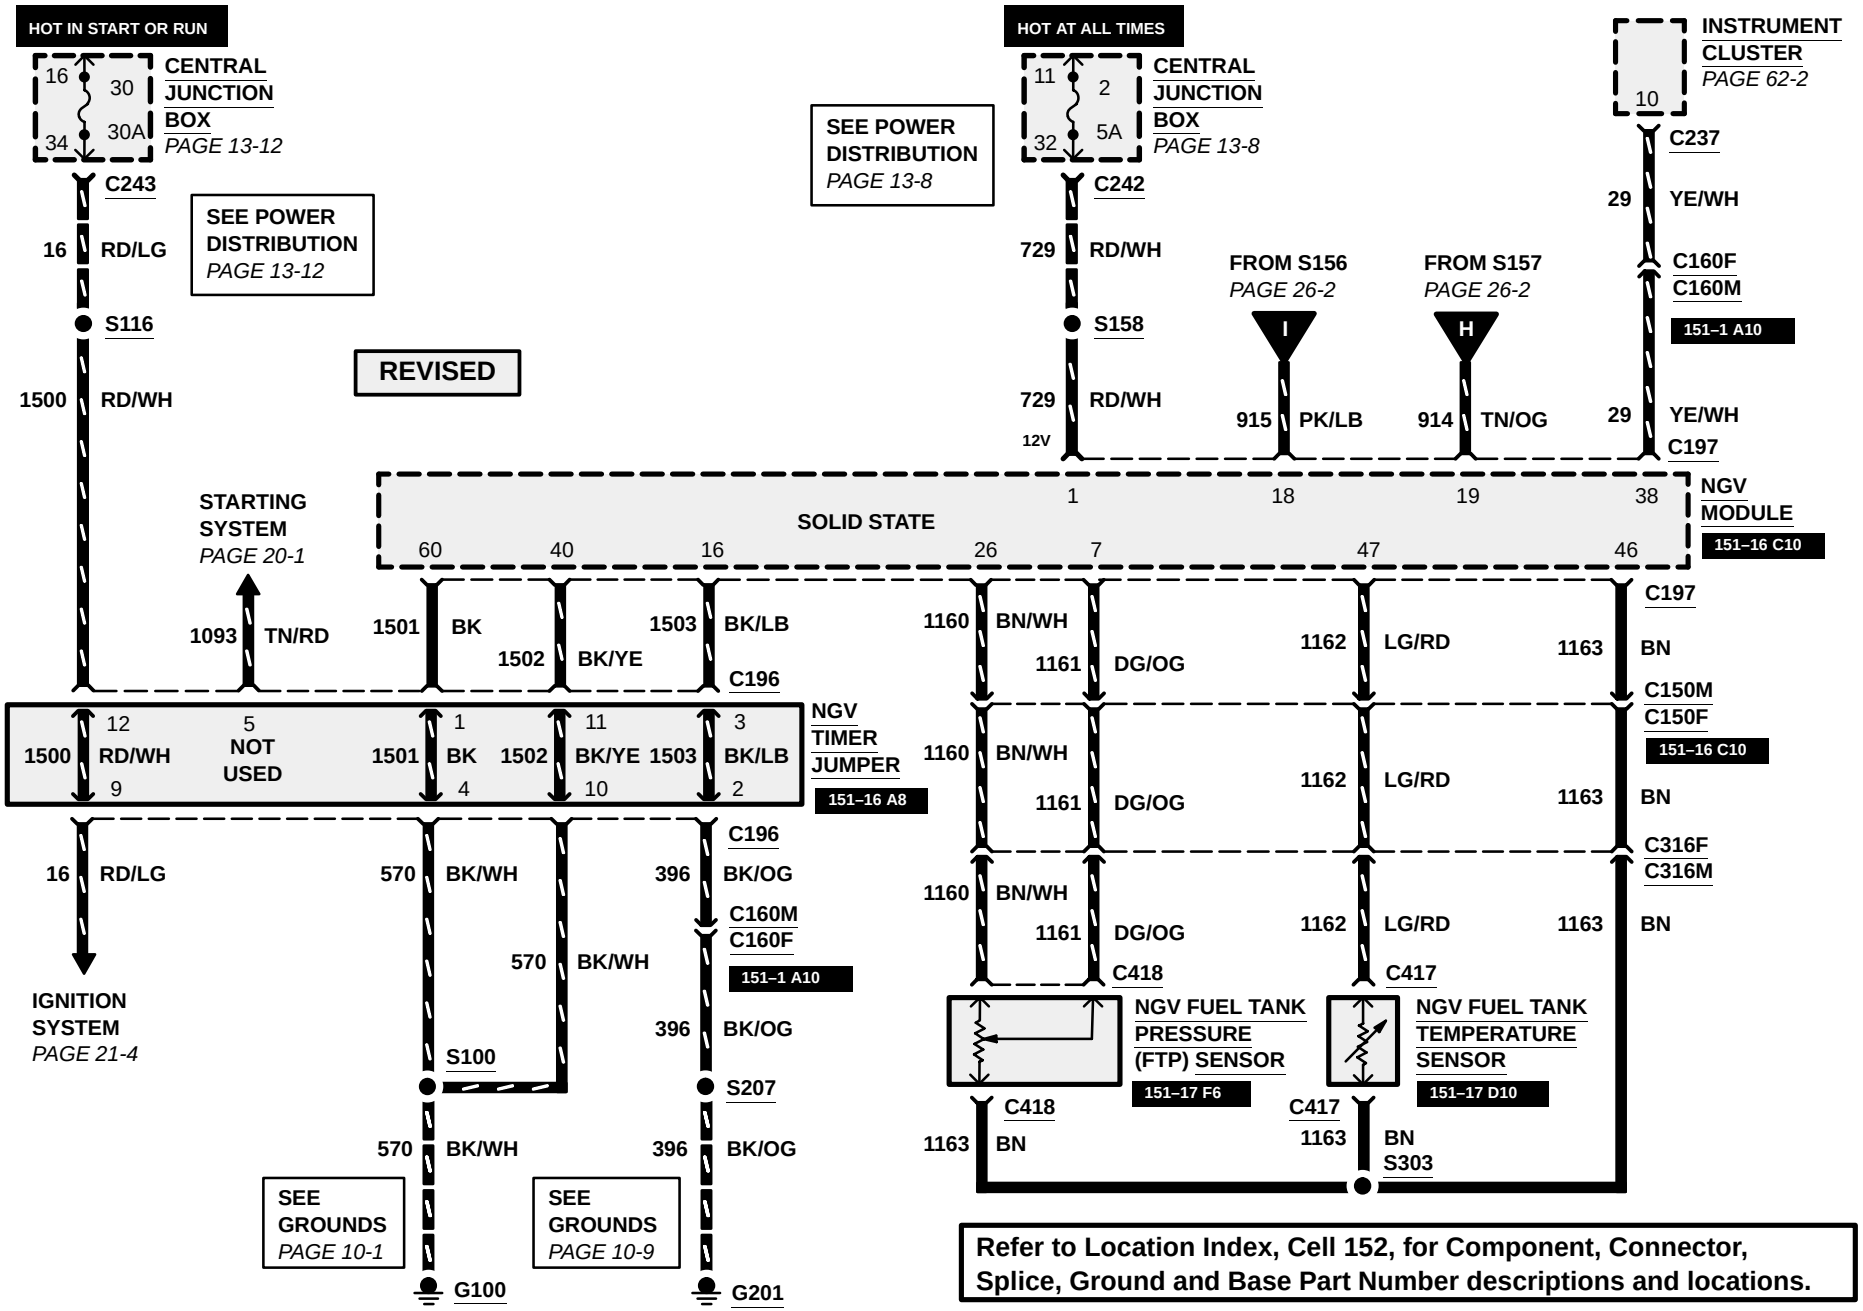
HOT IN START OR RUN
CENTRAL JUNCTION BOX
PAGE 13-12
16
30
34
30A
C243
16 RD/LG
SEE POWER DISTRIBUTION
PAGE 13-12
S116
1500 RD/WH
REVISED
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-8
11
2
32
5A
C242
729 RD/WH
S158
729 RD/WH
12V
SEE POWER DISTRIBUTION
PAGE 13-8
FROM S156
PAGE 26-2
FROM S157
PAGE 26-2
I
H
915 PK/LB
914 TN/OG
INSTRUMENT CLUSTER
PAGE 62-2
10
C237
29 YE/WH
C160F
C160M
151–1 A10
29 YE/WH
C197
STARTING SYSTEM
PAGE 20-1
1093 TN/RD
SOLID STATE
1
18
19
38
NGV MODULE
151–16 C10
60
40
16
26
7
47
46
1501 BK
1502 BK/YE
1503 BK/LB
C196
1160 BN/WH
1161 DG/OG
1162 LG/RD
1163 BN
C197
C150M
C150F
151–16 C10
C316F
C316M
C160M
C160F
151–1 A10
C418
C417
NGV TIMER JUMPER
151–16 A8
12
5
1
11
3
9
NOT USED
4
10
2
1500 RD/WH
1501 BK
1502 BK/YE
1503 BK/LB
16 RD/LG
570 BK/WH
396 BK/OG
IGNITION SYSTEM
PAGE 21-4
S100
S207
S303
NGV FUEL TANK PRESSURE (FTP) SENSOR
151–17 F6
NGV FUEL TANK TEMPERATURE SENSOR
151–17 D10
SEE GROUNDS
PAGE 10-1
SEE GROUNDS
PAGE 10-9
G100
G201
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.