## C508

### 14631

N416
Master window/door lock/unlock switch




F12115

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 313 (WH/YE) | Window switch, feed, right front, Up |
| 2 | 314 (TN/LB) | Window switch, feed, right front, Down |
| 3 | 1088 (PK/WH) | Door unlock, input |
| 4 | 992 (WH/BK) | Master window adjust switch, feed, Up |
| 5 | - | not used |
| 6 | 316 (YE/LB) | Window switch, feed, left rear, Up |
| 7 | 317 (GY/OG) | Window switch, feed, left rear, Down |
| 8 | 170 (RD/LB) | Accessory delay relay, switched power, output |
| 9 | 903 (RD) | Window motor, feed, Down |
| 10 | 320 (RD/BK) | Window switch, feed, right rear, Down |
| 11 | 319 (YE/BK) | Window switch, feed, right rear, Up |
| 12 | 57 (BK) | Ground |

## C513

### 14631

Y213
Tweeter, left front

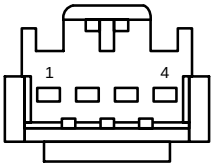


F042357

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 804 (OG/LG) | Speaker, left front + |
| 2 | 813 (LB/WH) | Speaker, left front - |
| 3 | 176 (PK/LG) | Tweeter, left front, to, Speaker, left front + |
| 4 | 179 (OG/RD) | Tweeter, left front, to, Speaker, left front - |

## C520

### 14631

M220
Exterior rear view mirror, driver side

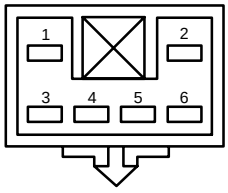


F06233

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | - | not used |
| 2 | - | not used |
| 3 | - | not used |
| 4 | 540 (RD) | Right/Left mirror movement |
| 5 | 542 (YE) | Mirror motor, feed |
| 6 | 541 (DB) | Up/Down mirror movement |