C1274 (BK)

15525

A434
4R100 transmission

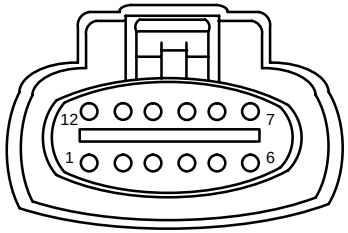

F12133

Pin	Circuit	Circuit function
1	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)
2	315 (VT/OG)	Shift solenoid B
3	237 (OG/YE)	Shift solenoid A
4	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid
5	924 (BN/OG)	Powertrain Control Module (PCM) (12A650), to transmission coast clutch solenoid
6	–	not used
7	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
8	359 (GY/RD)	Signal return
9	–	not used
10	–	not used
11	925 (WH/YE)	Electronic Pressure Control (EPC) solenoid, input
12	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C1277

15525

B281
Transfer case speed sensor

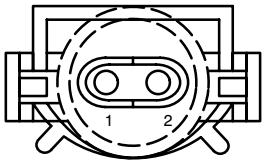

F02031

Pin	Circuit	Circuit function
1	1497 (PK/BK)	Signal return
2	1496 (PK)	Transfer case speed sensor, signal

C1286

9D930

A166
Intake Manifold Runner Control (IMRC) module

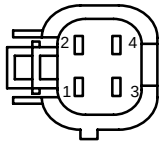

F04144

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	367 (BN)	Intake Manifold Runner Control (IMRC) module, to, Powertrain Control Module (PCM) (12A650)
3	190 (WH/OG)	Intake Manifold Runner Control (IMRC) module, to, Powertrain Control Module (PCM) (12A650)
4	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)

C1287

12B637

B291
Intake Air Temperature (IAT) sensor 2

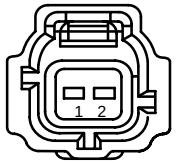

F02101

Pin	Circuit	Circuit function
1	1291 (RD/YE)	Intake Air Temperature (IAT) sensor 2, to, Powertrain Control Module (PCM) (12A650)
2	359 (GY/RD)	signal, return

C1288

12B637

A166
Intake Manifold Runner Control (IMRC) module

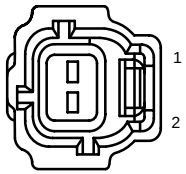

F02105

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	367 (BN)	Intake Manifold Runner Control (IMRC) module, to, Powertrain Control Module (PCM) (12A650)