AIR

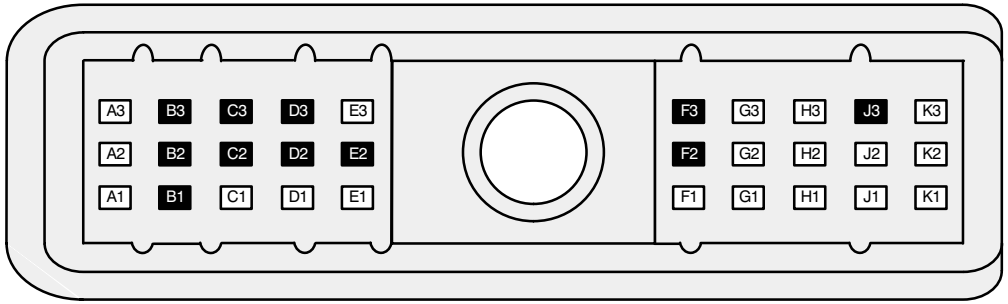

C410

ANTI-LOCK BRAKE CONTROL MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
A1	57 (BK)	Ground	G2	712 (OG)	Diagnostic Connector
B1	–	NOT USED	H2	514 (YE/RD)	ABS Module to Right Front Wheel Speed Sensor
C1	601 (LB/PK)	ABS Right Front Control Module Feed			
D1	608 (BK/YE)	ABS Right Front Control Module Feed	J2	522 (TN/BK)	ABS Module to Left Front Wheel Speed Sensor
E1	600 (DB)	ABS Right Front Control Module Feed			
F1	602 (RD/LG)	ABS Left Front Control Module Feed	K2	534 (YE/LG)	Power (Hot in Run)
G1	618 (PK/LG)	ABS Left Front Control Module Feed	A3	57 (BK)	Ground
H1	617 (PK/OG)	ABS Left Front Control Module Feed	B3	–	NOT USED
J1	321 (TN/OG)	ABS Module to Left Front Wheel Speed Sensor	C3	–	NOT USED
			D3	–	NOT USED
K1	3231 (OG/LB)	To Vehicle Interface Module (VIM)	E3	603 (DG)	ABS Warning Lamp Output
A2	57 (BK)	Ground	F3	–	NOT USED
B2	–	NOT USED	G3	716 (YE)	Diagnostic Connector
C2	–	NOT USED	H3	516 (YE/BK)	ABS Module to Right Front Wheel Speed Sensor
D2	–	NOT USED			
E2	–	NOT USED	J3	–	NOT USED
F2	–	NOT USED	K3	534 (YE/LG)	Power (Hot in Run)