C230

14401

Y282
Center image speaker, left



F02048

Pin	Circuit	Circuit function
1	8-MD30 (WH/BU)	Center image speaker, left, Audio signal positive, (+)
2	10-MD30 (GY/VT)	Center image speaker, left, Audio signal negative, (–)

C231

14401

Y283
Center image speaker, right



F02048

Pin	Circuit	Circuit function
1	8-MD31 (WH/GN)	Center image speaker, right, Audio signal positive, (+)
2	10-MD31 (GY/OG)	Center image speaker, right, Audio signal negative, (–)

C232

14401

M210
Defrost mode actuator (19E616)

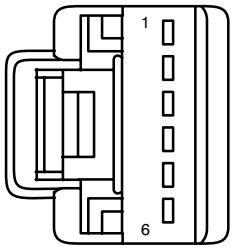

F006179

Pin	Circuit	Circuit function
1	33-FB5 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	8-FB5 (WH/BK)	Sensor signal
4	7-FB5 (YE/BK)	Voltage DC supplied at all times (sensor)
5	9-FB5 (BN/YE)	Sensor signal return (reference/ground)
6	32-FB5 (WH/BK)	Switched between: Battery voltage, Ground or Open

C233 (GN)

14401

B206
In–vehicle temperature sensor (19C734)

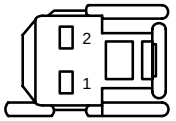

F02307

Pin	Circuit	Circuit function
1	8-FA48 (WH/GN)	Sensor signal
2	9-FA48 (BN/GN)	Sensor signal return (reference/ground)