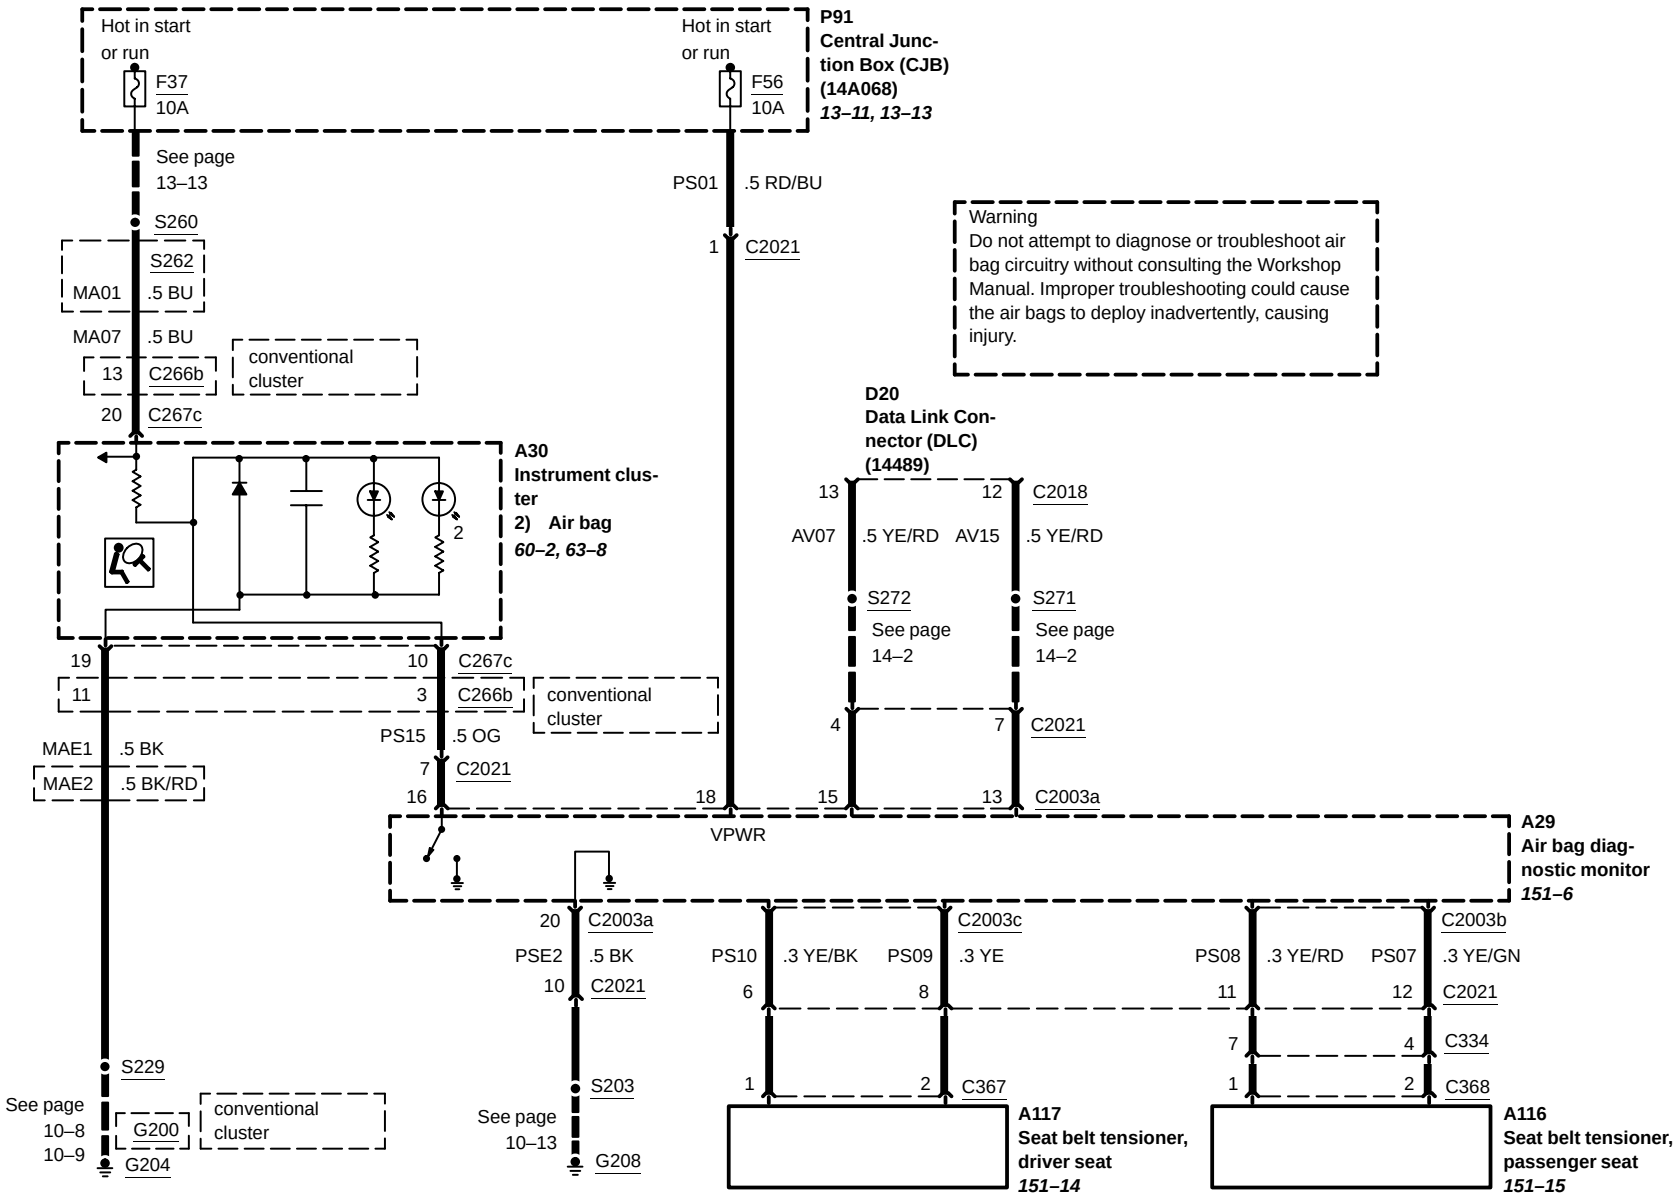
Hot in start or run
F37
10A
Hot in start or run
F56
10A
P91
Central Junction Box (CJB)
(14A068)
13–11, 13–13
See page 13–13
PS01 .5 RD/BU
1 C2021
S260
S262
MA01 .5 BU
MA07 .5 BU
13 C266b
conventional cluster
20 C267c
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
A30
Instrument cluster
2) Air bag
60–2, 63–8
D20
Data Link Connector (DLC)
(14489)
13 12 C2018
AV07 .5 YE/RD AV15 .5 YE/RD
S272 S271
See page 14–2
See page 14–2
19 10 C267c
11 3 C266b
conventional cluster
PS15 .5 OG
4 7 C2021
MAE1 .5 BK
MAE2 .5 BK/RD
7 C2021
16 18 15 13 C2003a
VPWR
A29
Air bag diagnostic monitor
151–6
20 C2003a
PSE2 .5 BK
10 C2021
PS10 .3 YE/BK PS09 .3 YE C2003c
6 8
PS08 .3 YE/RD PS07 .3 YE/GN C2003b
11 12 C2021
7 4 C334
1 2 C367
1 2 C368
S229
See page 10–8 10–9
G200
conventional cluster
G204
S203
See page 10–13
G208
A117
Seat belt tensioner, driver seat
151–14
A116
Seat belt tensioner, passenger seat
151–15