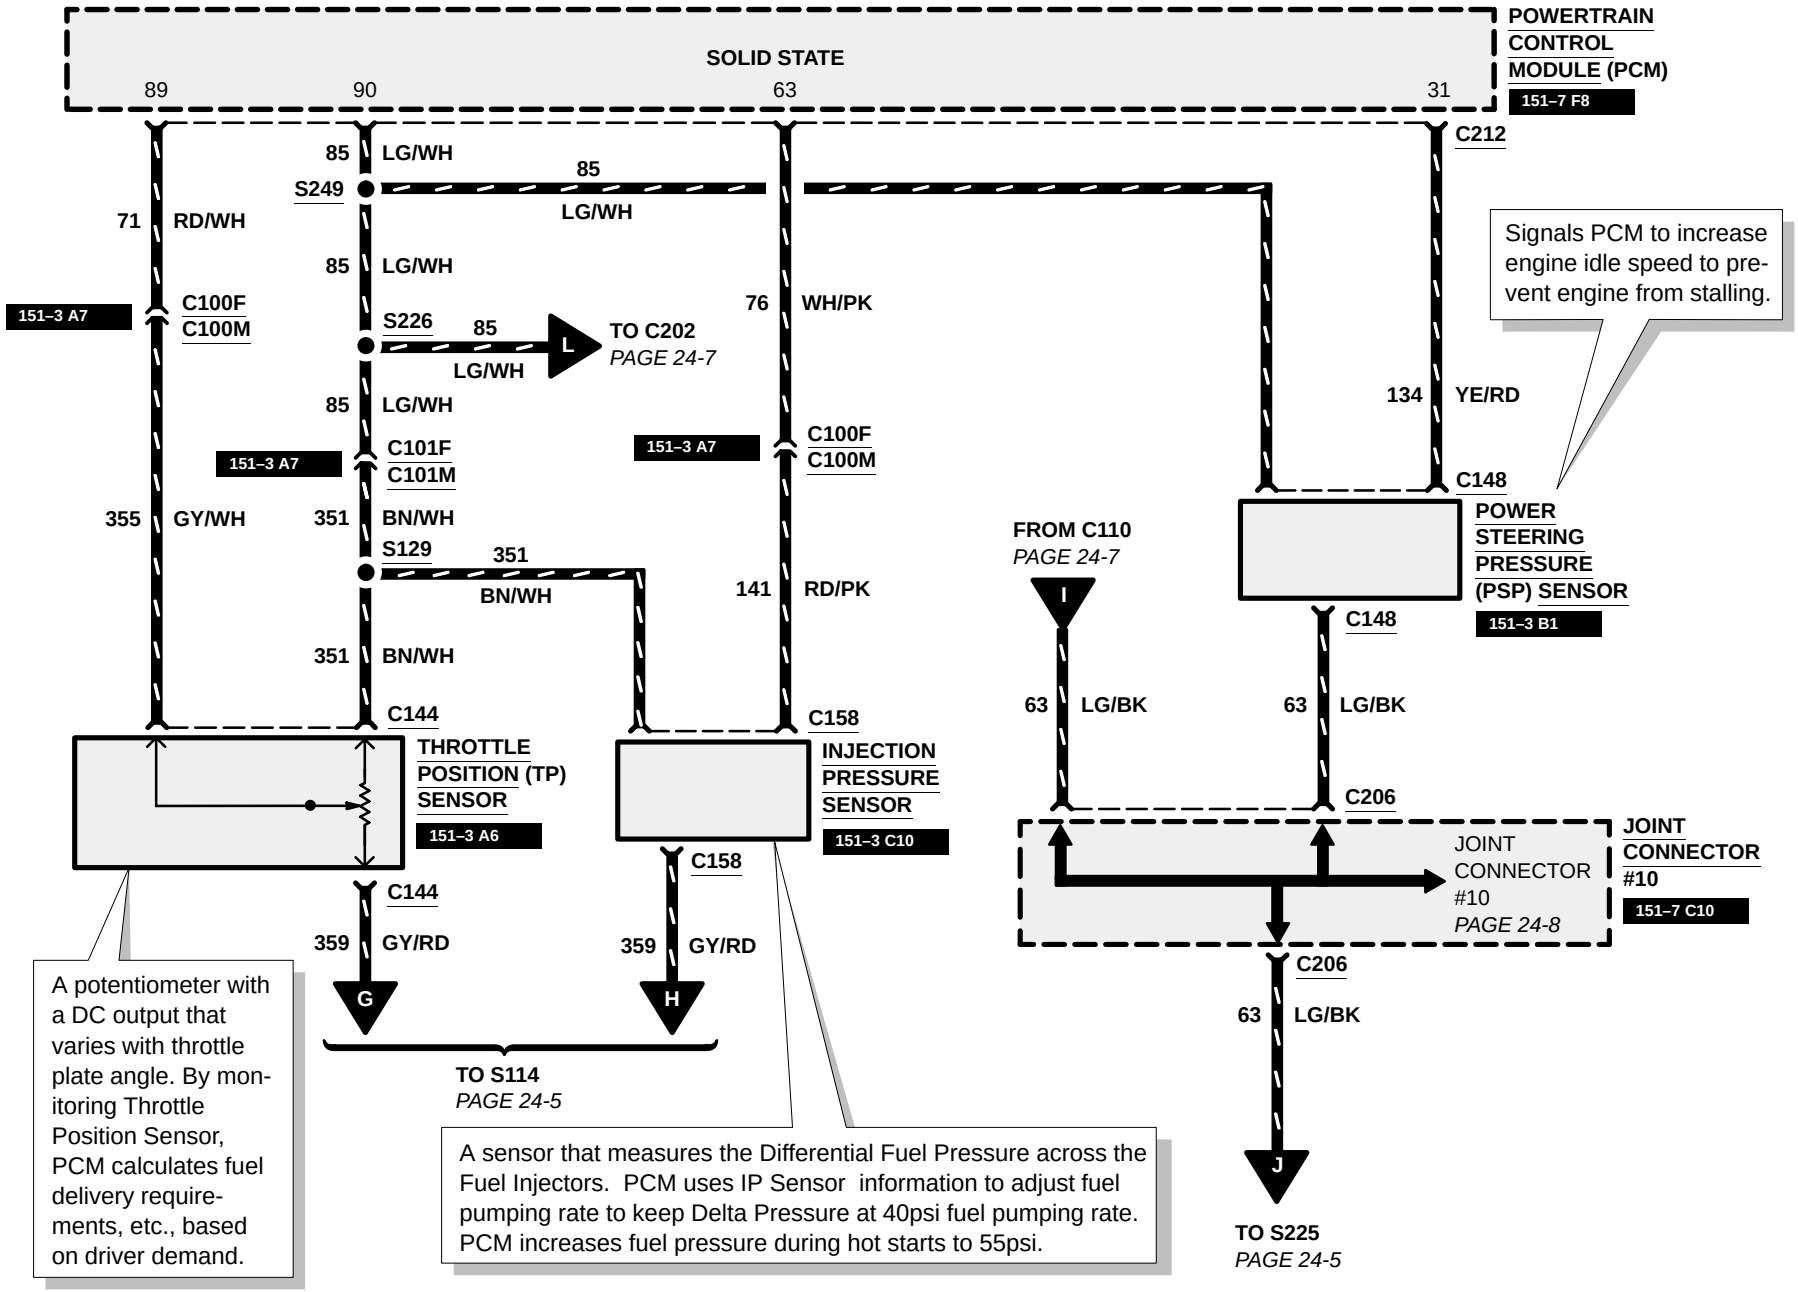
SOLID STATE
89
90
63
31
POWERTRAIN CONTROL MODULE (PCM)
151–7 F8
C212
85 LG/WH
S249
85 LG/WH
71 RD/WH
85 LG/WH
C100F
C100M
151–3 A7
S226
85 LG/WH
L
TO C202
PAGE 24-7
76 WH/PK
85 LG/WH
134 YE/RD
C101F
C101M
151–3 A7
C100F
C100M
151–3 A7
C148
355 GY/WH
351 BN/WH
S129
351 BN/WH
141 RD/PK
FROM C110
PAGE 24-7
I
POWER STEERING PRESSURE (PSP) SENSOR
151–3 B1
C148
351 BN/WH
63 LG/BK
63 LG/BK
C144
C158
C206
THROTTLE POSITION (TP) SENSOR
151–3 A6
INJECTION PRESSURE SENSOR
151–3 C10
JOINT CONNECTOR #10
PAGE 24-8
JOINT CONNECTOR #10
151–7 C10
C144
C158
C206
359 GY/RD
359 GY/RD
63 LG/BK
G
H
J
TO S114
PAGE 24-5
TO S225
PAGE 24-5
Signals PCM to increase engine idle speed to prevent engine from stalling.
A potentiometer with a DC output that varies with throttle plate angle. By monitoring Throttle Position Sensor, PCM calculates fuel delivery requirements, etc., based on driver demand.
A sensor that measures the Differential Fuel Pressure across the Fuel Injectors. PCM uses IP Sensor information to adjust fuel pumping rate to keep Delta Pressure at 40psi fuel pumping rate. PCM increases fuel pressure during hot starts to 55psi.