C310b

14A488

A208
Restraints control
module (14B321)

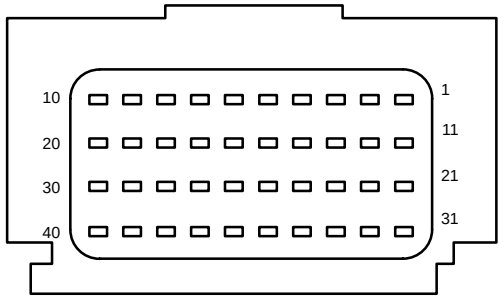

F40011

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	1257 (WH/LB)	Side air curtain module, driver, signal +
4	1258 (RD)	Side air curtain module, driver, signal –
5	1259 (WH/YE)	Side air curtain module, passenger, signal +
6	1260 (BN/YE)	Side air curtain module, driver, signal –
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	1261 (WH/LG)	Side air curtain sensor, driver 2, signal +
14	1262 (BN/LG)	Side air curtain sensor, driver 2, Sensor signal return (reference/ground)
15	1263 (WH)	Side air curtain sensor, passenger 2, signal +
16	1264 (BN)	Side air curtain sensor, passenger 2, Sensor signal return (reference/ground)
17	–	not used
18	–	not used
19	617 (PK/OG)	Forward crash sensor, signal +
20	618 (VT/LG)	Forward crash sensor, signal –

Pin	Circuit	Circuit function
21	–	not used
22	–	not used
23	1520 (LG)	Seat track position sensor, left, signal +
24	1558 (TN/BK)	Seat track position sensor, left, signal –
25	85 (BN/LB)	Safety belt buckle switch, driver, signal
26	178 (DG/OG)	Safety belt buckle switch, passenger, signal
27	1261 (WH/LG)	Side air curtain sensor, driver 1, signal +
28	1262 (BN/LG)	Side air curtain sensor, driver 1, signal –
29	1263 (WH)	Side air curtain sensor, passenger 1, signal +
30	1264 (BN)	Side air curtain sensor, passenger 1, signal –
31	1079 (LG/RD)	Driver safety belt retractor pretensioner, signal +
32	1080 (LG/BK)	Driver safety belt retractor pretensioner, signal –
33	1081 (YE/RD)	Passenger safety belt retractor pretensioner, signal +
34	1082 (YE/BK)	Passenger safety belt retractor pretensioner, signal –
35	–	not used
36	–	not used
37	–	not used
38	–	not used
39	–	not used
40	–	not used