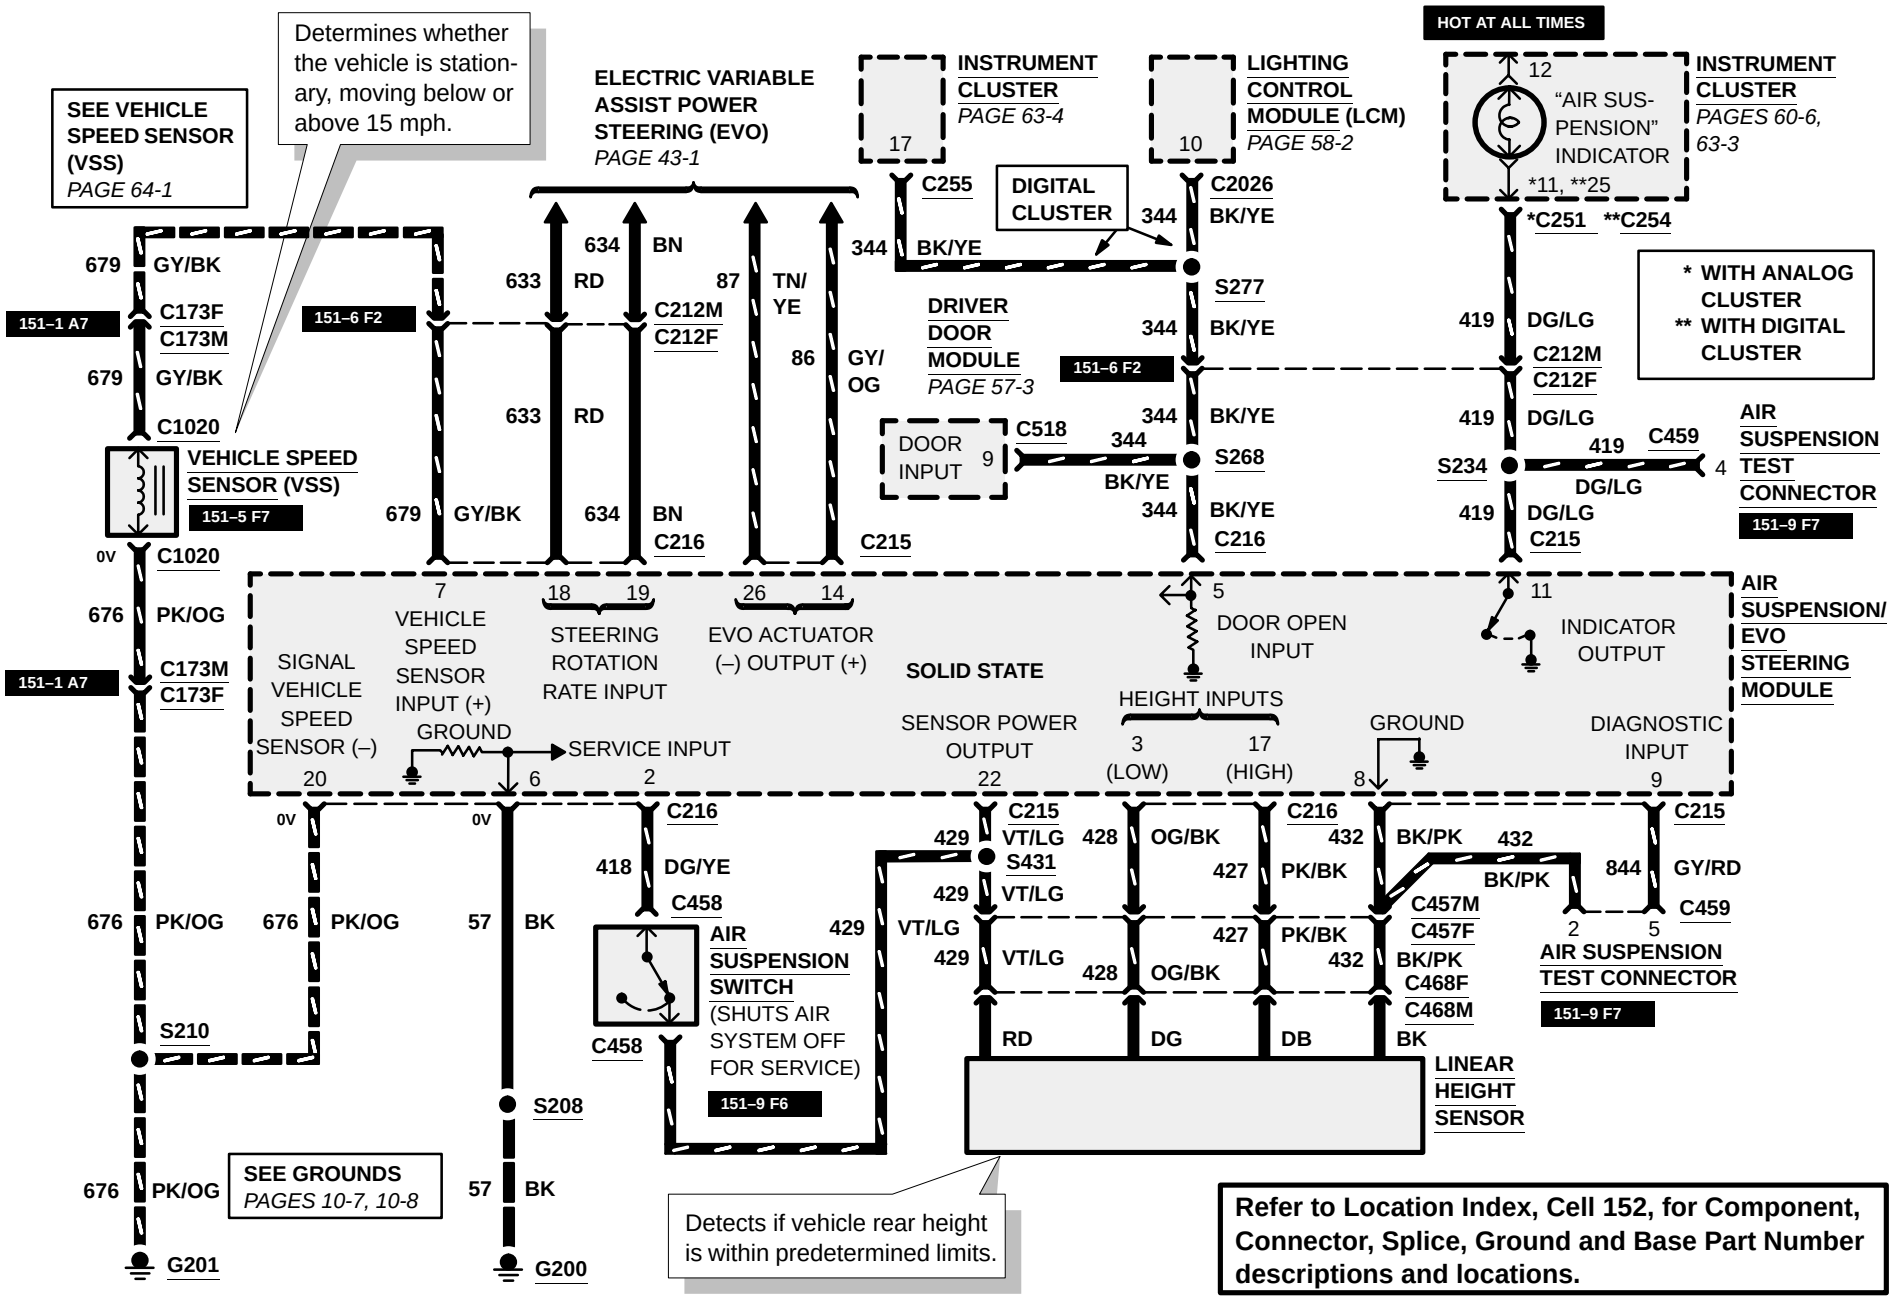
Determines whether the vehicle is stationary, moving below or above 15 mph.
SEE VEHICLE SPEED SENSOR (VSS) PAGE 64-1
ELECTRIC VARIABLE ASSIST POWER STEERING (EVO) PAGE 43-1
INSTRUMENT CLUSTER PAGE 63-4
LIGHTING CONTROL MODULE (LCM) PAGE 58-2
HOT AT ALL TIMES
INSTRUMENT CLUSTER PAGES 60-6, 63-3
"AIR SUSPENSION" INDICATOR
*11, **25
*C251 **C254
* WITH ANALOG CLUSTER
** WITH DIGITAL CLUSTER
DIGITAL CLUSTER
C255
C2026
BK/YE
S277
DRIVER DOOR MODULE PAGE 57-3
DOOR INPUT
C518
S268
C216
C215
679 GY/BK
C173F
C173M
C1020
VEHICLE SPEED SENSOR (VSS)
151–1 A7
151–5 F7
151–6 F2
151–9 F7
633 RD
634 BN
87 TN/YE
86 GY/OG
344 BK/YE
419 DG/LG
C212M
C212F
C459
S234
AIR SUSPENSION TEST CONNECTOR
0V
676 PK/OG
SIGNAL VEHICLE SPEED SENSOR (–)
VEHICLE SPEED SENSOR INPUT (+)
GROUND
STEERING ROTATION RATE INPUT
EVO ACTUATOR (–) OUTPUT (+)
SOLID STATE
DOOR OPEN INPUT
INDICATOR OUTPUT
AIR SUSPENSION/ EVO STEERING MODULE
SERVICE INPUT
SENSOR POWER OUTPUT
HEIGHT INPUTS
3 (LOW)
17 (HIGH)
DIAGNOSTIC INPUT
418 DG/YE
C458
AIR SUSPENSION SWITCH (SHUTS AIR SYSTEM OFF FOR SERVICE)
429 VT/LG
428 OG/BK
427 PK/BK
432 BK/PK
844 GY/RD
C457M
C457F
C468F
C468M
RD
DG
DB
BK
LINEAR HEIGHT SENSOR
S210
S208
57 BK
SEE GROUNDS PAGES 10-7, 10-8
G201
G200
Detects if vehicle rear height is within predetermined limits.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.