C803

14632

M117
Power window motor, right rear (23394)

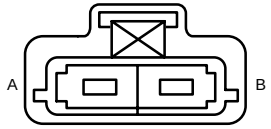

F02311

Pin	Circuit	Circuit function
A	884 (YE/BK)	Window switch, to, Window motor, right rear
B	885 (YE/LB)	Window switch, to, Window motor, right rear

C804

14632/19A017

M65
Door lock actuator, right rear (218A42)

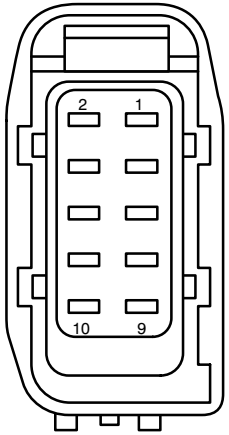

F10089

Pin	Circuit	Circuit function
1	–	not used
2	117 (PK/BK)	Door lock, output
3	–	not used
4	–	not used
5	–	not used
6	57 (BK)	Ground
7	–	not used
8	760 (PK/LB)	Door ajar switch, right rear
9	–	not used
10	118 (PK/OG)	Door unlock, output

C912

PIA

N411
Roof opening panel switch (15B691)



F03211

Pin	Circuit	Circuit function
1	Q41 (WH)	Switched between: Battery voltage, Ground or Open
2	Z1 (BK)	Ground
3	Q43 (VT)	Switched between: Battery voltage, Ground or Open

C918

14334

E18
Interior lamp, front

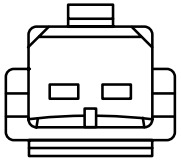

F02233

Pin	Circuit	Circuit function
1	1005 (VT/OG)	Generic Electronic Module (GEM) (14B205), to, Interior lamps
2	1008 (LG/OG)	Interior lamp relay, control