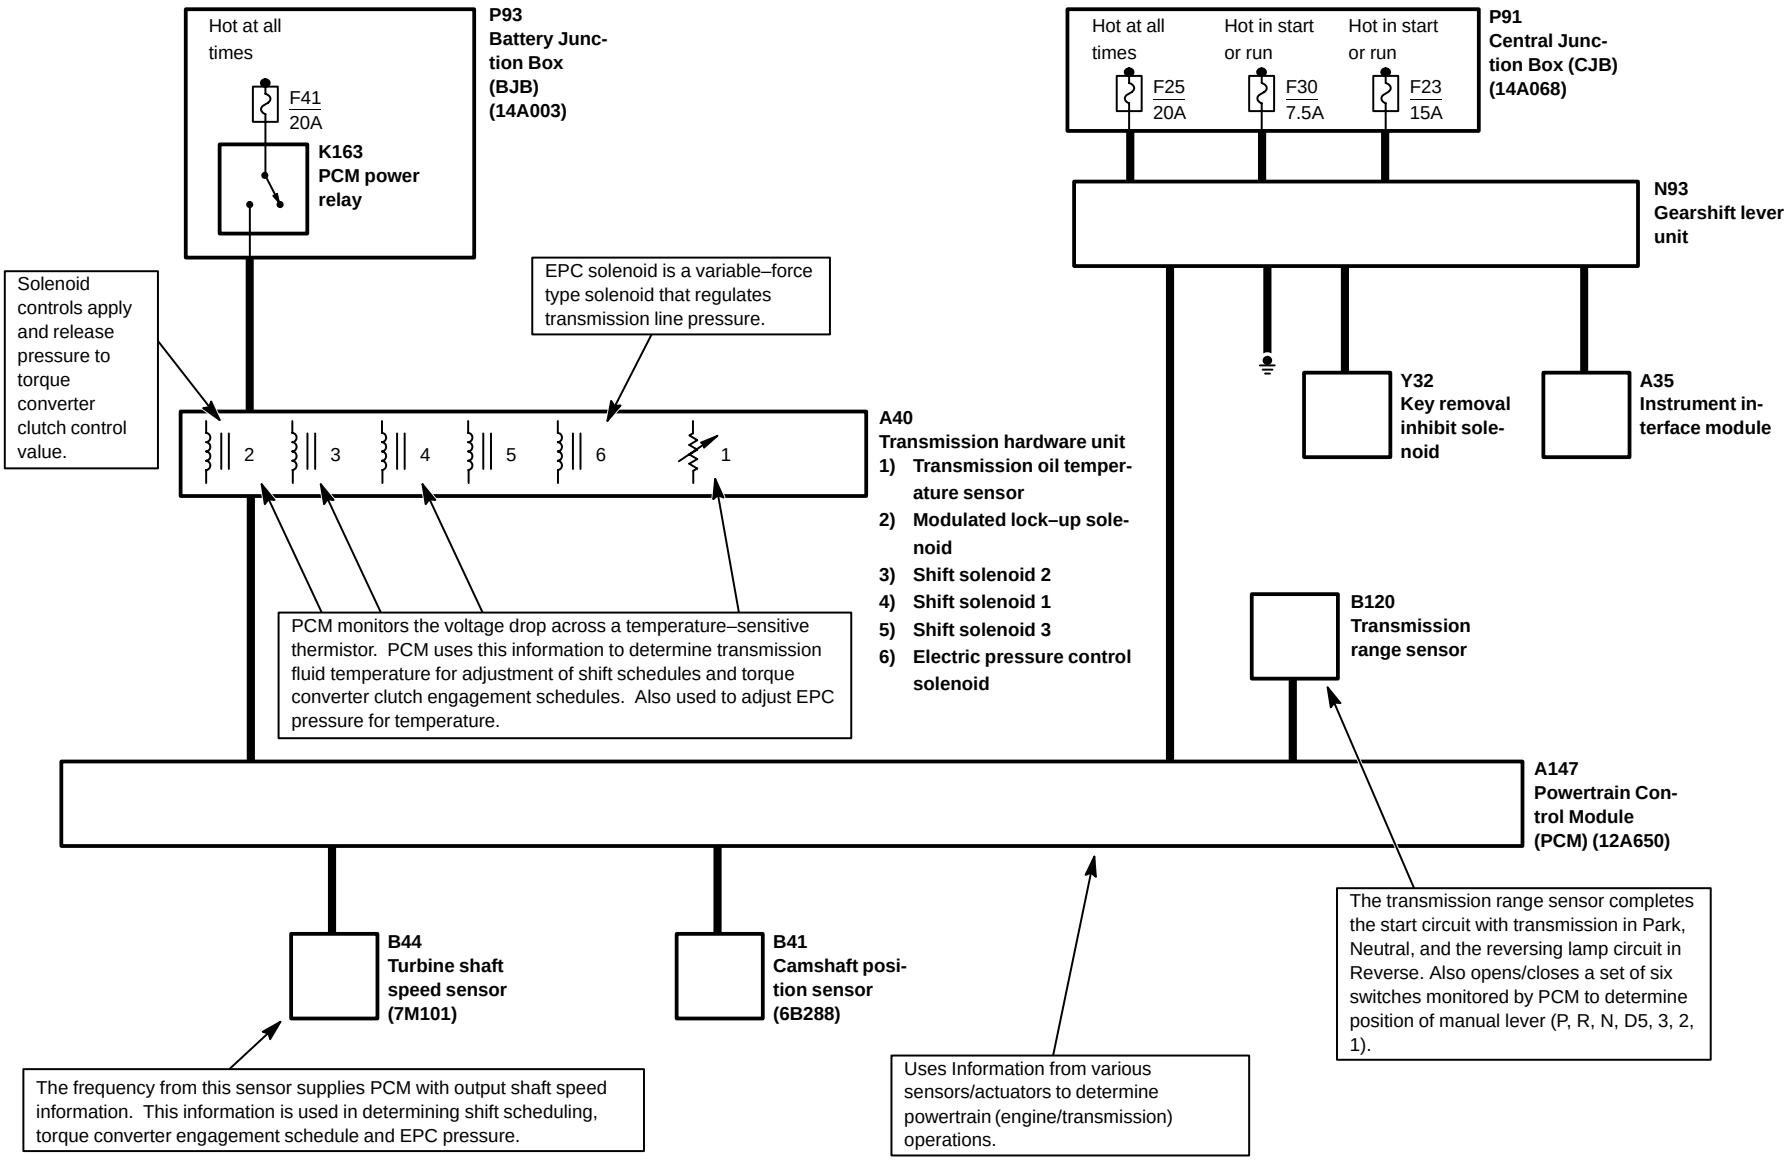
Hot at all times
F41
20A
K163
PCM power relay
P93
Battery Junction Box
(BJB)
(14A003)
Hot at all times
Hot in start or run
Hot in start or run
F25
20A
F30
7.5A
F23
15A
P91
Central Junction Box (CJB)
(14A068)
N93
Gearshift lever unit
Solenoid controls apply and release pressure to torque converter clutch control value.
EPC solenoid is a variable–force type solenoid that regulates transmission line pressure.
2
3
4
5
6
1
A40
Transmission hardware unit
1) Transmission oil temperature sensor
2) Modulated lock–up solenoid
3) Shift solenoid 2
4) Shift solenoid 1
5) Shift solenoid 3
6) Electric pressure control solenoid
Y32
Key removal inhibit solenoid
A35
Instrument interface module
PCM monitors the voltage drop across a temperature–sensitive thermistor. PCM uses this information to determine transmission fluid temperature for adjustment of shift schedules and torque converter clutch engagement schedules. Also used to adjust EPC pressure for temperature.
B120
Transmission range sensor
A147
Powertrain Control Module
(PCM) (12A650)
B44
Turbine shaft speed sensor
(7M101)
B41
Camshaft position sensor
(6B288)
The transmission range sensor completes the start circuit with transmission in Park, Neutral, and the reversing lamp circuit in Reverse. Also opens/closes a set of six switches monitored by PCM to determine position of manual lever (P, R, N, D5, 3, 2, 1).
The frequency from this sensor supplies PCM with output shaft speed information. This information is used in determining shift scheduling, torque converter engagement schedule and EPC pressure.
Uses Information from various sensors/actuators to determine powertrain (engine/transmission) operations.