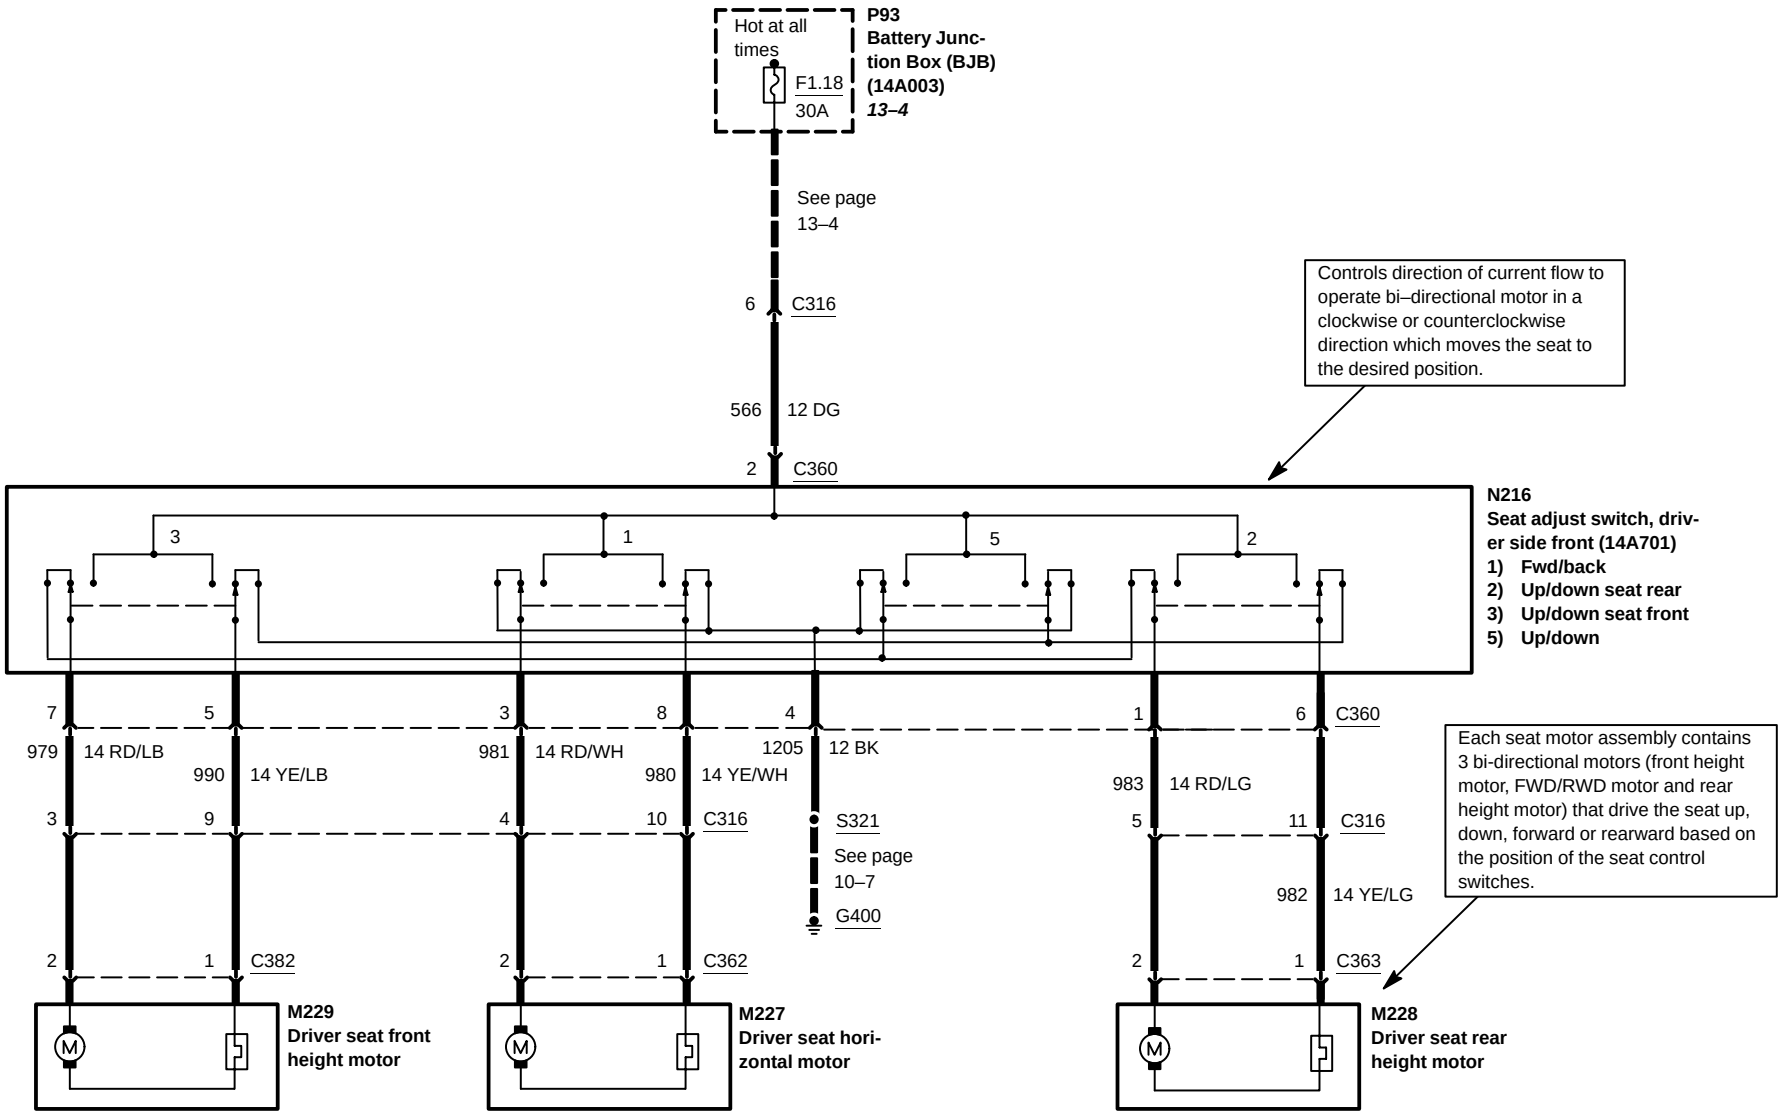
Hot at all times
F1.18
30A
P93
Battery Junction Box (BJB)
(14A003)
13–4
See page 13–4
6 C316
566 12 DG
2 C360
Controls direction of current flow to operate bi–directional motor in a clockwise or counterclockwise direction which moves the seat to the desired position.
N216
Seat adjust switch, driver side front (14A701)
1) Fwd/back
2) Up/down seat rear
3) Up/down seat front
5) Up/down
3
1
5
2
7 5 979 14 RD/LB 990 14 YE/LB
3 9
2 1 C382
M229
Driver seat front height motor
3 8 981 14 RD/WH
4 10 C316
980 14 YE/WH
4 1205 12 BK
S321
See page 10–7
G400
2 1 C362
M227
Driver seat horizontal motor
1 6 C360
983 14 RD/LG
5 11 C316
982 14 YE/LG
2 1 C363
M228
Driver seat rear height motor
Each seat motor assembly contains 3 bi-directional motors (front height motor, FWD/RWD motor and rear height motor) that drive the seat up, down, forward or rearward based on the position of the seat control switches.