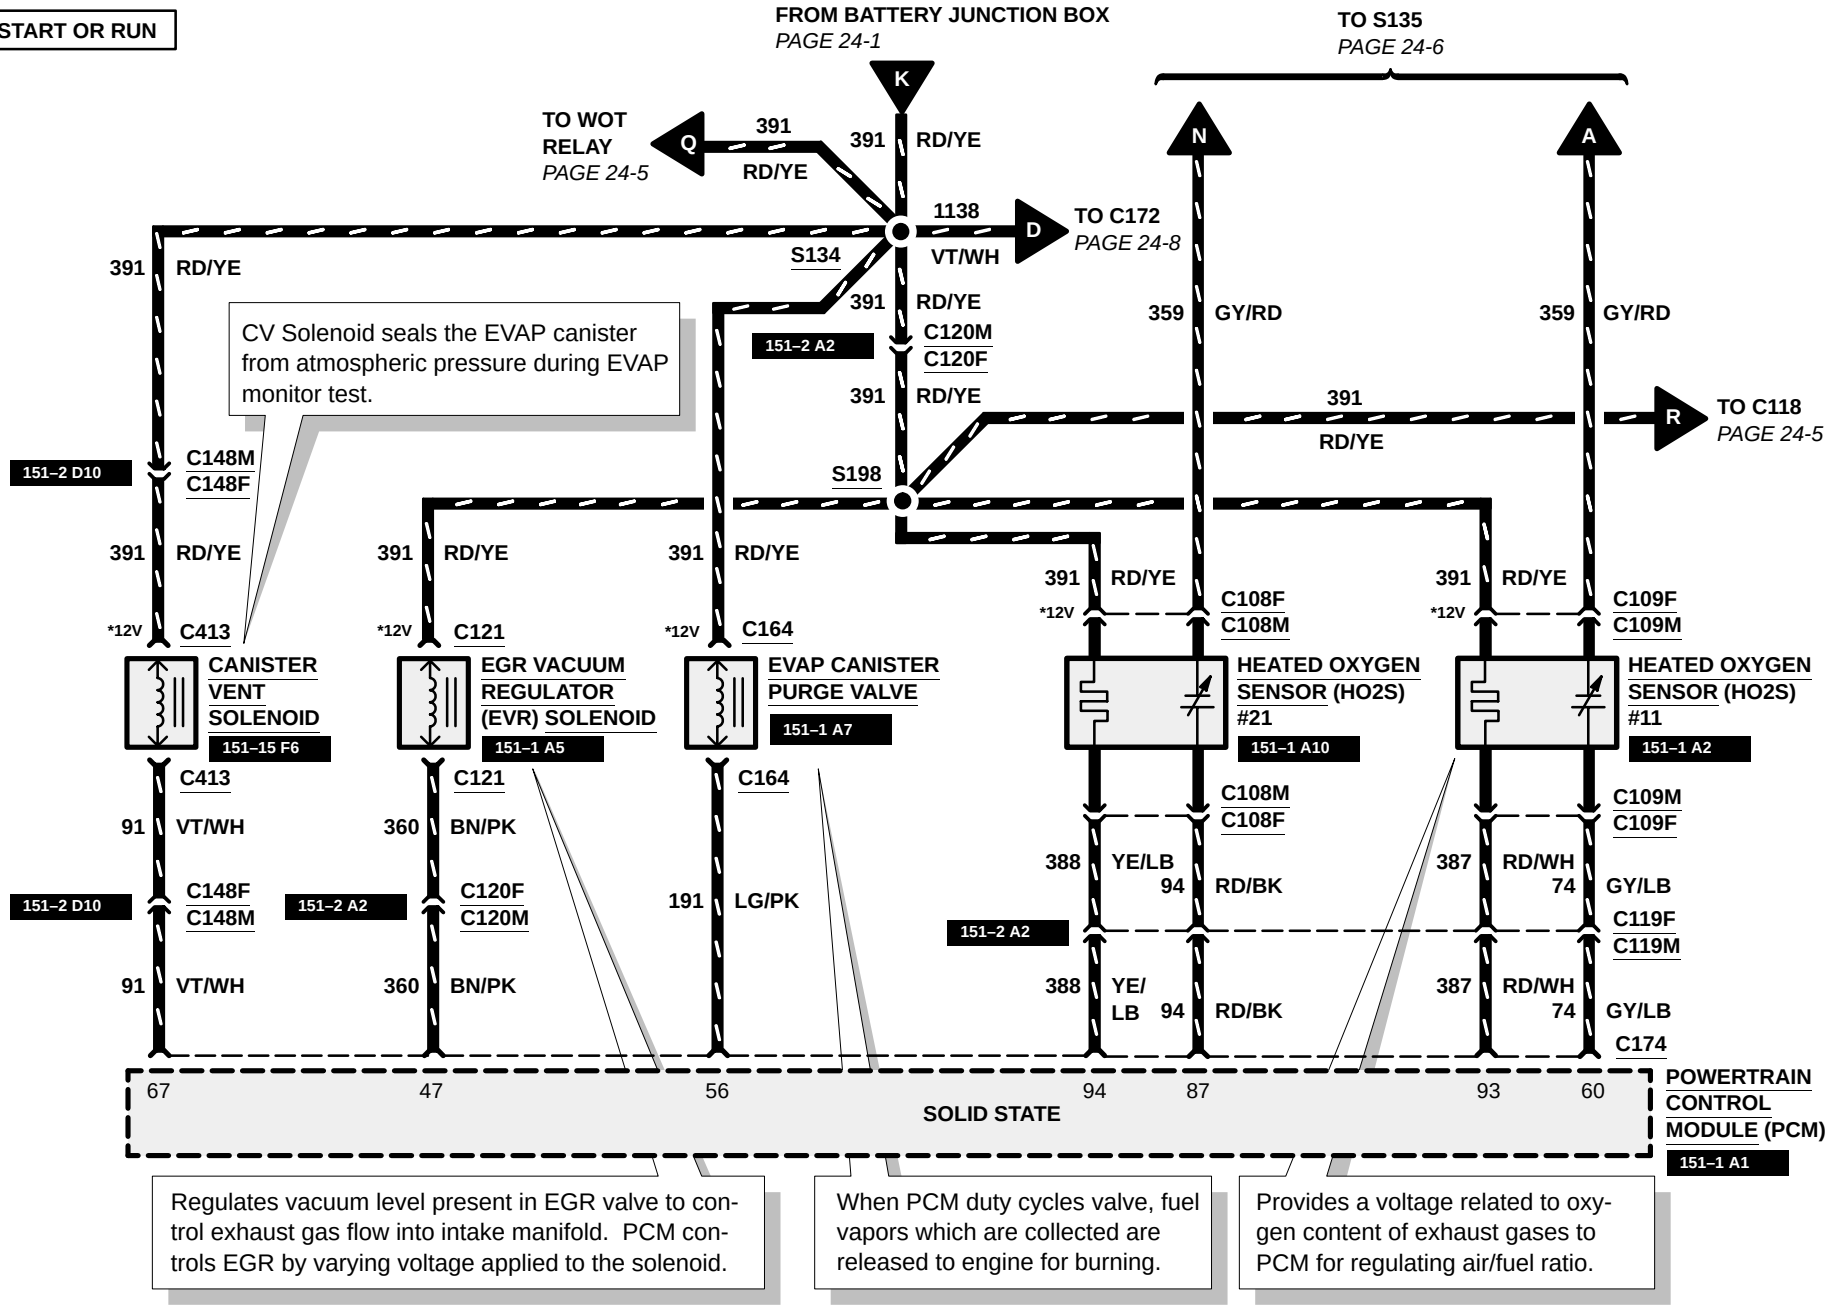
* START OR RUN
FROM BATTERY JUNCTION BOX
PAGE 24-1
TO S135
PAGE 24-6
K
TO WOT RELAY
PAGE 24-5
Q
391 RD/YE
391 RD/YE
1138 VT/WH
D
TO C172
PAGE 24-8
N
A
391 RD/YE
S134
391 RD/YE
359 GY/RD
359 GY/RD
CV Solenoid seals the EVAP canister from atmospheric pressure during EVAP monitor test.
151–2 A2
C120M
C120F
391 RD/YE
391 RD/YE
R
TO C118
PAGE 24-5
151–2 D10
C148M
C148F
S198
391 RD/YE
391 RD/YE
391 RD/YE
391 RD/YE
391 RD/YE
*12V
C413
*12V
C121
*12V
C164
*12V
C108F
C108M
*12V
C109F
C109M
CANISTER VENT SOLENOID
151–15 F6
EGR VACUUM REGULATOR (EVR) SOLENOID
151–1 A5
EVAP CANISTER PURGE VALVE
151–1 A7
HEATED OXYGEN SENSOR (HO2S) #21
151–1 A10
HEATED OXYGEN SENSOR (HO2S) #11
151–1 A2
C413
C121
C164
C108M
C108F
C109M
C109F
91 VT/WH
360 BN/PK
388 YE/LB
94 RD/BK
387 RD/WH
74 GY/LB
151–2 D10
C148F
C148M
151–2 A2
C120F
C120M
191 LG/PK
151–2 A2
C119F
C119M
91 VT/WH
360 BN/PK
388 YE/LB
94 RD/BK
387 RD/WH
74 GY/LB
C174
67
47
56
94
87
93
60
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A1
Regulates vacuum level present in EGR valve to control exhaust gas flow into intake manifold. PCM controls EGR by varying voltage applied to the solenoid.
When PCM duty cycles valve, fuel vapors which are collected are released to engine for burning.
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.