C3041b

19A170

A14
Subwoofer amplifier
(18C804)

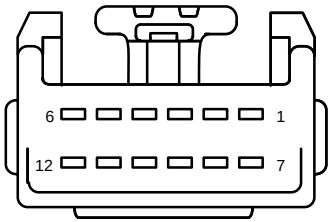

F12075

Pin	Circuit	Circuit function
1	176 (PK/LG)	Subwoofer +
2	179 (OG/RD)	Subwoofer –
3	–	not used
4	–	not used
5	–	not used
6	813 (LB/WH)	Speaker, left front (18808) –
7	805 (WH/LG)	Speaker, right front (18808) +
8	–	not used
9	829 (WH/VT)	Remote
10	–	not used
11	811 (DG/OG)	Speaker, right front (18808) –
12	804 (OG/LG)	Speaker, left front (18808) +

C3041c

19A170

A14
Subwoofer amplifier
(18C804)

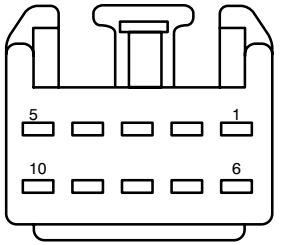

F10063

Pin	Circuit	Circuit function
1	172 (LB/RD)	Radio (18806), input, Subwoofer –
2	–	not used
3	820 (DB/YE)	Radio (18806), input, Speaker, left front (18808) +
4	816 (LG/VT)	Radio (18806), input, Speaker, right front (18808) +
5	819 (LG/WH)	Radio (18806), input, Speaker, left front (18808) –
6	–	not used
7	815 (LG/OG)	Radio (18806), input, Speaker, right front (18808) –
8	169 (LG/BK)	Radio (18806), input, Subwoofer +
9	–	not used
10	–	not used

C3061

14405

N253
4x4 Mode switch

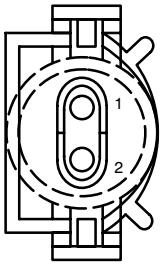

F02031

Pin	Circuit	Circuit function
1	784 (LB/BK)	Four–wheel drive, indicator, Low
2	783 (GY)	Four–wheel drive, indicator, High