C183

12B637

Y110
Injector 3 (9F593)

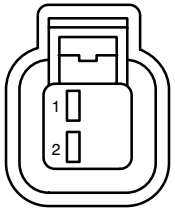

F02069

Pin	Circuit	Circuit Function
1	91S-RL12 (BN/RD)	Ground, Switched
2	15S-RL12 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C184

12B637

Y111
Injector 4 (9F593)

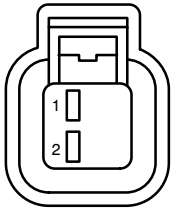

F02069

Pin	Circuit	Circuit Function
1	91S-RL13 (BN/BU)	Ground, Switched
2	15S-RL13 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C185

12B637

Y112
Injector 5 (9F593)

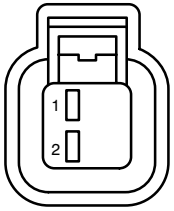

F02069

Pin	Circuit	Circuit Function
1	91S-RL14 (BN/GN)	Ground, Switched
2	15S-RL14 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C186

12B637

Y113
Injector 6 (9F593)

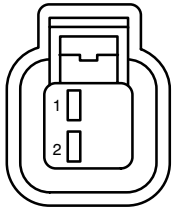

F02069

Pin	Circuit	Circuit Function
1	91S-RL15 (BN/YE)	Ground, Switched
2	15S-RL15 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C187

12B637

Y207
Injector 7 (9F593)

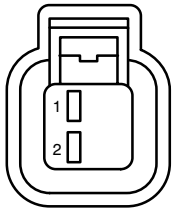

F02069

Pin	Circuit	Circuit Function
1	91S-RL16 (BN/WH)	Ground, Switched
2	15S-RL16 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C188

12B37

Y209
Injector 8 (9F593)

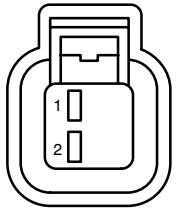

F02069

Pin	Circuit	Circuit Function
1	91S-RL17 (BN)	Ground, Switched
2	15S-RL17 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched