20-1 STARTING SYSTEM

For diagnostic information, refer to Section 303-06 of the Workshop Manual.
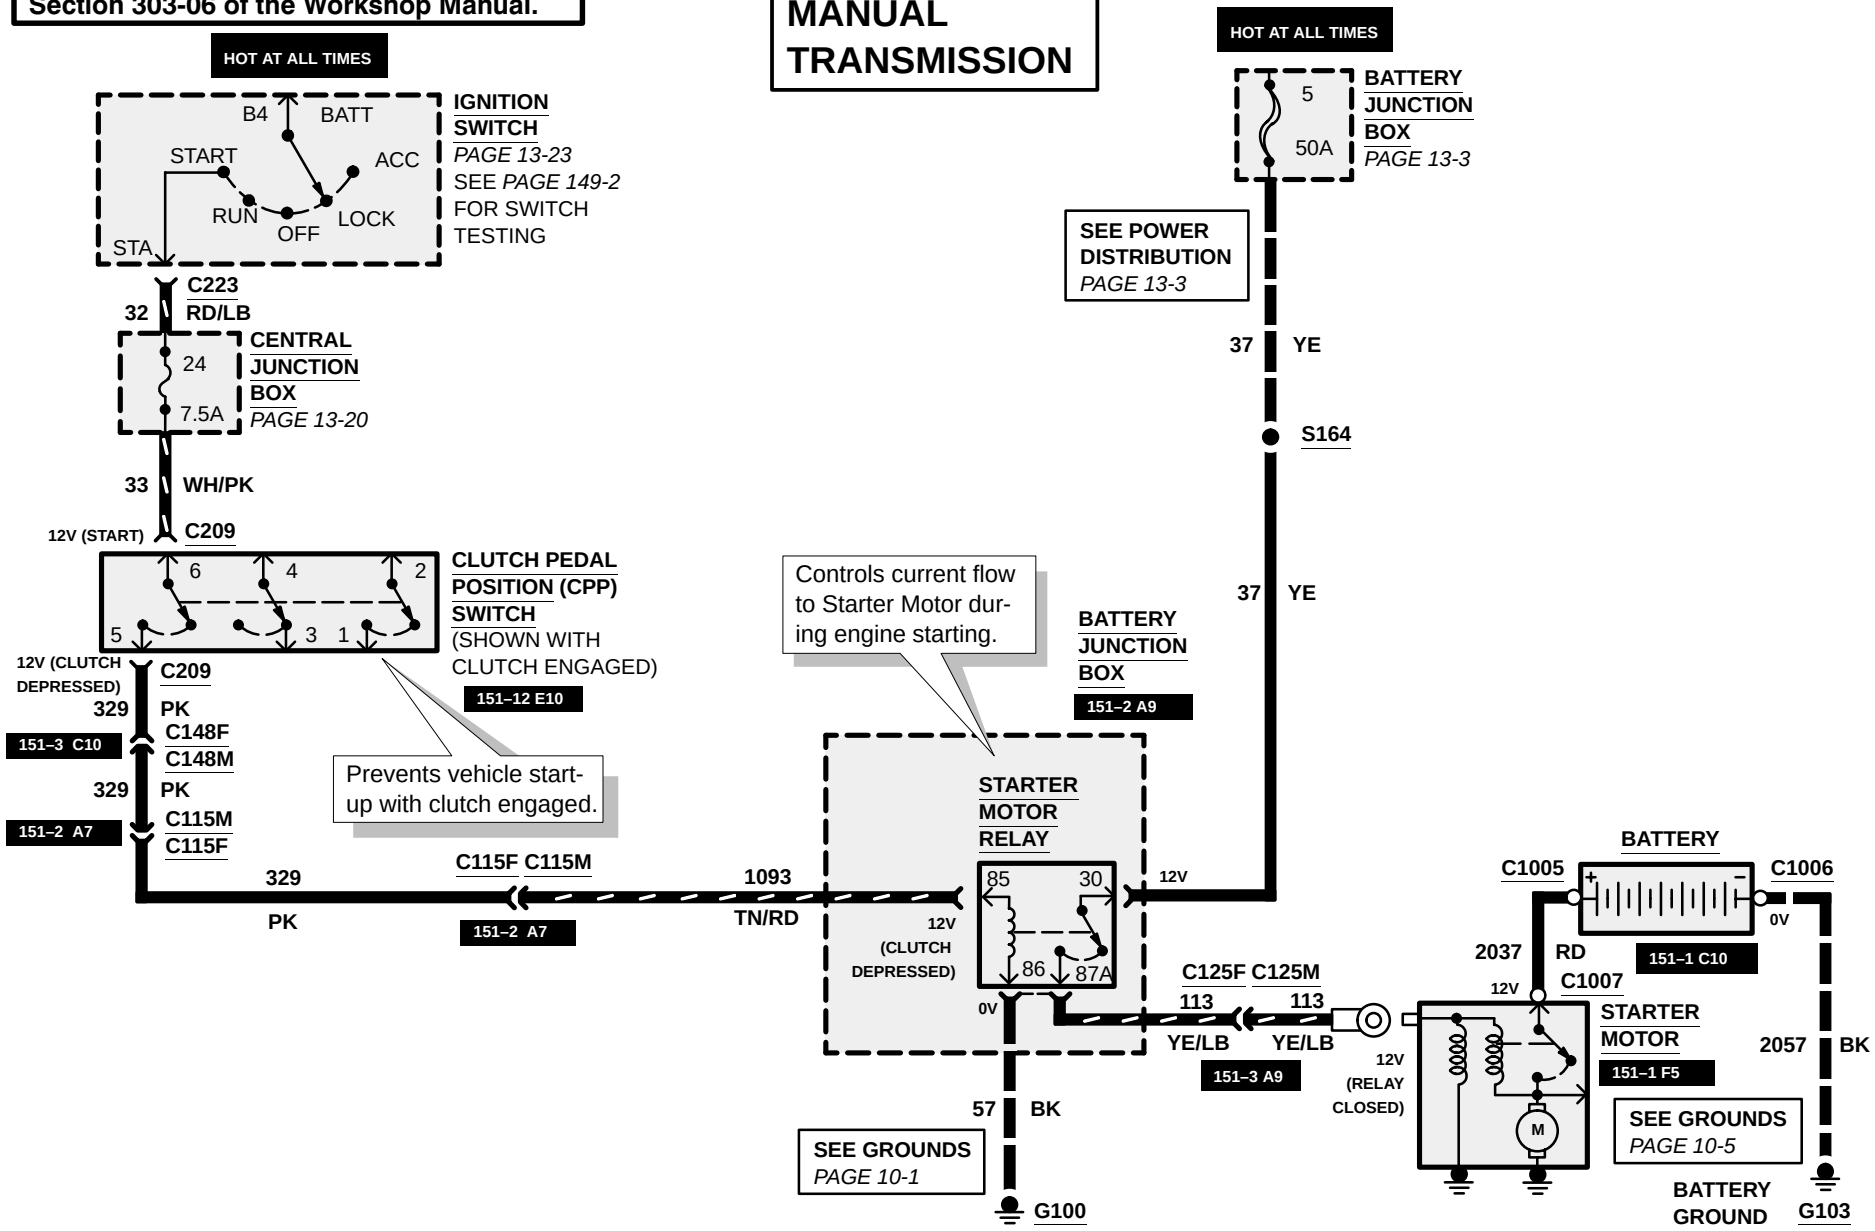
MANUAL TRANSMISSION