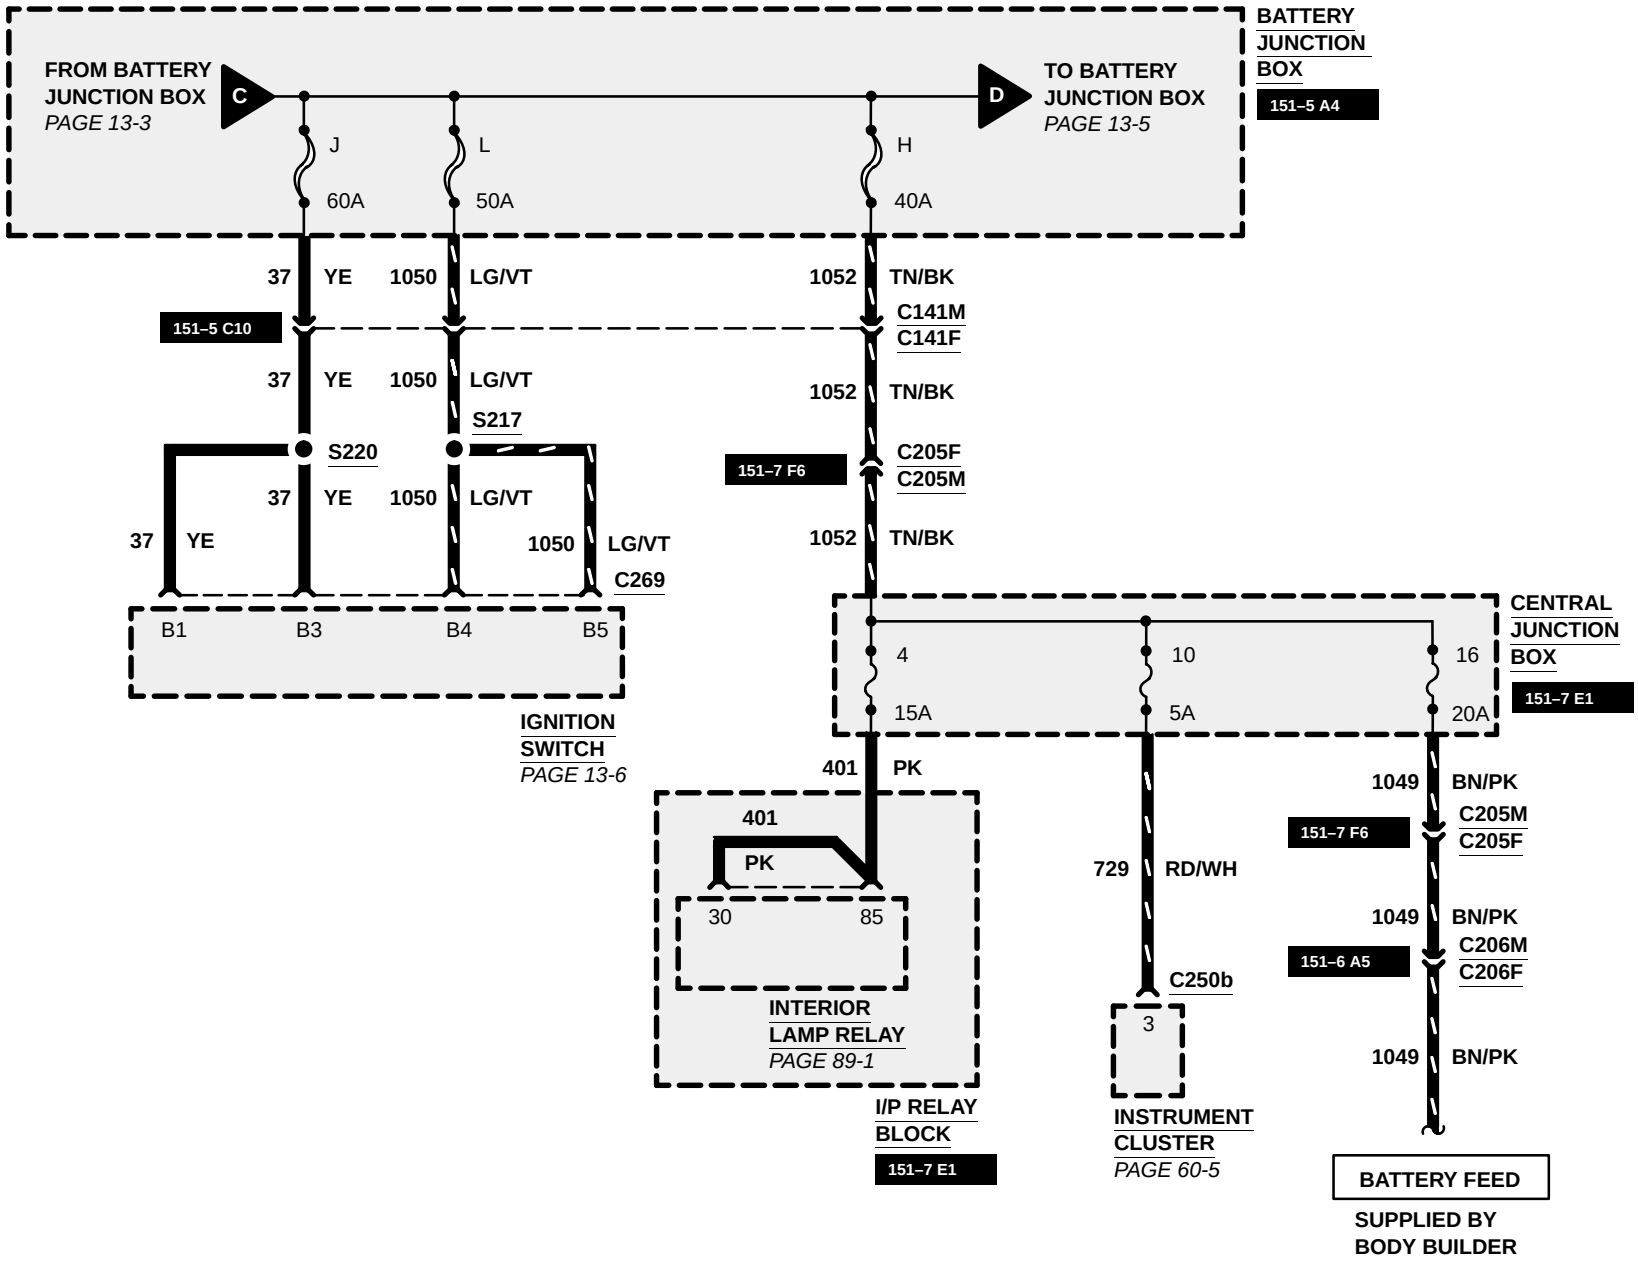
FROM BATTERY JUNCTION BOX
C
PAGE 13-3
D
TO BATTERY JUNCTION BOX
PAGE 13-5
BATTERY JUNCTION BOX
151–5 A4
J
60A
L
50A
H
40A
37 YE
1050 LG/VT
1052 TN/BK
151–5 C10
C141M
C141F
S217
S220
C205F
C205M
151–7 F6
C269
B1
B3
B4
B5
IGNITION SWITCH
PAGE 13-6
CENTRAL JUNCTION BOX
151–7 E1
4
15A
10
5A
16
20A
401 PK
1049 BN/PK
C205M
C205F
151–7 F6
C206M
C206F
151–6 A5
729 RD/WH
C250b
3
30
85
INTERIOR LAMP RELAY
PAGE 89-1
I/P RELAY BLOCK
151–7 E1
INSTRUMENT CLUSTER
PAGE 60-5
BATTERY FEED
SUPPLIED BY BODY BUILDER