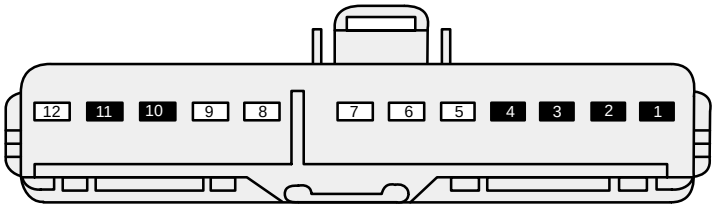

C250a

INSTRUMENT CLUSTER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	–	NOT USED
3	–	NOT USED
4	–	NOT USED
5	128 (VT/YE)	Brake Fluid Level Unit to Message Sensor
6	886 (OG/BK)	ABS Acceleration Switch Signal #1
7	1044 (WH/YE)	Alternator Charge (Hot in Start or Run) (Positive)
8	904 (LG/RD)	Alternator Charge Signal (Ground)
9	112 (BK/YE)	Warning Lamp Relay Feed
10	–	NOT USED
11	–	NOT USED
12	640 (RD/YE)	Power (Hot in Start and Run)

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C215	25-12
C232	47-2
C269	13-13
C1040	42-4
C1067	31-3