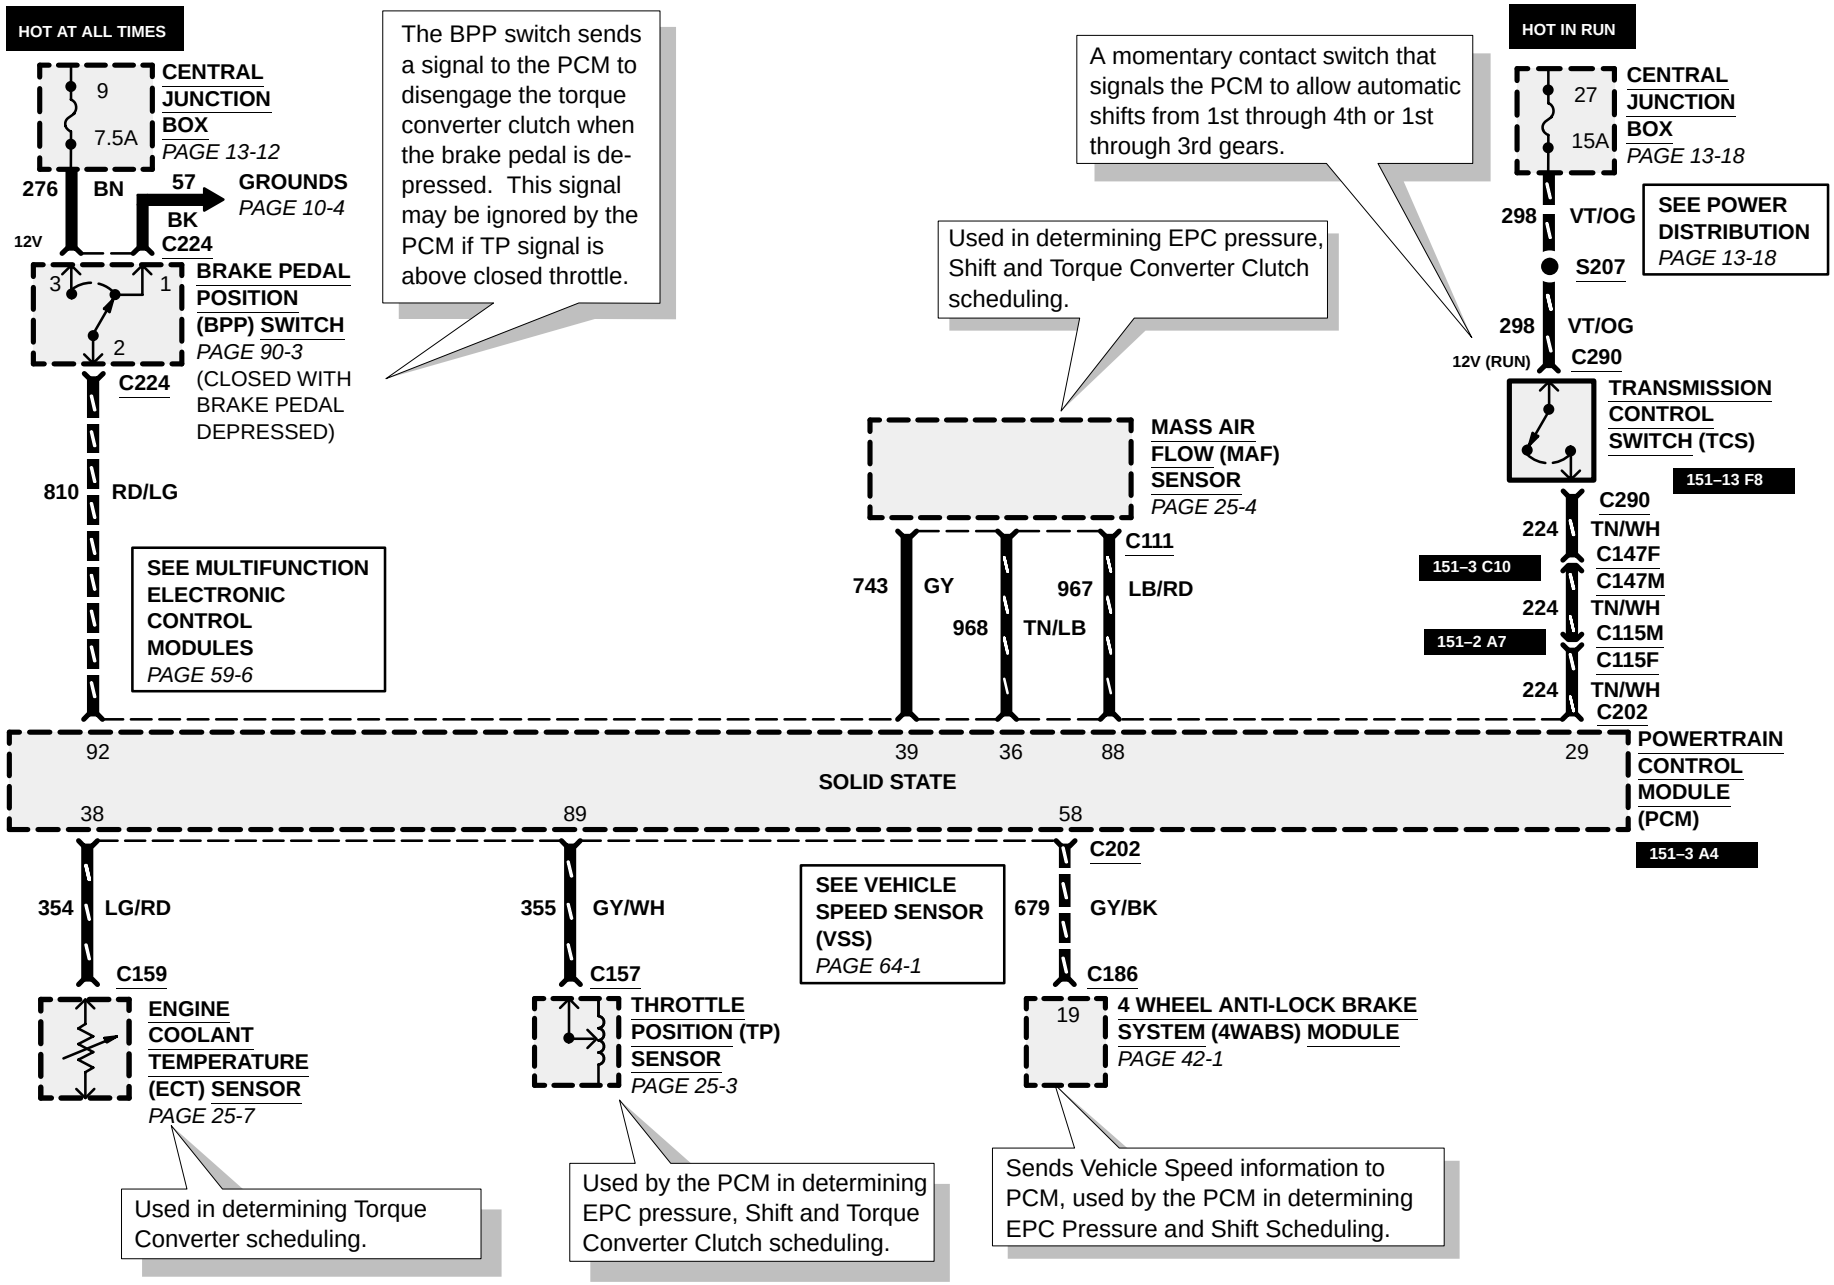
HOT AT ALL TIMES
9
7.5A
CENTRAL JUNCTION BOX
PAGE 13-12
276
BN
57
GROUNDS
PAGE 10-4
BK
C224
12V
3
1
2
BRAKE PEDAL POSITION (BPP) SWITCH
PAGE 90-3
(CLOSED WITH BRAKE PEDAL DEPRESSED)
C224
810
RD/LG
SEE MULTIFUNCTION ELECTRONIC CONTROL MODULES
PAGE 59-6
The BPP switch sends a signal to the PCM to disengage the torque converter clutch when the brake pedal is depressed. This signal may be ignored by the PCM if TP signal is above closed throttle.
Used in determining EPC pressure, Shift and Torque Converter Clutch scheduling.
MASS AIR FLOW (MAF) SENSOR
PAGE 25-4
C111
743
GY
968
TN/LB
967
LB/RD
A momentary contact switch that signals the PCM to allow automatic shifts from 1st through 4th or 1st through 3rd gears.
HOT IN RUN
27
15A
CENTRAL JUNCTION BOX
PAGE 13-18
298
VT/OG
SEE POWER DISTRIBUTION
PAGE 13-18
S207
298
VT/OG
12V (RUN)
C290
TRANSMISSION CONTROL SWITCH (TCS)
151–13 F8
C290
224
TN/WH
C147F
151–3 C10
C147M
224
TN/WH
C115M
151–2 A7
C115F
224
TN/WH
C202
92
39
36
88
29
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–3 A4
38
89
58
354
LG/RD
355
GY/WH
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
C202
679
GY/BK
C159
C157
C186
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
PAGE 25-7
THROTTLE POSITION (TP) SENSOR
PAGE 25-3
19
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-1
Used in determining Torque Converter scheduling.
Used by the PCM in determining EPC pressure, Shift and Torque Converter Clutch scheduling.
Sends Vehicle Speed information to PCM, used by the PCM in determining EPC Pressure and Shift Scheduling.