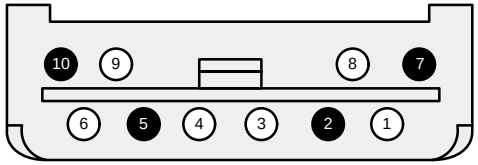

C207

MEMORY SET SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	270 (BN/OG)	Set Signal
2	–	NOT USED
3	268 (BK/OG)	Position #2
4	267 (BN/LG)	Position #1
5	–	NOT USED
6	956 (OG/LG)	Power (Hot at All Times)
7	–	NOT USED
8	272 (WH/OG)	Lamp Drive
9	1205 (BK)	Ground
10	–	NOT USED

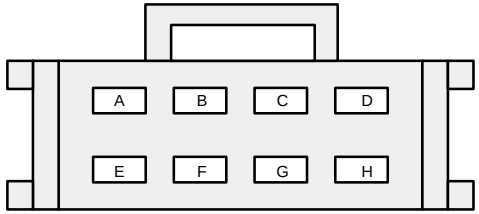

C309

LEFT SEAT CONTROL SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
A	1463 (RD/YE)	Seat Front Up Switch Signal
B	1467 (GY/YE)	Seat Rear Down Switch Signal
C	1468 (GY/LB)	Seat Rear Up Switch Signal
D	1464 (YE)	Seat Front Down Switch Signal
E	1205 (BK)	Ground
F	1466 (GY/OG)	Seat Forward Switch Signal
G	1465 (GY/WH)	Seat Rearward Switch Signal
H	956 (OG/LG)	Power Feed (Hot at All Times)