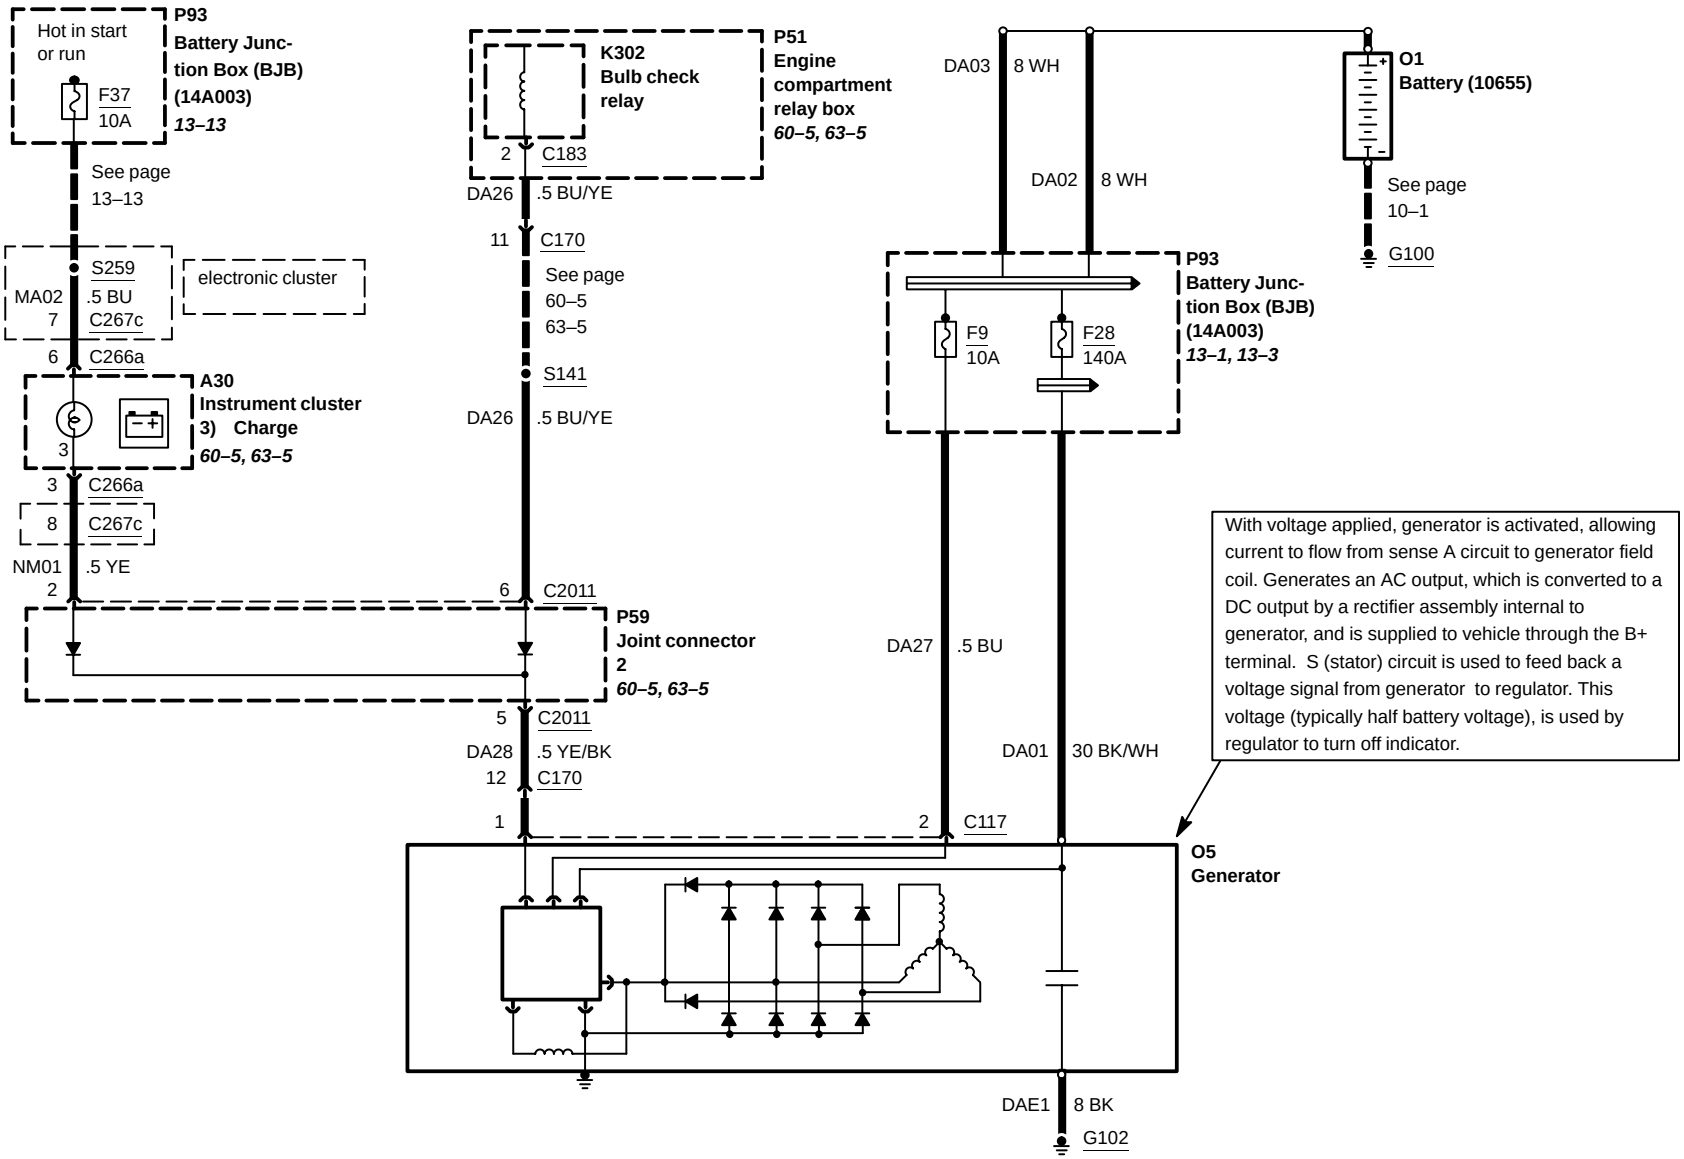
P93
Battery Junction Box (BJB)
(14A003)
13–13
Hot in start or run
F37
10A
See page 13–13
S259
MA02 .5 BU
7 C267c
6 C266a
electronic cluster
A30
Instrument cluster
3) Charge
60–5, 63–5
3 C266a
8 C267c
NM01 .5 YE
2
P51
Engine compartment relay box
60–5, 63–5
K302
Bulb check relay
2 C183
DA26 .5 BU/YE
11 C170
See page 60–5 63–5
S141
DA26 .5 BU/YE
6 C2011
P59
Joint connector 2
60–5, 63–5
5 C2011
DA28 .5 YE/BK
12 C170
1
DA03 8 WH
DA02 8 WH
O1
Battery (10655)
See page 10–1
G100
P93
Battery Junction Box (BJB)
(14A003)
13–1, 13–3
F9
10A
F28
140A
DA27 .5 BU
DA01 30 BK/WH
2 C117
O5
Generator
DAE1 8 BK
G102
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.