Supercrewzer Headlamp switch, Interior lamps

Schematic

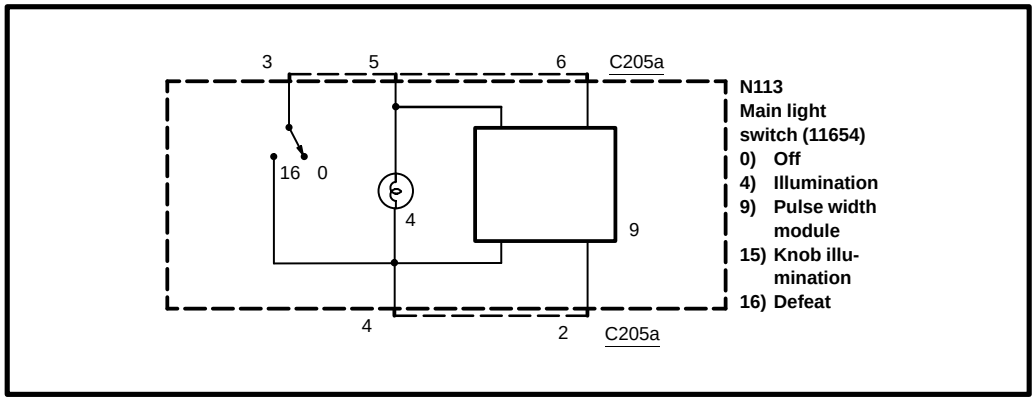

Terminals

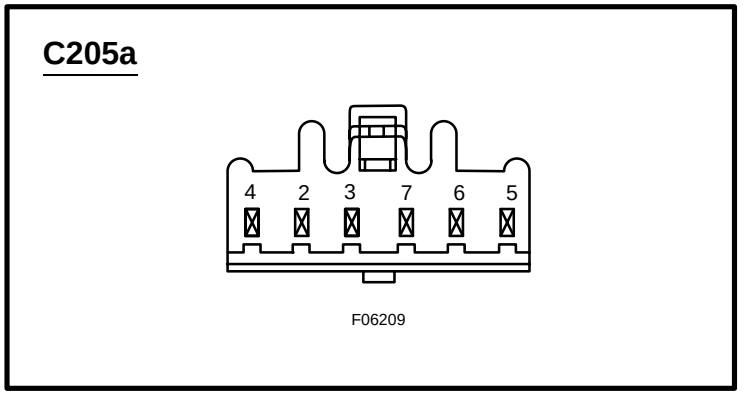

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Interior lamp	3 and 4	On	Open circuit
		Off	Closed circuit

Component testing procedure (voltage applied)

Disconnect the ohmmeter; connect pin 6 using a fused (10A) jumper to 12V DC power and pin 4 to ground. Measure the voltage between pin 1 and pin 4 while rotating the thumbwell from full illumination to no illumination. If the voltage smoothly decreases from near 12 volts to near 0 volts, the illumination dimmer is okay. If not, replace the main light switch.