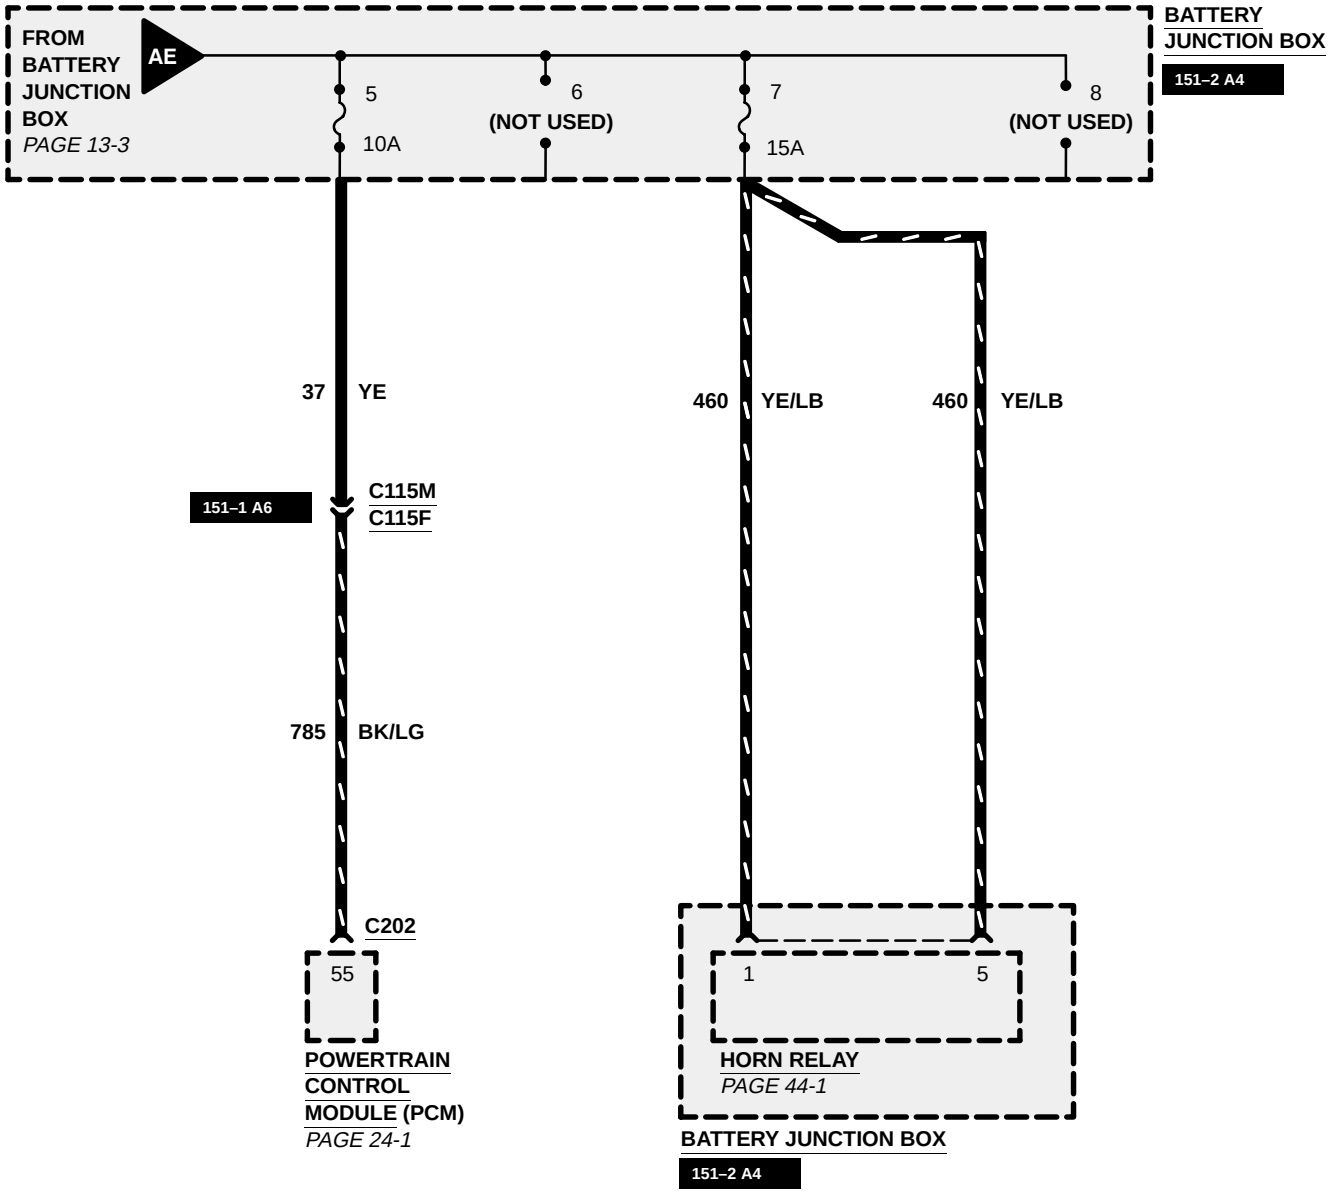
FROM BATTERY JUNCTION BOX
PAGE 13-3
AE
5
10A
6
(NOT USED)
7
15A
8
(NOT USED)
BATTERY JUNCTION BOX
151–2 A4
37 YE
460 YE/LB
460 YE/LB
151–1 A6
C115M
C115F
785 BK/LG
C202
55
POWERTRAIN CONTROL MODULE (PCM)
PAGE 24-1
1
5
HORN RELAY
PAGE 44-1
BATTERY JUNCTION BOX
151–2 A4