C359

14A699

A224
Heated seat module, driver side front



F14043

Pin	Circuit	Circuit function
1	1020 (DG/VT)	Climate controlled seat module
2	461 (OG)	Electronic Automatic Temperature Control (EATC) module (19980), to, Heated seat module, driver side front
3	1018 (LG/OG)	Heated seat switch, driver side, Temperature +
4	1019 (TN/LB)	Heated seat switch, driver side, Temperature –
5	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
6	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
7	1048 (LB/WH)	Heated seats
8	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
9	1066 (GY/LB)	Seat back heater, driver side, feed
10	1062 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
11	1063 (OG/LB)	Heated seat module, passenger side front
12	1067 (VT/LB)	Seat back heater, driver side, heater, return
13	1065 (YE/LB)	Seat cushion heater, passenger side, heater, feed
14	57 (BK)	Ground

C361

14A699

N445
Lumbar adjust switch, left front (14B691)

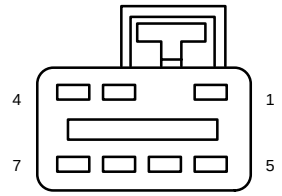

F07055

Pin	Circuit	Circuit function
1	1097 (BR)	Power lumbar switch, left, to, Front seat lumbar compressor motor
2	490 (RD)	Voltage supplied at all times (overload protected)
3	57 (BK)	Ground
4	–	not used
5	–	not used
6	57 (BK)	Ground
7	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor

C364

14A699

N29
Seat cushion heater, left front

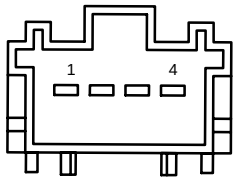

F04287

Pin	Circuit	Circuit function
1	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
2	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
3	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
4	1065 (YE/LB)	Seat cushion heater, passenger side, heater, feed