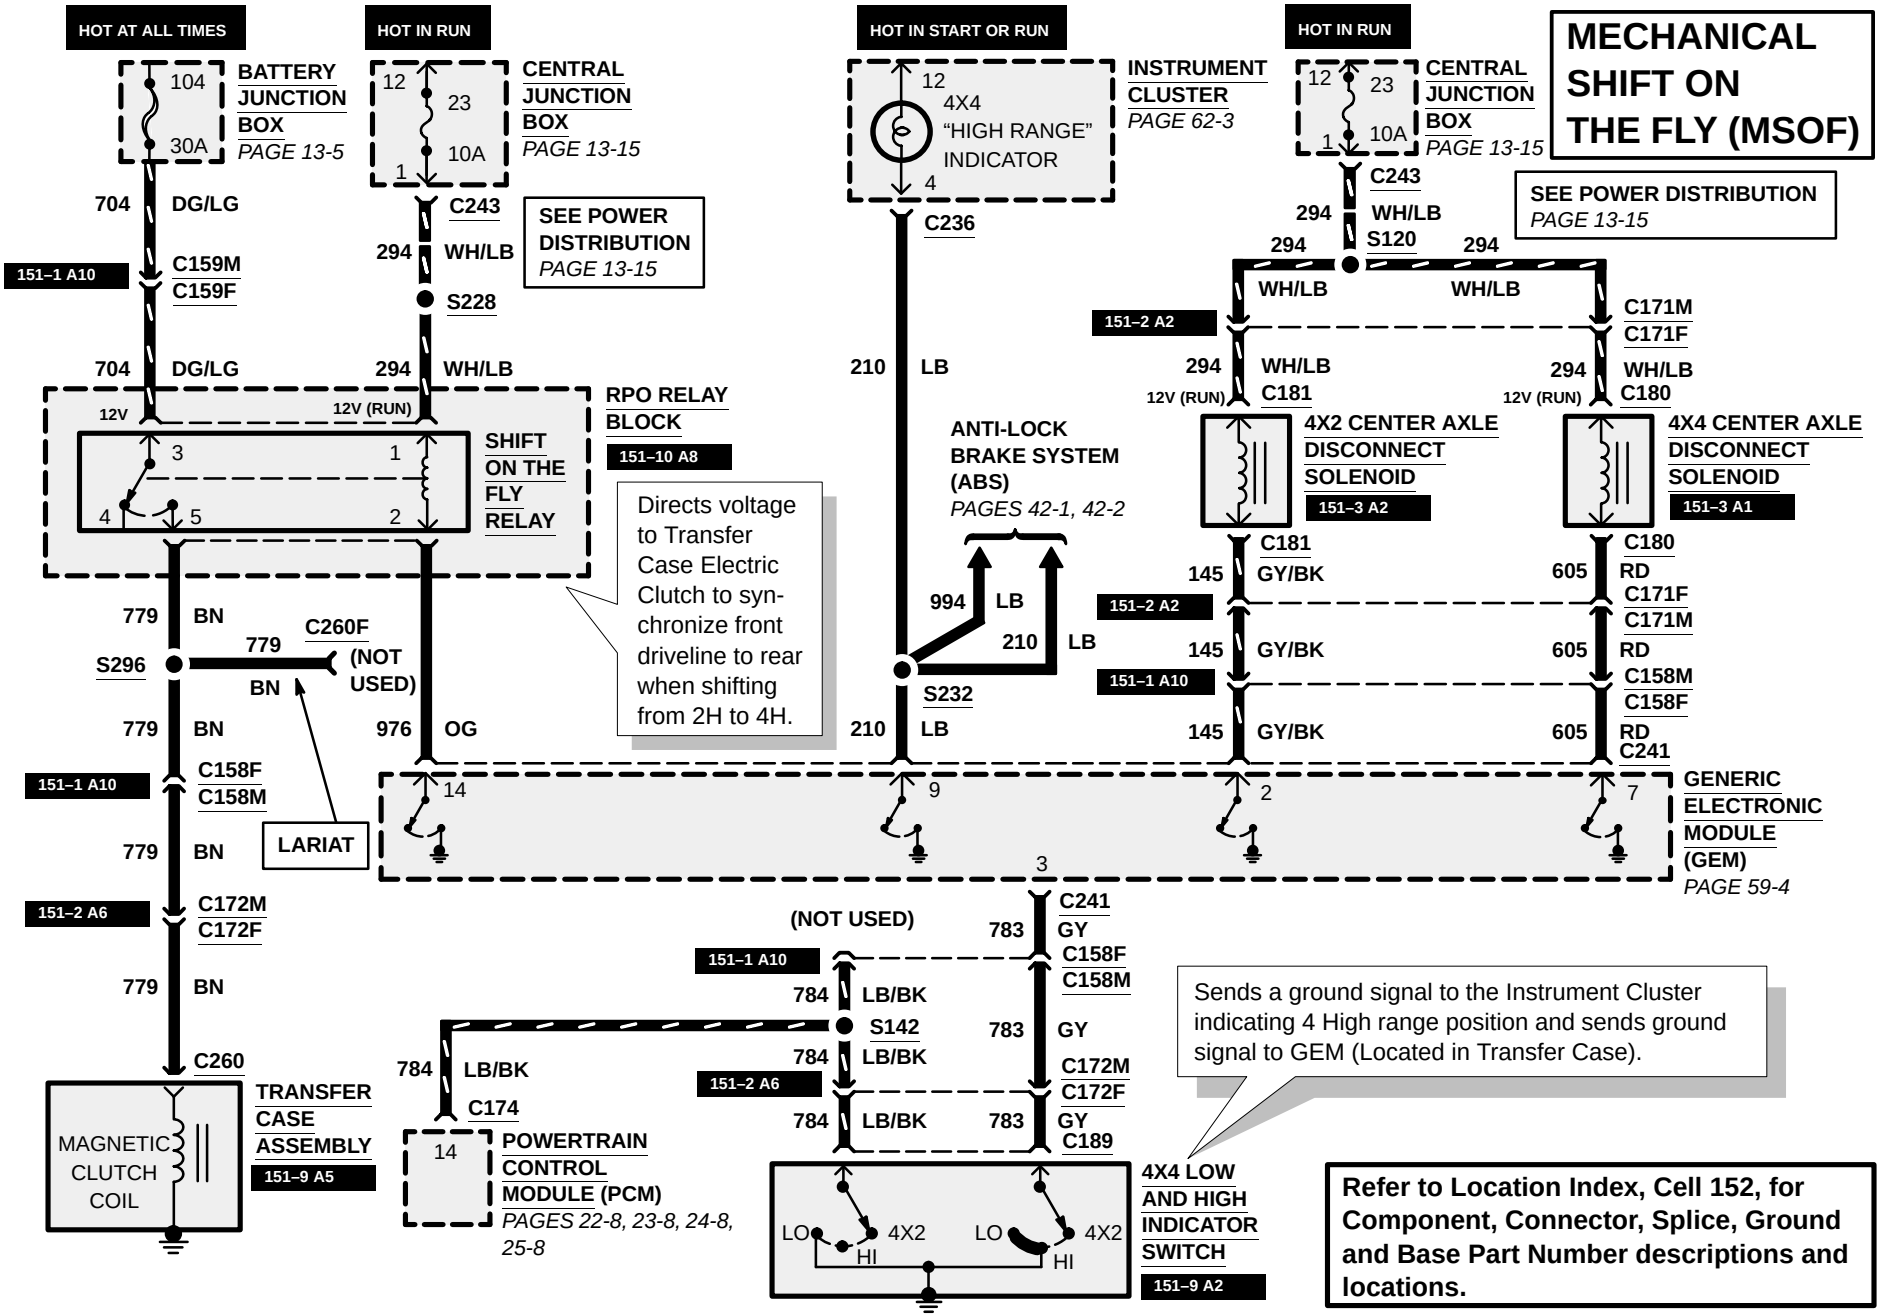
HOT AT ALL TIMES
HOT IN RUN
HOT IN START OR RUN
HOT IN RUN
MECHANICAL SHIFT ON THE FLY (MSOF)
BATTERY JUNCTION BOX
PAGE 13-5
CENTRAL JUNCTION BOX
PAGE 13-15
INSTRUMENT CLUSTER
PAGE 62-3
CENTRAL JUNCTION BOX
PAGE 13-15
SEE POWER DISTRIBUTION
PAGE 13-15
SEE POWER DISTRIBUTION
PAGE 13-15
151–1 A10
C159M
C159F
C243
S228
C236
C243
S120
C171M
C171F
151–2 A2
RPO RELAY BLOCK
151–10 A8
SHIFT ON THE FLY RELAY
ANTI-LOCK BRAKE SYSTEM (ABS)
PAGES 42-1, 42-2
4X2 CENTER AXLE DISCONNECT SOLENOID
151–3 A2
4X4 CENTER AXLE DISCONNECT SOLENOID
151–3 A1
C181
C180
C171F
C171M
C158M
C158F
C241
S296
C260F
(NOT USED)
S232
S142
LARIAT
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-4
151–2 A6
C172M
C172F
C260
C174
C189
TRANSFER CASE ASSEMBLY
151–9 A5
MAGNETIC CLUTCH COIL
POWERTRAIN CONTROL MODULE (PCM)
PAGES 22-8, 23-8, 24-8, 25-8
4X4 LOW AND HIGH INDICATOR SWITCH
151–9 A2
LO
HI
4X2
4X4 "HIGH RANGE" INDICATOR
Directs voltage to Transfer Case Electric Clutch to synchronize front driveline to rear when shifting from 2H to 4H.
Sends a ground signal to the Instrument Cluster indicating 4 High range position and sends ground signal to GEM (Located in Transfer Case).
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.