C526 (BK)

19A044/14631

Door ajar switch, left front

Early production

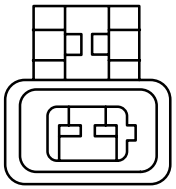

F02117

Late production

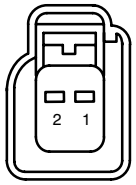

F02132

Pin	Circuit	Circuit function
1	765 (YE/BK)	Door ajar switch, left front
2	57 (BK)	Ground

C602 (BK)

19A041/14630

Door ajar switch, right front

Early production

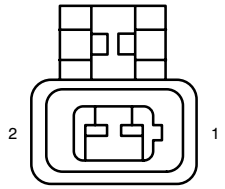

F02117

Late production

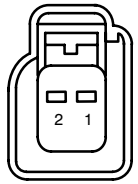

F02132

Pin	Circuit	Circuit function
1	761 (GY/RD)	Door ajar switch, right front
2	57 (BK)	Ground

C527 (GY)

14631

Exterior rear view mirror switch (17B676)

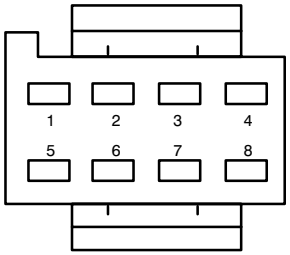

F08056

Pin	Circuit	Circuit function
1	956 (OG/LG)	Voltage supplied at all times (overload protected)
2	–	not used
3	543 (DG)	Right/Left mirror movement
4	540 (RD)	Right/Left mirror movement
5	57 (BK)	Ground
6	945 (YE/BK)	Mirror motor, feed
7	541 (DB)	Up/Down mirror movement
8	544 (VT)	Up/Down mirror movement

C603 (GY)

14630

Door lock actuator, right front

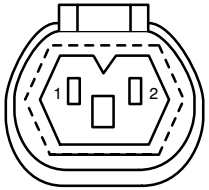

F02227

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output