C503b (BN)

13A412

E10
Lamp assembly, right rear
2) Stop lamp

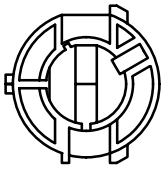

F02124

Pin	Circuit	Circuit Function
	15S-LG14B (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
	31-LG14A (BK)	Ground

C503c (GY)

13A412

E10
Lamp assembly, right rear
6) Reversing lamp

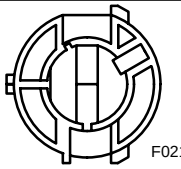

F02124

Pin	Circuit	Circuit Function
	15S-LG16 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
	31-LF13 (BK) + 31-LG16 (BK)	Ground

C503d

13A412

E10
Lamp assembly, right rear
1) Turn signal lamp
4) Tail lamp

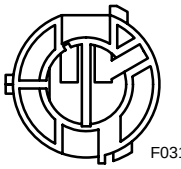

F03140

Pin	Circuit	Circuit Function
	29S-LF11A (OG/WH)	Voltage supplied at all times (overload protected), switched
	49-LG12 (BU)	Pulsed power feed (overload protected)
	31-LF11 (BK)	Ground

C503e

13A412

E10
Lamp assembly, right rear
4) Tail lamp

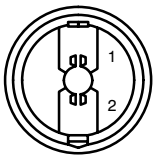

F02126

Pin	Circuit	Circuit Function
1	29S-LF11B (OG/WH)	Voltage supplied at all times (overload protected), switched
2	31-LF13 (BK)	Ground

C504a (GY)

14K024

A277
Belt minder module

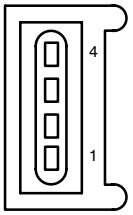

F04121

Pin	Circuit	Circuit Function
1	31S-GE49A (BK/BU)	Ground, switched
2	31S-GE52A (BK/RD)	Ground, switched
3	8-RE22B (WH/VT)	Sensor signal
4	29S-GE53 (OG/WH)	Voltage supplied at all times (overload protected), switched

C504b (BK)

14K024

A277
Belt minder module

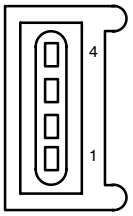

F04121

Pin	Circuit	Circuit Function
1	15-GE53 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
2	–	not used
3	31-GE53A (BK)	Ground
4	31-GE53 (BK)	Ground