The LCM checks for a lamp outage condition on the Headlamps, Stoplamps, Front Turn Lamps and Tail Lamps (dual filament bulbs only). Once a bulb outage is detected, and the Ignition Switch is in the RUN position, the LCM signals the Virtual Image Instrument Cluster for the appropriate display. A single tone requested by the VIC accompanies the message display.

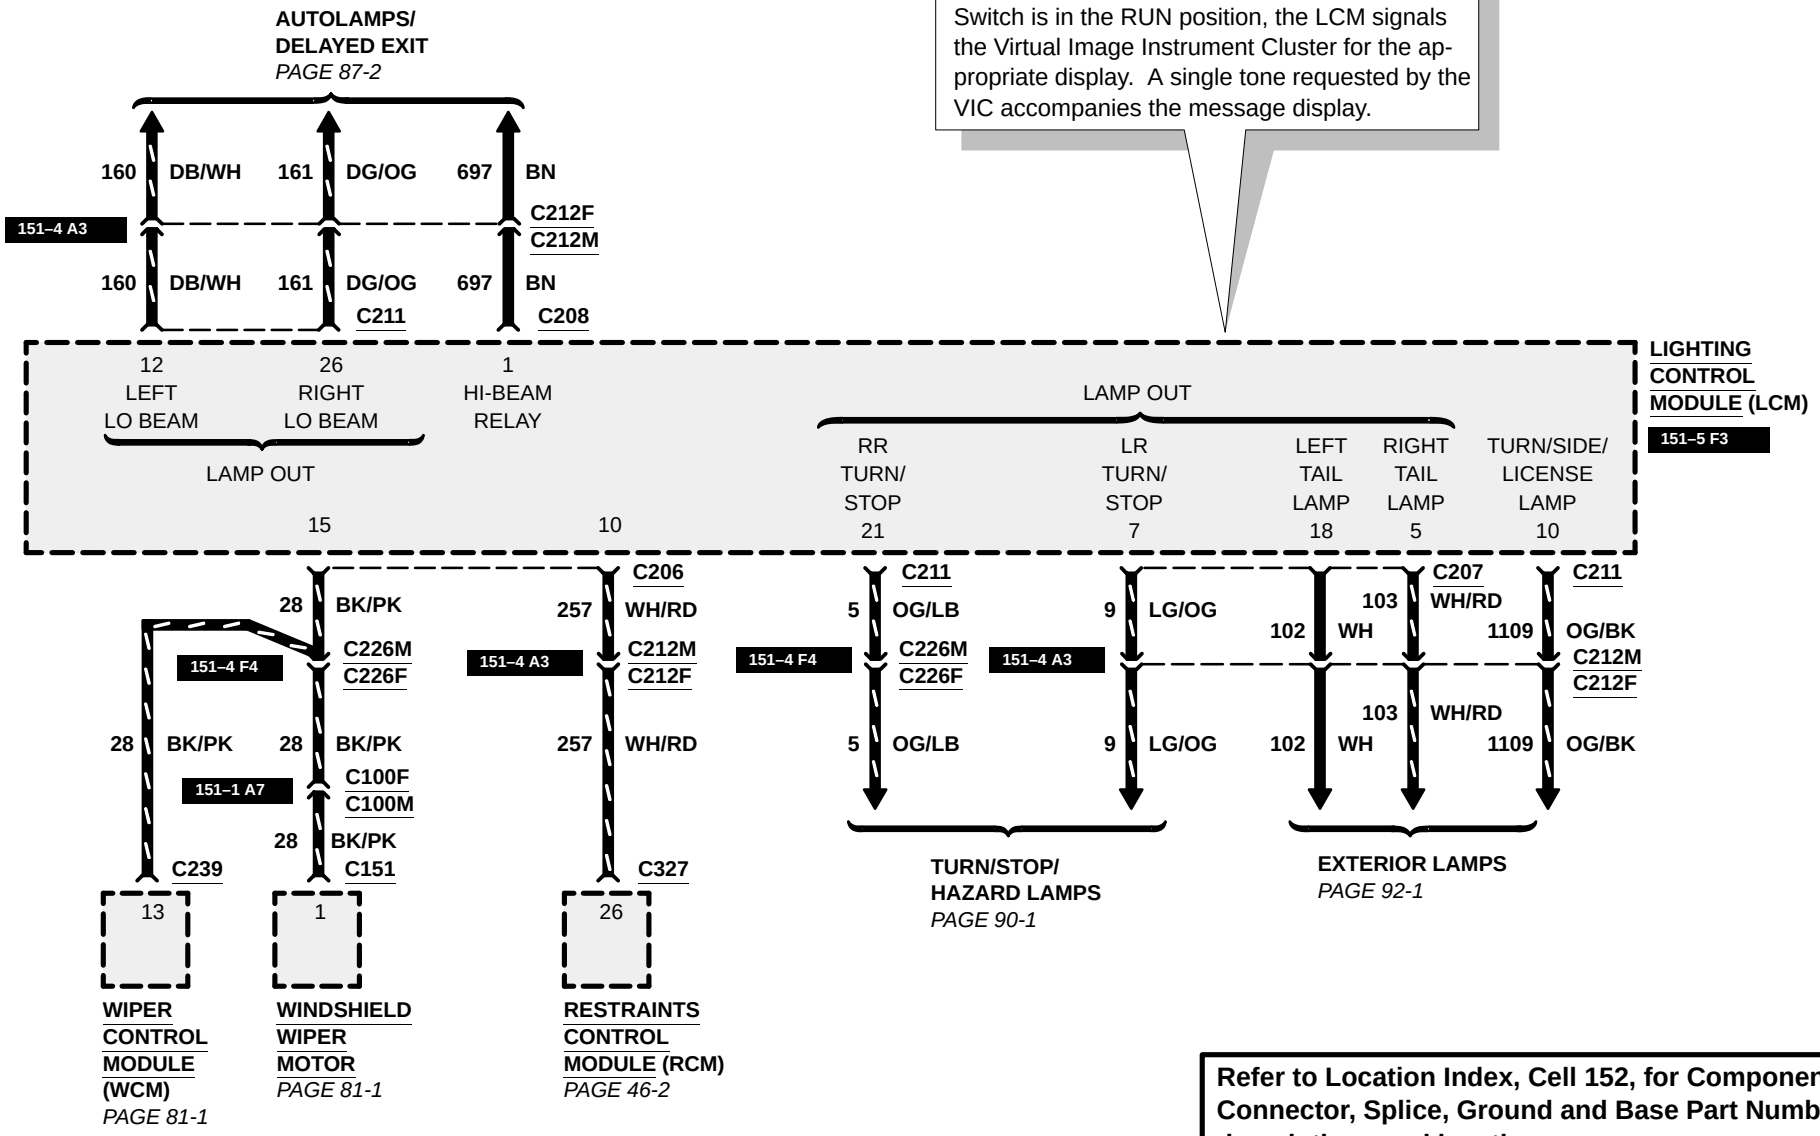

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.