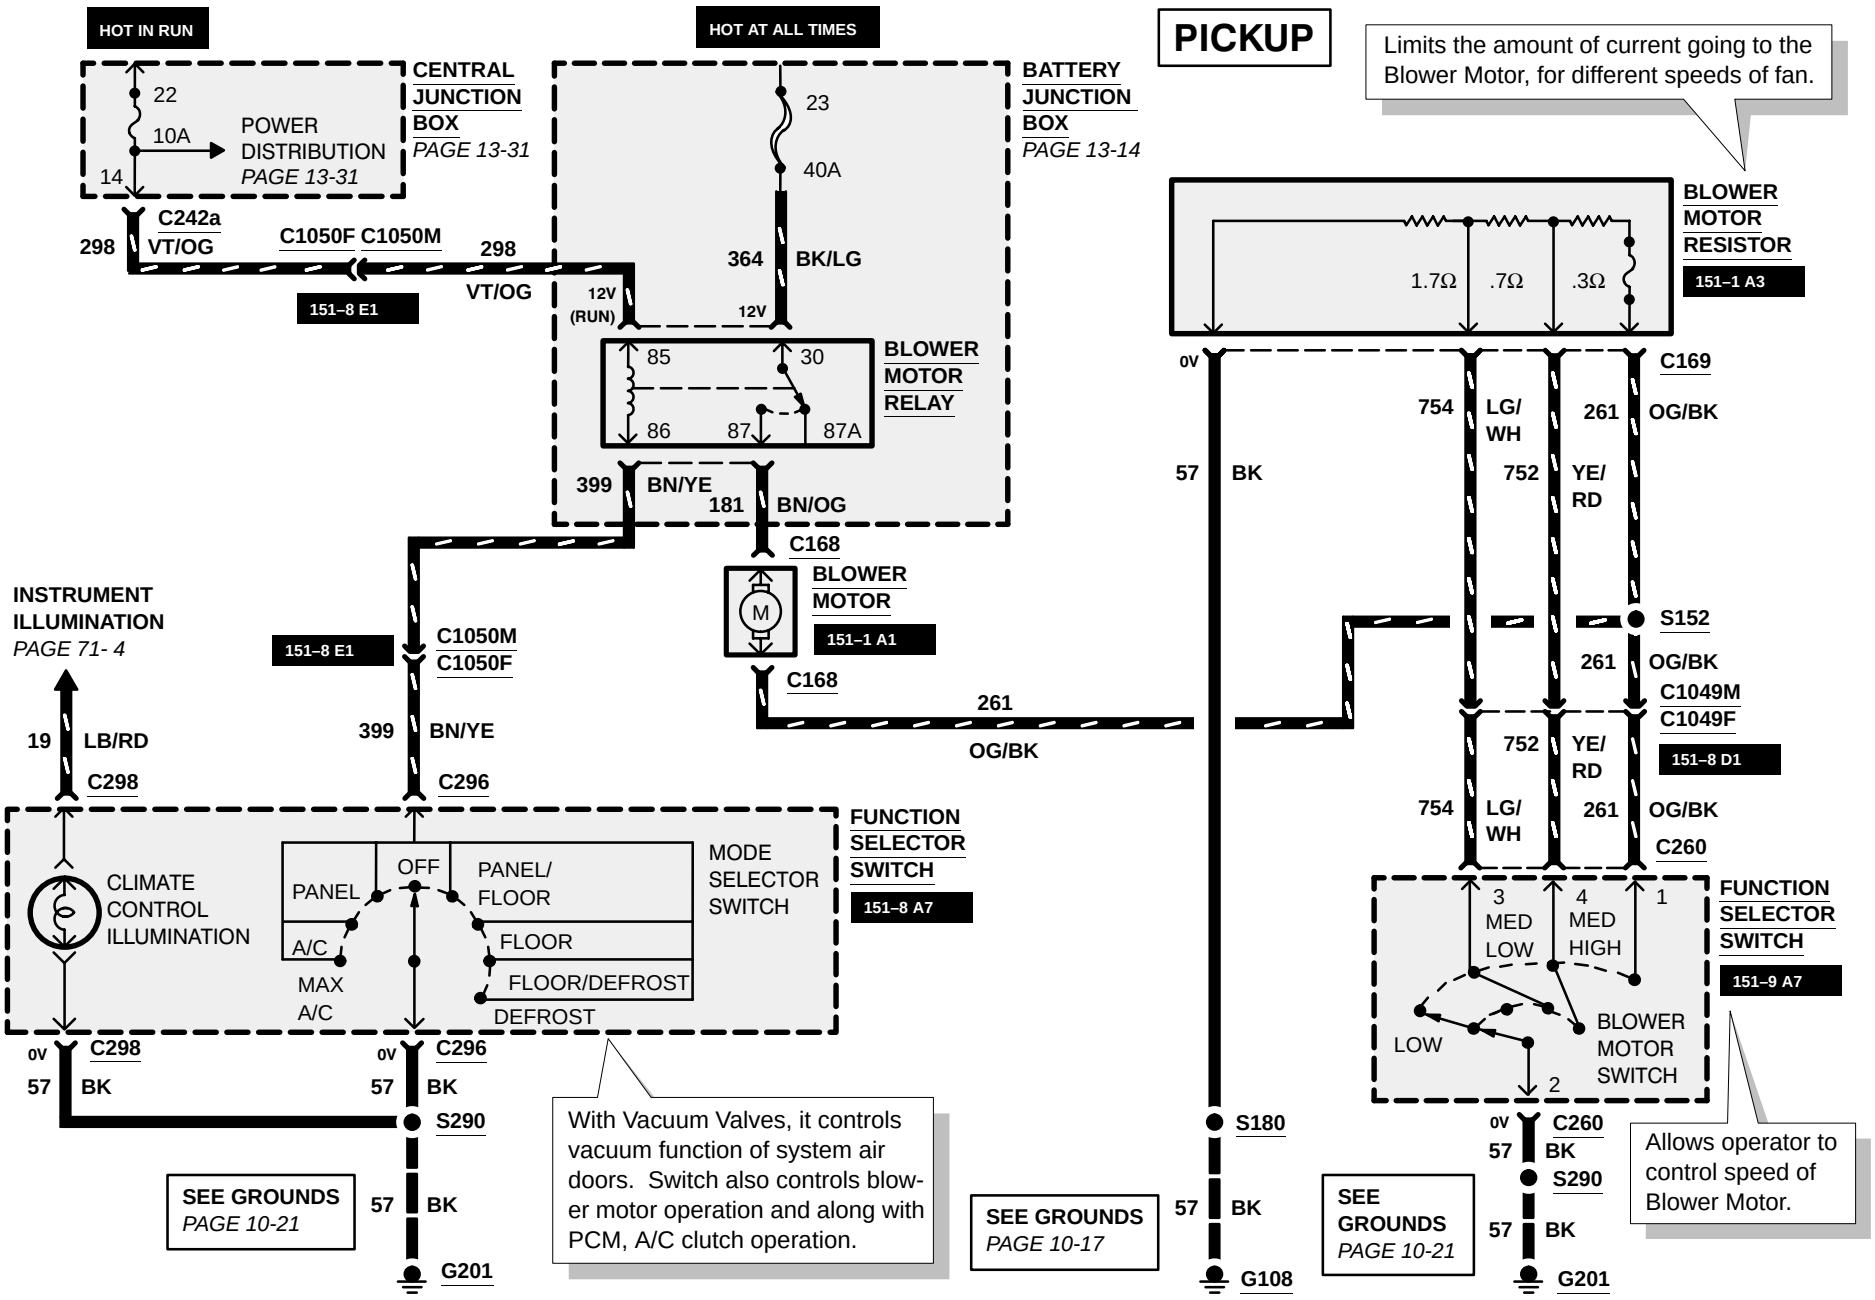
HOT IN RUN
HOT AT ALL TIMES
PICKUP
CENTRAL JUNCTION BOX
PAGE 13-31
22
10A
POWER DISTRIBUTION
PAGE 13-31
14
C242a
298 VT/OG
C1050F C1050M
298 VT/OG
151–8 E1
BATTERY JUNCTION BOX
PAGE 13-14
23
40A
364 BK/LG
12V (RUN)
12V
85
30
86
87
87A
BLOWER MOTOR RELAY
399 BN/YE
181 BN/OG
C168
BLOWER MOTOR
151–1 A1
C168
261 OG/BK
INSTRUMENT ILLUMINATION
PAGE 71- 4
151–8 E1
C1050M
C1050F
19 LB/RD
C298
399 BN/YE
C296
FUNCTION SELECTOR SWITCH
151–8 A7
CLIMATE CONTROL ILLUMINATION
PANEL
OFF
PANEL/ FLOOR
A/C
FLOOR
MAX A/C
FLOOR/DEFROST
DEFROST
MODE SELECTOR SWITCH
0V
C298
57 BK
0V
C296
57 BK
S290
57 BK
G201
SEE GROUNDS
PAGE 10-21
With Vacuum Valves, it controls vacuum function of system air doors. Switch also controls blower motor operation and along with PCM, A/C clutch operation.
S180
57 BK
G108
SEE GROUNDS
PAGE 10-17
Limits the amount of current going to the Blower Motor, for different speeds of fan.
BLOWER MOTOR RESISTOR
151–1 A3
1.7Ω
.7Ω
.3Ω
0V
C169
754 LG/WH
261 OG/BK
57 BK
752 YE/RD
S152
261 OG/BK
C1049M
C1049F
151–8 D1
752 YE/RD
754 LG/WH
261 OG/BK
C260
FUNCTION SELECTOR SWITCH
151–9 A7
3 MED LOW
4 MED HIGH
1
LOW
BLOWER MOTOR SWITCH
2
0V
C260
57 BK
S290
57 BK
G201
SEE GROUNDS
PAGE 10-21
Allows operator to control speed of Blower Motor.