C177

14290

B229
Forward crash sensor

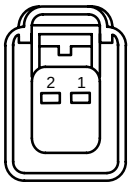

F02152

Pin	Circuit	Circuit function
1	617 (PK/OG)	Air bag crash sensor #1, feed
2	618 (VT/LG)	Air bag crash sensor #1, monitor

C179

12B637

Y33
Electr. Vacuum Regulator (EVR) solenoid valve

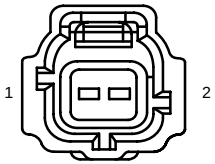

F02101

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
	361 (RD)	Voltage supplied in Start and Run (overload protected) – Natural Gas Vehicle (NGV)
2	360 (BN/PK)	EGR Vacuum Regulator (EVR), control

C180

12B637

B41
Camshaft position sensor (6B288)

F02331

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	282 (DB/OG)	Camshaft position sensor (6B288), input

C181

12B637

Y108
Fuel injector 1 (9F593)

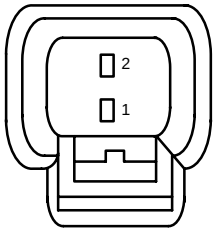

F02054

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C182

12B637

Y109
Fuel injector 2 (9F593)

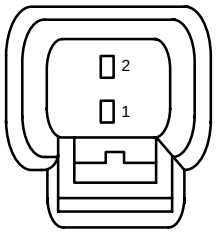

F02054

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C183

12B637

Y110
Fuel injector 3 (9F593)

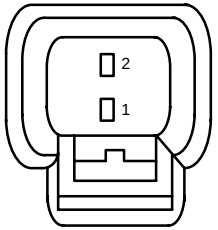

F02054

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)