AERO PICKUP

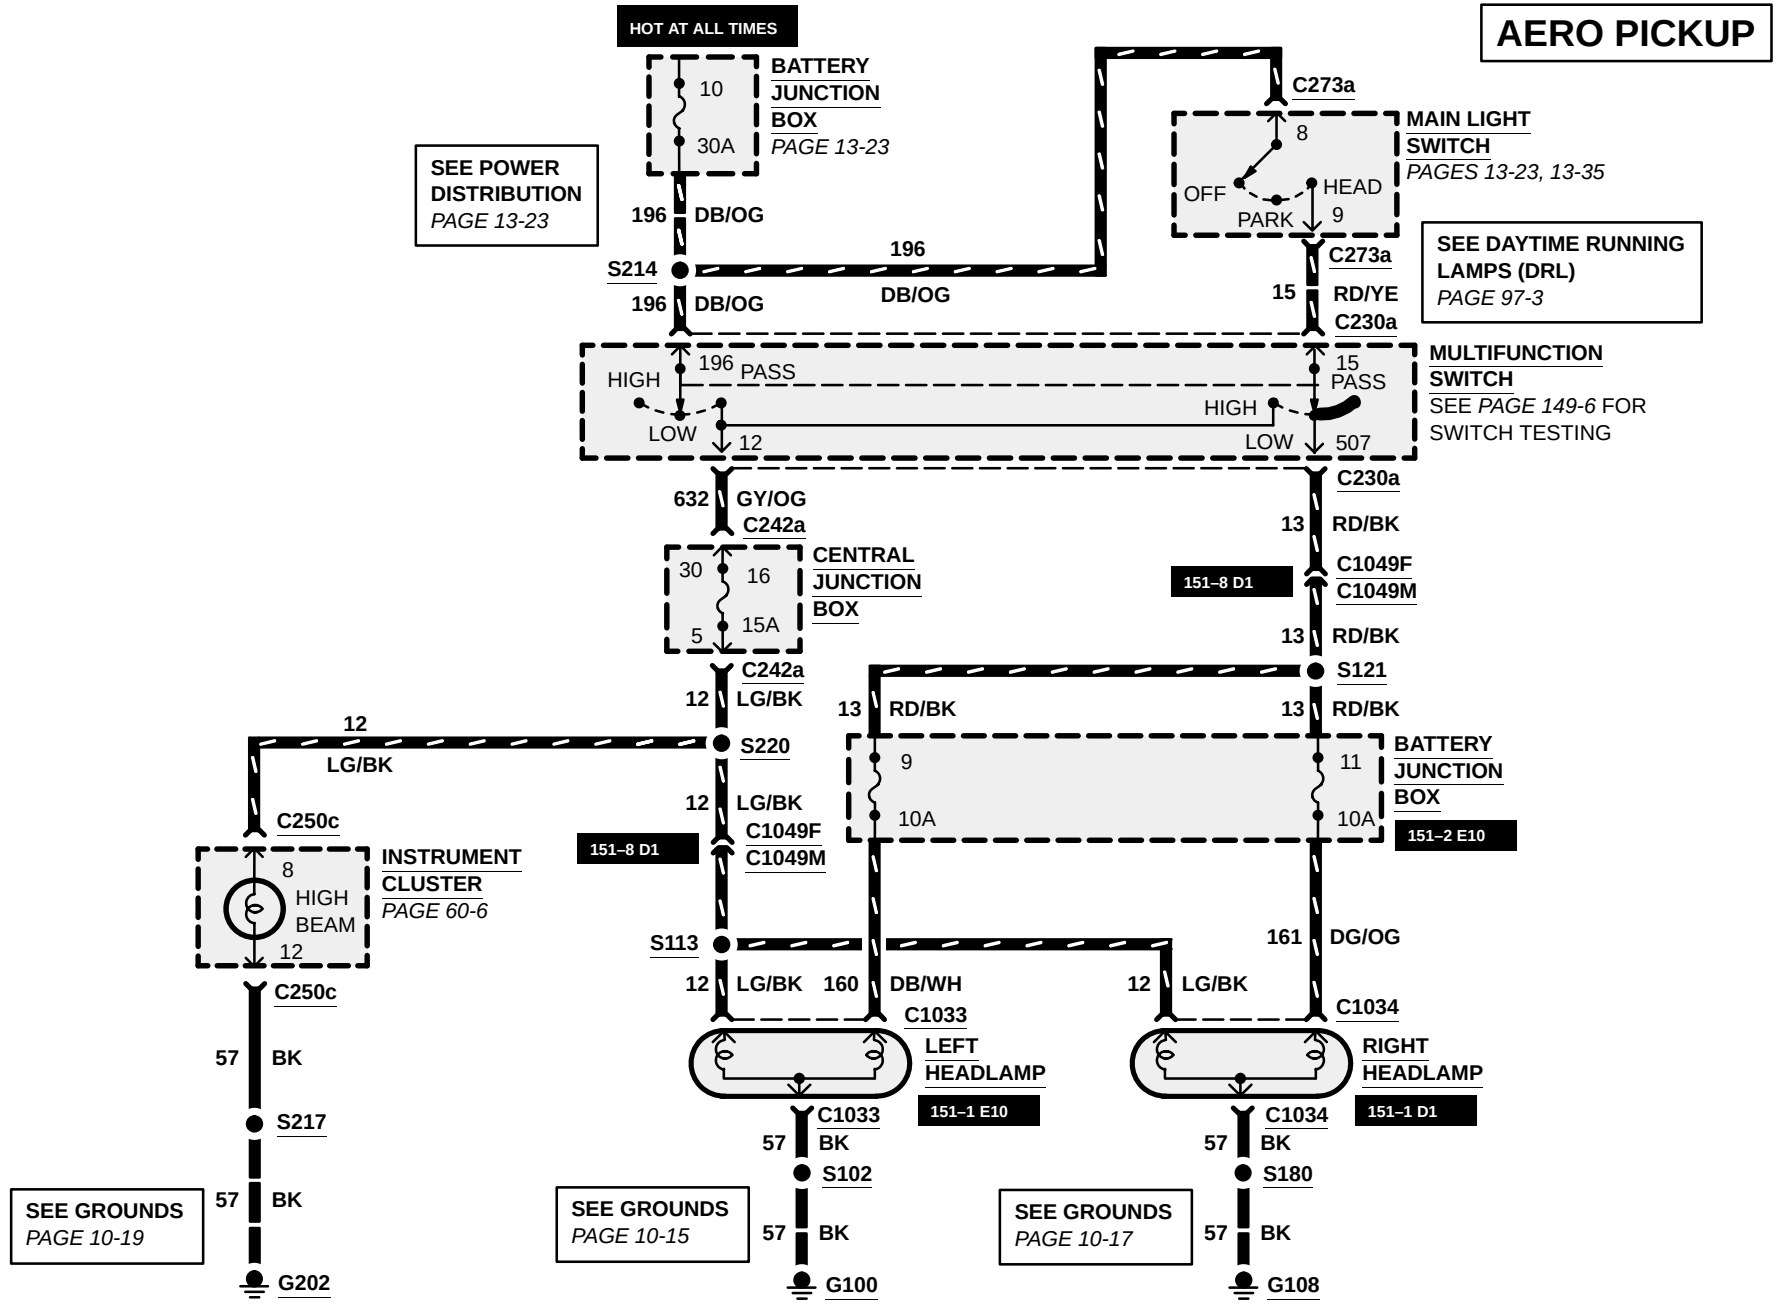
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-23
10
30A
SEE POWER DISTRIBUTION
PAGE 13-23
196 DB/OG
S214
196 DB/OG
196
DB/OG
C273a
MAIN LIGHT SWITCH
PAGES 13-23, 13-35
8
OFF
HEAD
PARK
9
SEE DAYTIME RUNNING LAMPS (DRL)
PAGE 97-3
C273a
15 RD/YE
C230a
MULTIFUNCTION SWITCH
SEE PAGE 149-6 FOR SWITCH TESTING
HIGH
196 PASS
LOW
12
15
PASS
HIGH
LOW
507
632 GY/OG
C242a
C230a
13 RD/BK
C1049F
C1049M
151–8 D1
CENTRAL JUNCTION BOX
30
16
5
15A
C242a
12 LG/BK
S220
12
LG/BK
C250c
INSTRUMENT CLUSTER
PAGE 60-6
8
HIGH BEAM
12
151–8 D1
C1049F
C1049M
13 RD/BK
S121
13 RD/BK
13 RD/BK
BATTERY JUNCTION BOX
9
10A
11
10A
151–2 E10
S113
12 LG/BK
160 DB/WH
C1033
161 DG/OG
12 LG/BK
C1034
C250c
57 BK
S217
57 BK
G202
SEE GROUNDS
PAGE 10-19
LEFT HEADLAMP
151–1 E10
C1033
57 BK
S102
57 BK
G100
SEE GROUNDS
PAGE 10-15
RIGHT HEADLAMP
151–1 D1
C1034
57 BK
S180
57 BK
G108
SEE GROUNDS
PAGE 10-17