G1, G8

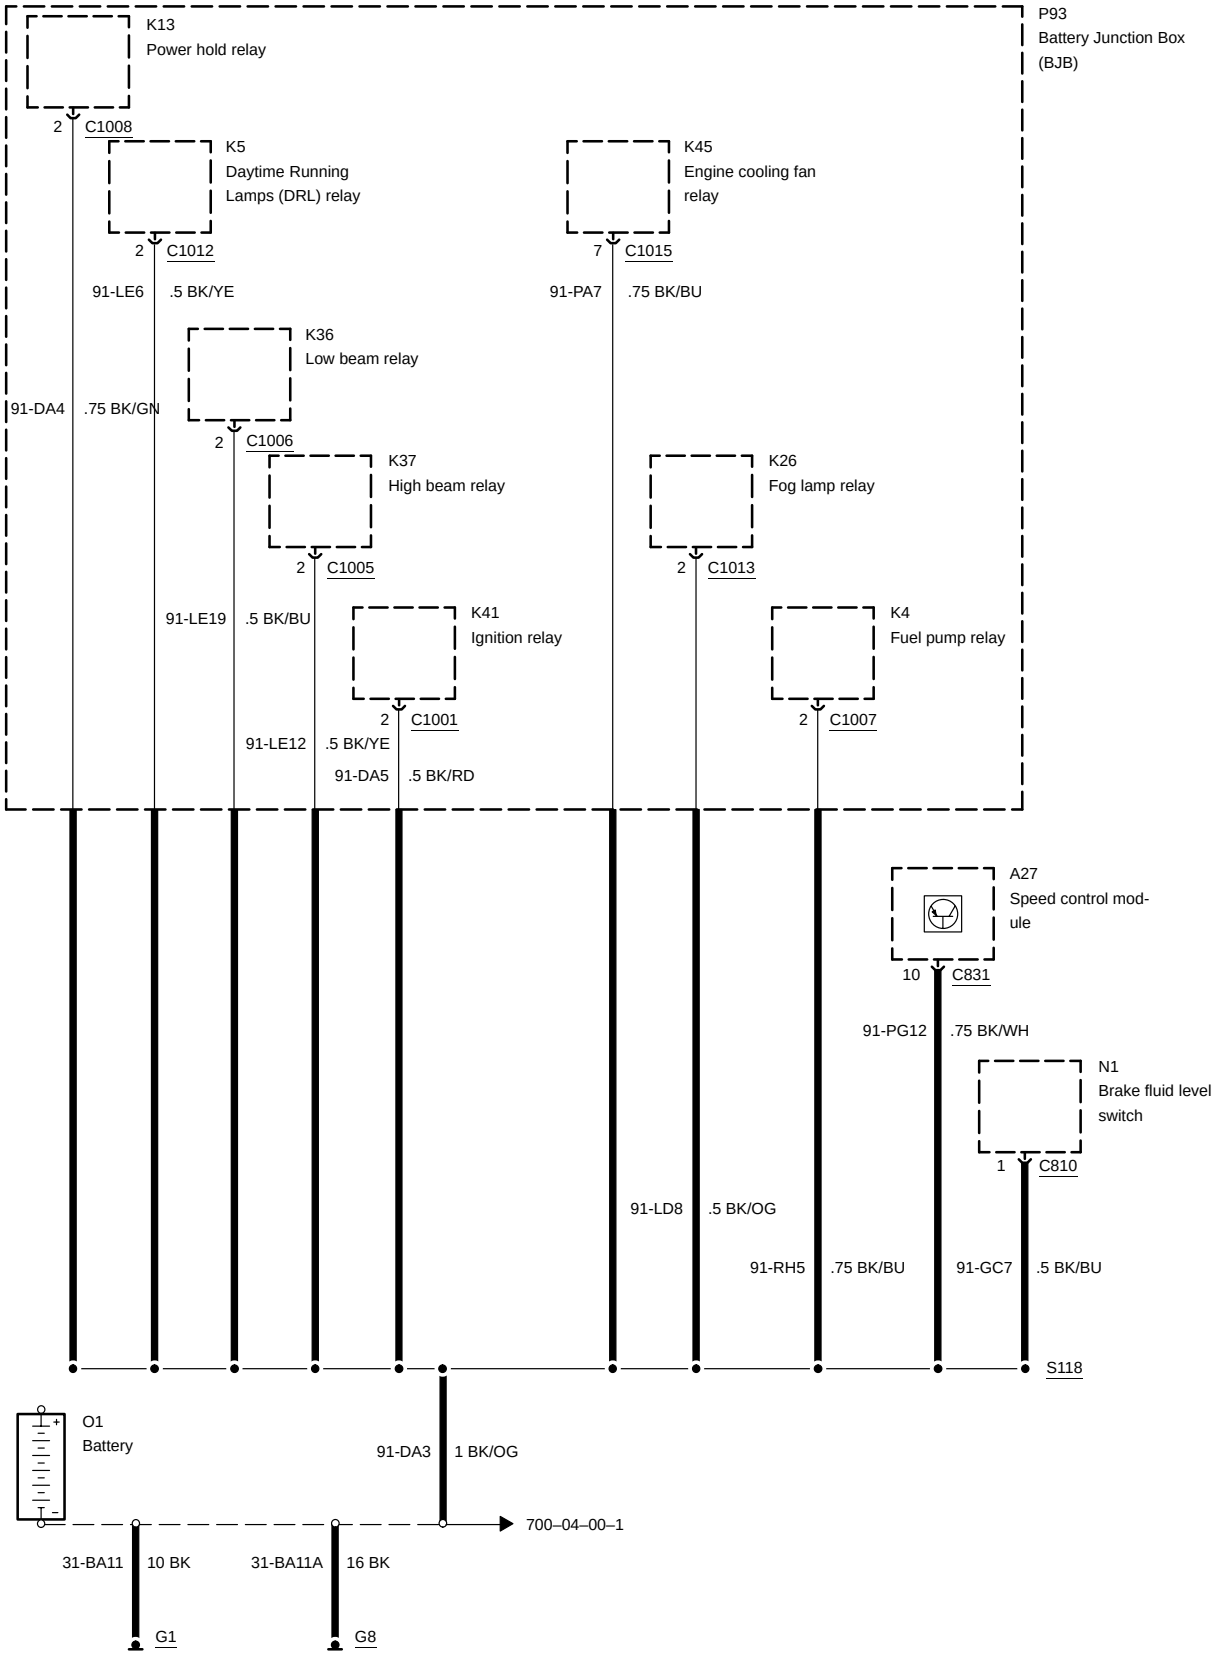
P93
Battery Junction Box
(BJB)
K13
Power hold relay
2 C1008
K5
Daytime Running
Lamps (DRL) relay
2 C1012
K45
Engine cooling fan
relay
7 C1015
91-LE6 .5 BK/YE
91-PA7 .75 BK/BU
K36
Low beam relay
91-DA4 .75 BK/GN
2 C1006
K37
High beam relay
2 C1005
K26
Fog lamp relay
2 C1013
91-LE19 .5 BK/BU
K41
Ignition relay
2 C1001
K4
Fuel pump relay
2 C1007
91-LE12 .5 BK/YE
91-DA5 .5 BK/RD
A27
Speed control mod-
ule
10 C831
91-PG12 .75 BK/WH
N1
Brake fluid level
switch
1 C810
91-LD8 .5 BK/OG
91-RH5 .75 BK/BU
91-GC7 .5 BK/BU
S118
O1
Battery
91-DA3 1 BK/OG
700–04–00–1
31-BA11 10 BK
31-BA11A 16 BK
G1
G8