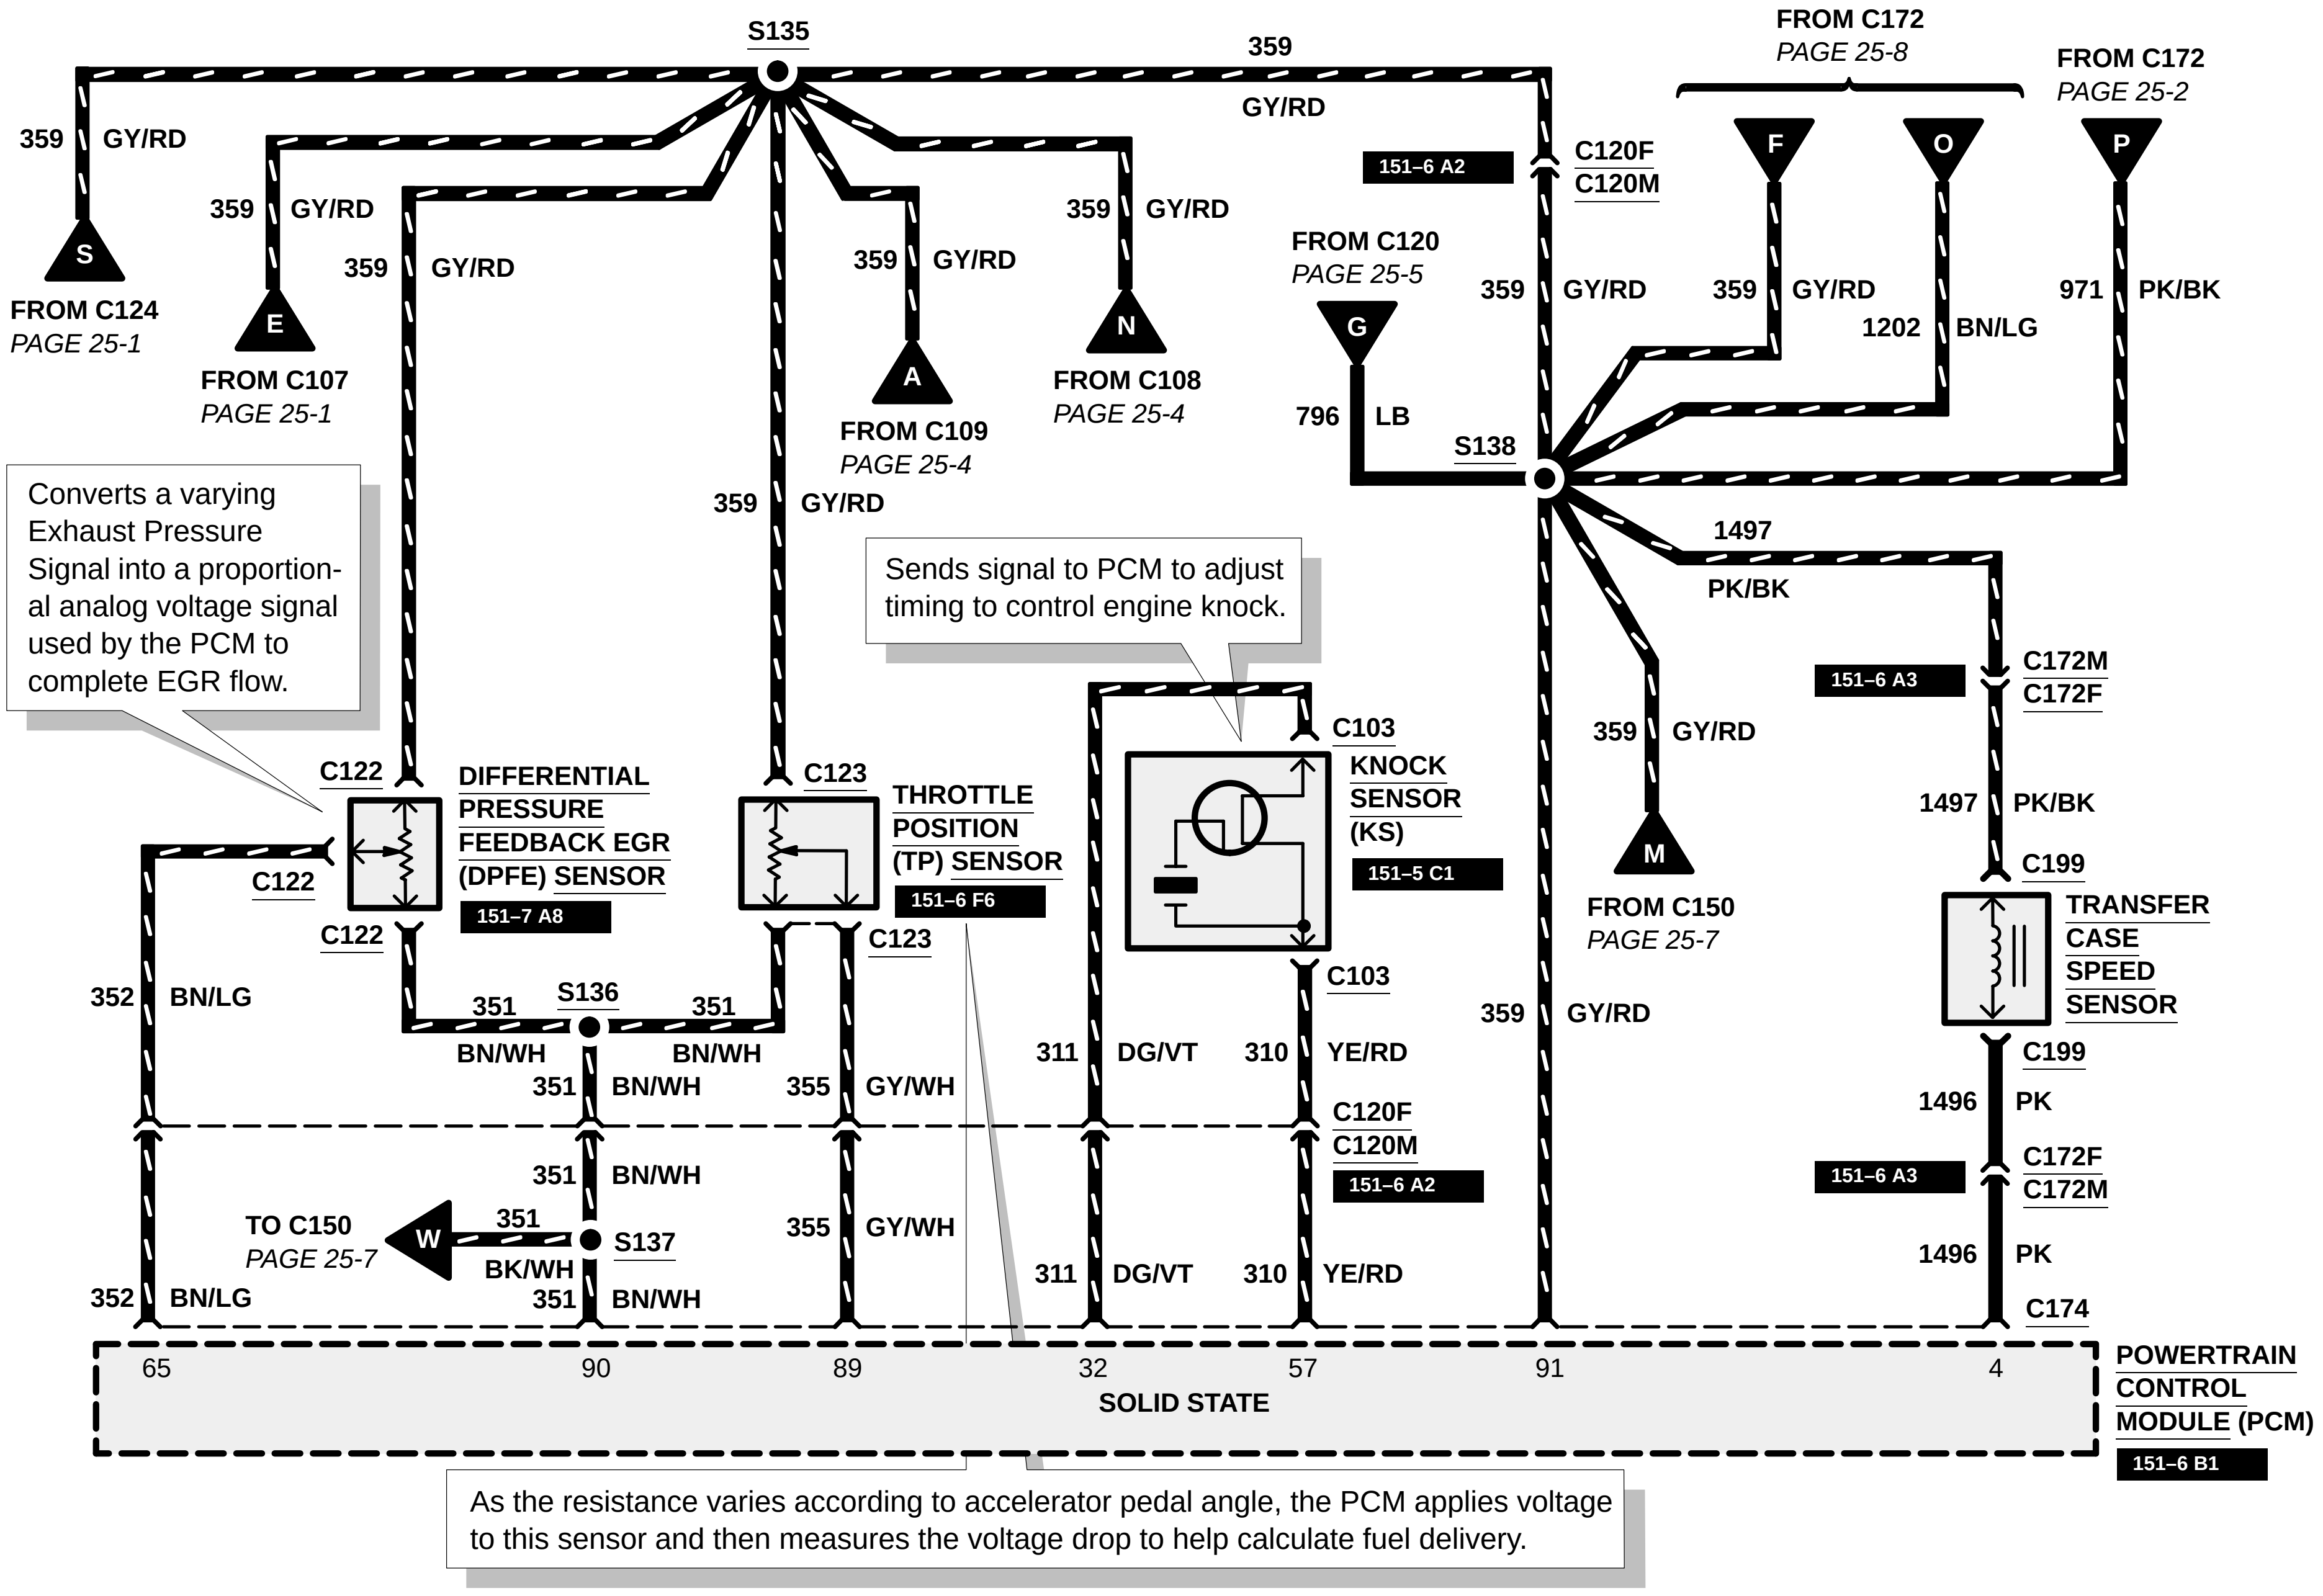
S135
359
GY/RD
359 GY/RD
S
FROM C124
PAGE 25-1
359 GY/RD
E
FROM C107
PAGE 25-1
359 GY/RD
359 GY/RD
A
FROM C109
PAGE 25-4
359 GY/RD
N
FROM C108
PAGE 25-4
359 GY/RD
151–6 A2
C120F
C120M
FROM C120
PAGE 25-5
G
796 LB
S138
359 GY/RD
FROM C172
PAGE 25-8
F
O
359 GY/RD
1202 BN/LG
FROM C172
PAGE 25-2
P
971 PK/BK
1497
PK/BK
151–6 A3
C172M
C172F
359 GY/RD
M
FROM C150
PAGE 25-7
1497 PK/BK
C199
TRANSFER CASE SPEED SENSOR
C199
1496 PK
151–6 A3
C172F
C172M
1496 PK
C174
C122
DIFFERENTIAL PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–7 A8
C122
C122
352 BN/LG
351
S136
351
BN/WH
BN/WH
351 BN/WH
351 BN/WH
TO C150
PAGE 25-7
W
351
BK/WH
S137
351 BN/WH
352 BN/LG
C123
THROTTLE POSITION (TP) SENSOR
151–6 F6
C123
355 GY/WH
355 GY/WH
C103
KNOCK SENSOR (KS)
151–5 C1
C103
311 DG/VT
310 YE/RD
C120F
C120M
151–6 A2
311 DG/VT
310 YE/RD
359 GY/RD
65
90
89
32
57
91
4
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–6 B1

Converts a varying Exhaust Pressure Signal into a proportional analog voltage signal used by the PCM to complete EGR flow.

Sends signal to PCM to adjust timing to control engine knock.

As the resistance varies according to accelerator pedal angle, the PCM applies voltage to this sensor and then measures the voltage drop to help calculate fuel delivery.