C1295

A2–525

Cold start heater



F01143

Pin	Circuit	Circuit function
1	G109 (WH)	Cold start heater relay, switched power, output

C1296

A2–525

Cold start heater relay

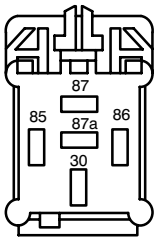

F05062

Pin	Circuit	Circuit function
30	G109 (WH)	Cold start heater relay, switched power, output
85	G007 (GY)	Cold start heater relay, control
86	G080 (WH)	Fuel pump, Power (Start or Run)
87	G002 (WH)	Voltage supplied at all times (overload protected)
87a	–	not used

C1297

A3–288

High flow injector assembly

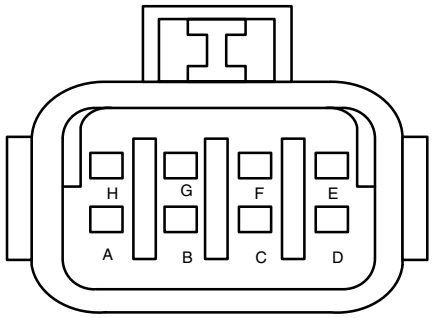

F08135

Pin	Circuit	Circuit function
A	G045 (WH)	High flow injector 3, control
B	G047 (WH)	High flow injector 4, control
C	G049 (WH)	High flow injector 5, control
D	G051 (WH)	High flow injector 6, control
E	G053 (WH)	High flow injector 7, control
F	G055 (WH)	High flow injector 8, control
G	G072 (WH)	Voltage supplied in Start and Run (overload protected)
H	G073 (WH)	Voltage supplied in Start and Run (overload protected)

C1299 (BK)

12B637

Barometric Absolute Pressure (BAP) sensor

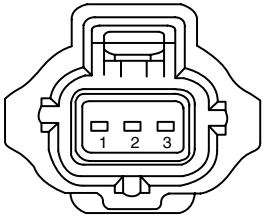

F03273

Pin	Circuit	Circuit function
1	351 (BN/WH)	Reference, voltage
2	359 (GY/RD)	signal, return
3	356 (DB/LG)	Barometric Absolute Pressure (BAP) sensor, signal