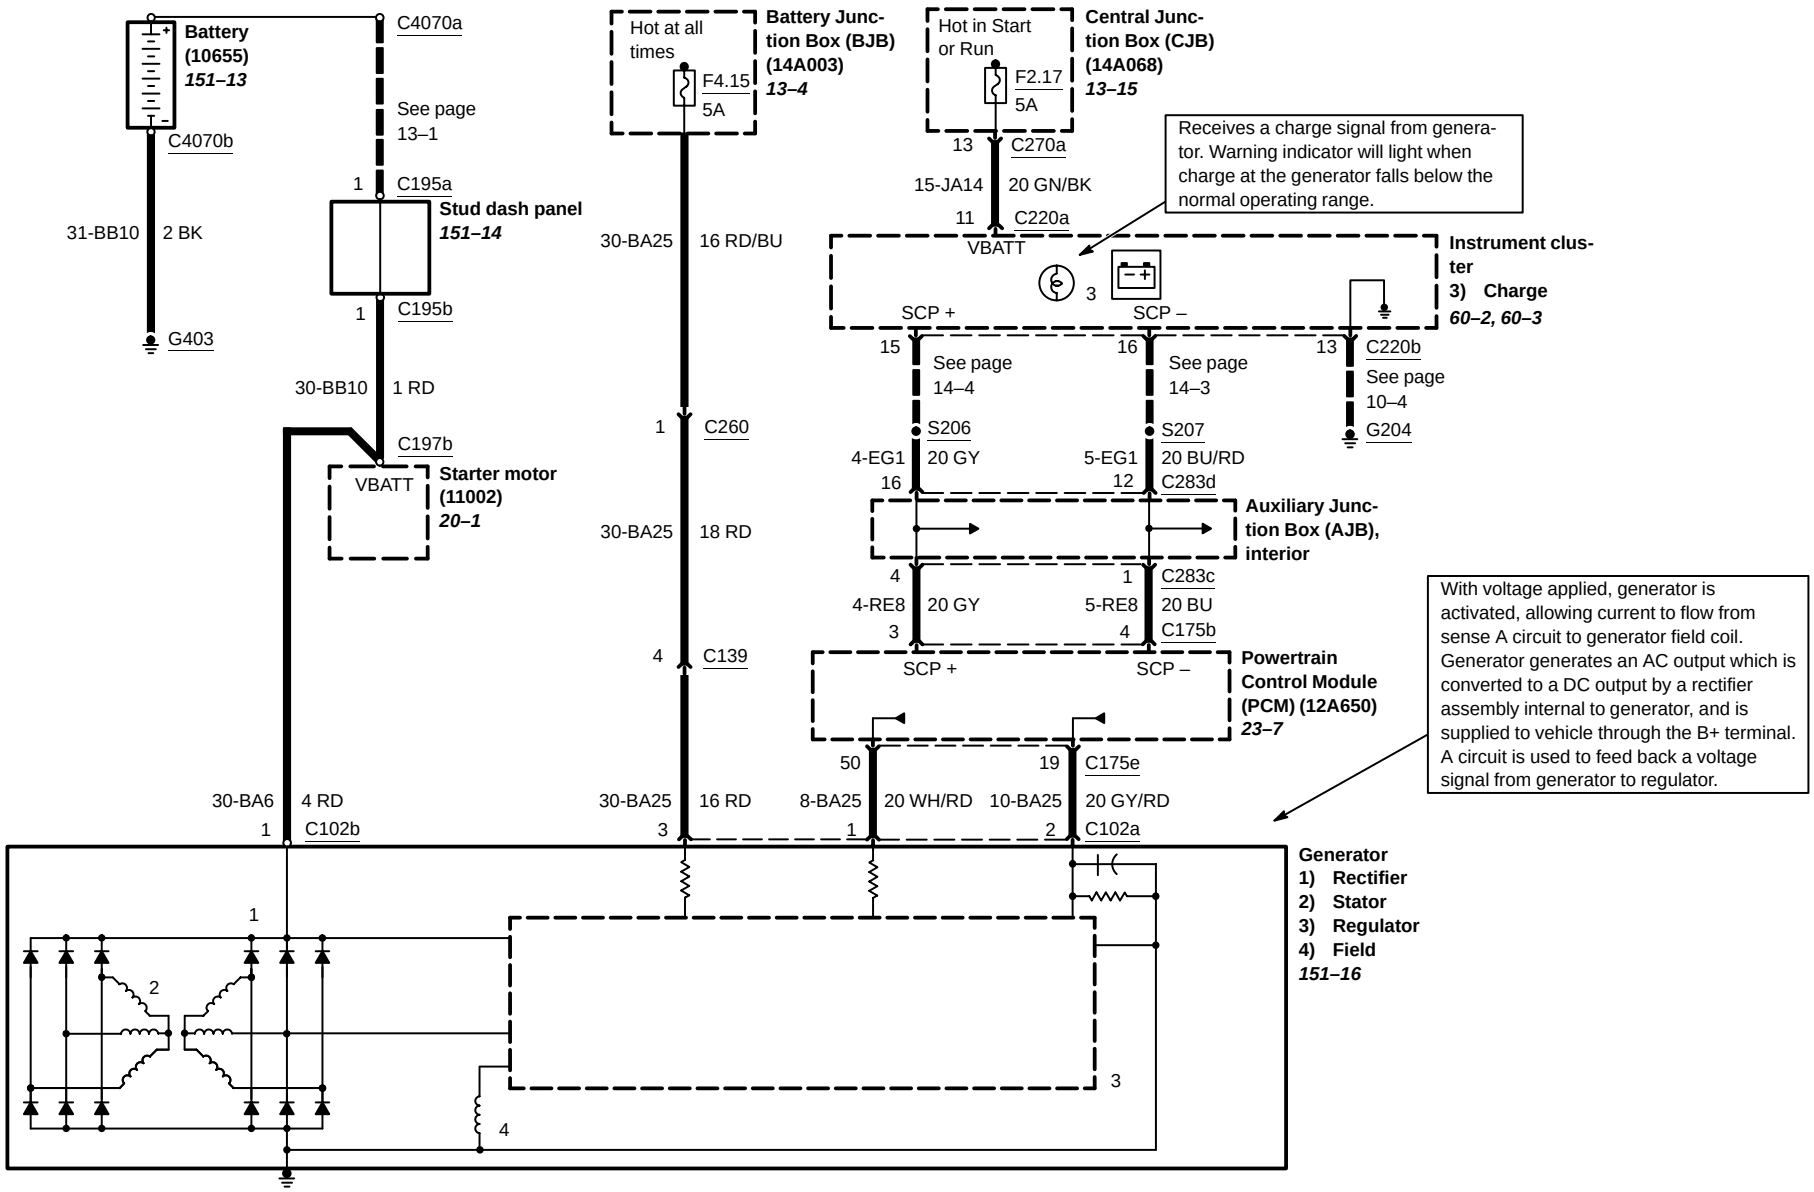
Battery (10655) 151–13
C4070a
See page 13–1
C4070b
1
C195a
Stud dash panel 151–14
31-BB10 2 BK
1
C195b
G403
30-BB10 1 RD
C197b
VBATT
Starter motor (11002) 20–1
Hot at all times
F4.15 5A
Battery Junction Box (BJB) (14A003) 13–4
30-BA25 16 RD/BU
1
C260
30-BA25 18 RD
4
C139
Hot in Start or Run
F2.17 5A
Central Junction Box (CJB) (14A068) 13–15
13
C270a
15-JA14 20 GN/BK
11
C220a
VBATT
Receives a charge signal from generator. Warning indicator will light when charge at the generator falls below the normal operating range.
3
SCP + SCP –
Instrument cluster 3) Charge 60–2, 60–3
15
See page 14–4
16
See page 14–3
13
C220b
See page 10–4
G204
S206
S207
4-EG1 20 GY
5-EG1 20 BU/RD
16
12
C283d
Auxiliary Junction Box (AJB), interior
4
1
C283c
4-RE8 20 GY
5-RE8 20 BU
3
4
C175b
SCP + SCP –
Powertrain Control Module (PCM) (12A650) 23–7
50
19
C175e
30-BA6 4 RD
1
C102b
30-BA25 16 RD
3
8-BA25 20 WH/RD
1
10-BA25 20 GY/RD
2
C102a
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generator generates an AC output which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. A circuit is used to feed back a voltage signal from generator to regulator.
Generator
1) Rectifier
2) Stator
3) Regulator
4) Field
151–16
1
2
3
4