C3076

14B079

Video cassette player

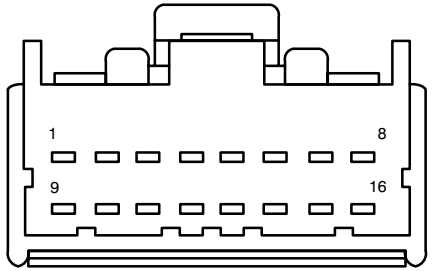

F16119

Pin	Circuit	Circuit function
1	1564 (RD)	Accessory delay
2	–	not used
3	–	not used
4	1802 (DG)	audio Switch illumination
5	1540 (DG)	VCP IR data +
6	99 (LG/BK)	Audio signal positive, Left
7	891 (RD/BK)	Audio signal positive, Right
8	47 (LB/WH)	VCP video +
9	–	not used
10	–	not used
11	–	not used
12	1541 (DB)	VCP IR data –
13	694 (BK/LG)	Ground
14	1402 (RD/WH)	Audio signal negative, Drain wire, Right
15	76 (LG/WH)	Audio signal negative, Drain wire, Left
16	48	VCP video Drain wire

C3077a

14B079

Rear Seat Entertainment (RSE) module

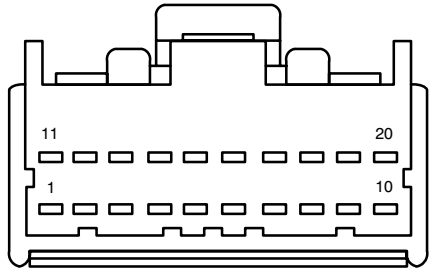

F20060

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	47 (LB/WH)	VCP video + input
7	99 (LG/BK)	Audio signal positive, Left
8	891 (RD/BK)	Audio signal positive, Right
9	1807 (WH)	VCP video + output
10	1802 (DG)	Rear Seat Entertainment (RSE) module
11	1559 (RD)	Audio signal positive, Left
12	1560 (WH)	Audio signal negative, Left
13	1561 (OG)	Audio signal positive, Right
14	1562 (YE)	Audio signal negative, Right
15	48	audio Drain wire
16	48	VCP Drain wire
17	76 (LG/WH)	Audio signal negative, Drain wire, Left
18	1402 (RD/WH)	Audio signal negative, Drain wire, Right
19	1808 (BK)	VCP, video – output
20	48	Drain wire